


SSL UF8

User Guide

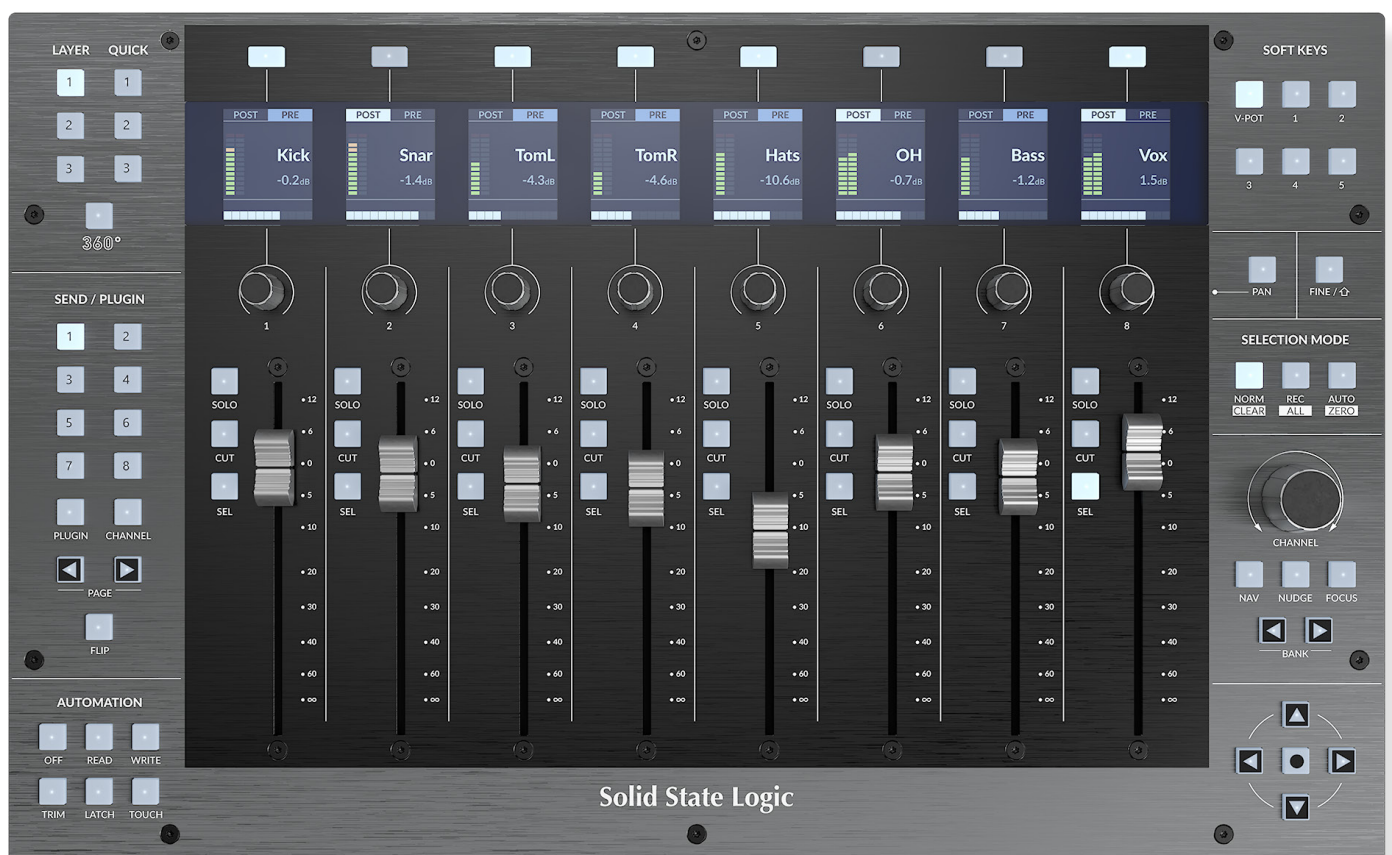

Solid State Logic

O X F O R D • E N G L A N D

Visit SSL at:
www.solidstatelogic.com

© Solid State Logic

All rights reserved under International and Pan-American Copyright Conventions.

SSL® and Solid State Logic® are registered trademarks of Solid State Logic.

SSL UF8™ is a trademark of Solid State Logic.

All other product names and trademarks are the property of their respective owners and are hereby acknowledged.

Pro Tools® is a registered trademark of Avid®.

Live™ is a trademark of Ableton® AG.

Logic Pro® and Logic® are registered trademarks of Apple® Inc.

Studio Pro/One® is a registered trademark of Presonus® Audio Electronics Inc.

Cubase™ and Nuendo™ are trademarks of Steinberg® Media Technologies GmbH.

LUNA™ is a trademark of Universal Audio® Inc.

Pyramix™ is a trademark of Merging Technologies® SA.

Mixbus™ is a trademark of Harrison Audio® LLC.

REAPER™ is a trademark of Cockos® Inc.

Mackie® is a registered trademark of LOUD Technologies® Inc.

BOSS® is a registered trademark of Roland® Corporation.

Bitwig Studio® is a registered trademark of Bitwig GmbH.

Digital Performer® is a registered trademark of MOTU Incorporated.

FL Studio® is a registered trademark of Image Line NV.

Samplitude®/Sequoia™ are registered trademarks/trademarks of MAGIX Software GmbH.

No part of this publication may be reproduced in any form or by any means, whether mechanical or electronic, without the written permission of Solid State Logic, Begbroke, OX5 1RU, England.

As research and development is a continual process, Solid State Logic reserves the right to change the features and specifications described herein without notice or obligation.

Solid State Logic cannot be held responsible for any loss or damage arising directly or indirectly from any error or omission in this manual.

PLEASE READ ALL INSTRUCTIONS, PAY SPECIAL HEED TO SAFETY WARNINGS.

E&OE

Revision 12.1 - September 2026

Updated for SSL 360 v2.1

Refined Logic Pro OSC setup pages

Table of Contents

Overview	6
What is SSL UF8?	6
Features	6
Using This User Guide Effectively	6
Safety Notices	6
Get-Started	7
Unpacking	7
Fitting The Stands (Optional)	7
Rack Mount Kit	8
UF8 Physical Specification	8
Detailed Dimensions	9
Connecting Your UF8 Hardware	10
Downloading SSL 360° Software	11
Installing SSL 360° Software	11
System Requirements	11
Keyboard Identify (Mac Only)	12
Registering Your UF8	13
UF8 YouTube Tutorials	13
UF8 Hardware Layout	14
Front Panel	14
Connector Panel	17
SSL 360° Software Overview	18
Overview & Home Page	18
UF8 Page	22
Control Setup Page	20
DAW Communication	25
SSL V-MIDI Ports	25
DAW Protocols	25
Pro Tools with UF8 - Tutorial	26
SSL 360° Setup	26
Pro Tools Setup	26
LCD Layout	27
Tutorial	28
Logic with UF8 - Tutorial	38
SSL 360° Setup	38
Logic Setup	38
LCD Layout	40
Tutorial	41
Cubase/Nuendo with UF8 - Tutorial	50
SSL 360° Setup	50
Cubase Setup	50
LCD Layout	52
Tutorial	53
Ableton Live with UF8 - Tutorial	63
SSL 360° Setup	63

Live Setup	63
LCD Layout	64
Tutorial	65
Studio Pro/One with UF8 - Tutorial	72
SSL 360° Setup	72
Studio Pro/One Setup	72
LCD Layout	74
Tutorial	75
LUNA with UF8 - Tutorial	87
SSL 360° Setup	87
LUNA Setup	87
LCD Layout	88
Tutorial	89
Pyramix with UF8 - Tutorial	95
SSL 360° Setup	95
Pyramix Setup	95
LCD Layout	97
Tutorial	98
Mixbus with UF8 - Tutorial	105
SSL 360° Setup	105
Mixbus Setup	105
LCD Layout	106
Tutorial	107
REAPER with UF8 - Tutorial	114
SSL 360° Setup	114
REAPER Setup	114
LCD Layout	115
Tutorial	116
Bitwig Studio with UF8 - Tutorial	123
SSL 360° Setup	123
Bitwig Setup	123
LCD Layout	124
Tutorial	125
Digital Performer with UF8 - Tutorial	134
SSL 360° Setup	134
Digital Performer Setup	134
LCD Layout	135
Tutorial	136
FL Studio with UF8 - Tutorial	144
SSL 360° Setup	144
FL Studio Setup	144
LCD Layout	145
Tutorial	146
Samplitude/Sequoia with UF8 - Tutorial	154
SSL 360° Setup	154
Samplitude/Sequoia Setup	154
LCD Layout	155

Tutorial	156
MIDI CC - Tutorial	163
SSL 360° Setup	163
MIDI CC Layer & V-MIDI Ports	163
DAW & Virtual Instrument Setup	164
External Device Setup	164
SSL 360° MIDI CC Layer Setup	165
Program Changes	166
LCD Layout	167
Hardware Layout	168
Cursor Keys - Transport	169
Plug-in Mixer - Tutorial	170
SSL 360° Setup	170
Plug-in Mixer Setup	170
Tutorial	172
Accessing Channel Strip Mode, Bus Compressor Mode, Metering	173
LCD Layout - Channel Strip Mode	174
LCD Layout - Bus Compressor Mode	175
Logic Pro Enhanced DAW Control Integration	176
DAW Control	178
Plug-in/DAW (VST3 DAWs and Logic Pro)	178
Pan	178
Sends 1-8 Level Control (VST3 DAWs and Logic Pro)	179
Sends 1-8 On/Off (Cubase/Nuendo & Logic Pro only)	179
General Information Regarding Send Control	179
Hybrid Mode - Tutorial	183
Cursor Keys - Transport	184
Channel Encoder	184
Automation Keys	184
Using the DAW Automation Buttons in Hybrid Mode	185
UF8 LCD Messages	186
SSL 360° Software Messages	187
SSL Support - FAQs, Ask a Question and Compatibility	188
Safety Notices	189

Overview

What is SSL UF8?

SSL UF8 is a scalable hardware control surface offering the essential DAW control you need, with room to add USB keyboard shortcut sequences to suit your own workflow. UF8 features 8 high-quality, motorised touch-sensitive faders accompanied by 8 endless rotary encoders and 8 high-quality colour LCD TFTs for clear visual feedback at all times. A large multi-purpose master encoder allows navigation of DAW sessions, track scrolling and mouse wheel emulation to give hands-on control of plug-ins. Signature SSL workflow and ergonomics developed from a 40+ year legacy in production innovation have never been more accessible.

Features

- 8 x 100 mm high quality, touch-sensitive motorised faders.
- 8 x rotary endless rotary encoders with push.
- 8 x high-resolution colour displays.
- Backlit RGB soft-feel rubber buttons.
- All metal enclosure, finished with a brushed anodised top plate.
- Expandable - Connect up to 4 UF8s to create a 32-channel control surface.
- Works out of the box with the following DAWs: Pro Tools, Logic, Cubase, Nuendo, Studio Pro/One, Ableton Live, LUNA, Pyramix, Mixbus, REAPER, Bitwig Studio, Digital Performer, FL Studio and Samplitude/Sequoia.
- MIDI CC Layer - for controlling virtual instruments, sample libraries and other MIDI-controllable devices.
- Up to 3 different DAWs can be connected simultaneously and switched between using the Layer keys.
- DAW communication via HUI and bolstered by PTSL for Pro Tools. SSL software provides further workflow enhancements with the addition of features such as Channel and Plug-in Modes.
- DAW communication via MCP/MCU for Logic, Cubase, Nuendo, Ableton Live, Studio Pro/One, LUNA, Pyramix, Mixbus, REAPER, Bitwig Studio, Digital Performer, FL Studio and Samplitude/Sequoia.
- Plug-in Mixer Layer for control of 360-enabled plug-ins and 3rd party plug-ins hosted in 360 Link & 360 Link Bus Compressor.
- DAW communication via VST3 extensions/PTSL/OSC when configuring UF8 to 'Plug-in Mixer'. Requires SSL 360°-enabled plug-ins.
- A large multi-purpose notched encoder allows for DAW timeline navigation, track banking and mouse wheel emulation for even more hands-on control.
- Customisable user keys ready to assign your favourite DAW commands or keyboard shortcuts.
- 2 x assignable foot-switch inputs.
- Included stands allow for 6 different elevation angles. Or, use without stands.
- Optional 19" 6U rackmount kit available.
- Connects to your computer via hi-speed USB – no need to deal with computer networks or ethernet cables.
- Powered by the SSL 360° Software application.


Using This User Guide Effectively

This User Guide will take you through the process of getting up-and-running with your UF8 control surface. The **Get-Started** section will guide you through unboxing, attaching the stands and installing SSL 360°, the intelligent software command centre that drives UF8. This section also provides information on registering your UF8 surface, which will allow you access to any additional software that your UF8 purchase provides. The **Hardware Layout** section provides an overview of the UF8 surface, to help familiarise yourself with the names of controls and how they are laid out. **SSL 360° Software Overview** provides detail on the SSL 360° software and what functionality you can expect from it. **DAW Communication** provides the essential technical information on how UF8 (via SSL 360°) communicates with your DAW and last but not least, the **DAW Tutorials** sections provide you with the configuration steps you need to take inside your DAW to connect UF8, whilst also guiding you through how UF8 interacts with your chosen DAW.


Get-Started

Unpacking

The unit has been carefully packed and inside the box you will find the following items in addition to your UF8 control surface:

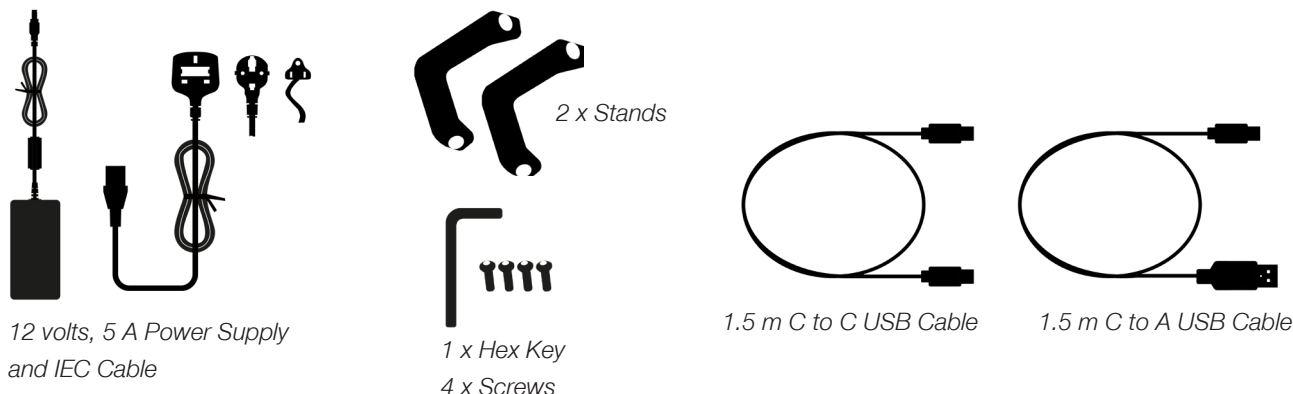

Fitting The Stands (Optional)

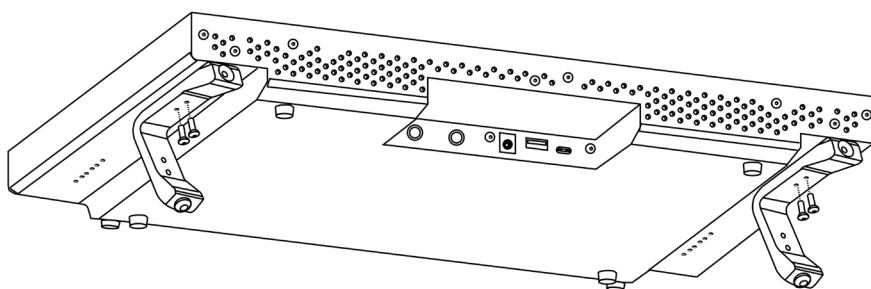

UF8 has been designed to be used with or without the included screw-in stands, depending on your preference. Attaching the included screw-in stands has the added benefit of angling the unit towards you. Three different fixing positions (the holes are arranged in pairs) allow you to choose an angle that is best for your setup. Use 2 screws per stand. **Please be careful not to overtighten to avoid stripping the screw threads.** For those with a torque measuring device, tighten to 0.5 Nm.

Additional Elevation Angles

If you need a steeper angle of elevation, you can rotate the stands and fix them to the chassis using the shorter side. This gives you three additional angle options to choose from.

1. Unscrew the rubber feet and move to the other end

2. Rotate the stands so that the short side fixes to the chassis




Rack Mount Kit

A 19" in rack mount kit is available for purchase separately should you wish to rack mount your UF8. When rack-mounted, UF8 occupies 6U of space.

Attaching the rack mount ears

The kit contains a set of metal racking ears and 12 screws, which should be secured to the chassis using the lower 3 screw holes at the top and bottom of each side (6 in total per side), as pictured below. **Please be careful not to over-tighten to avoid stripping the screw threads.**

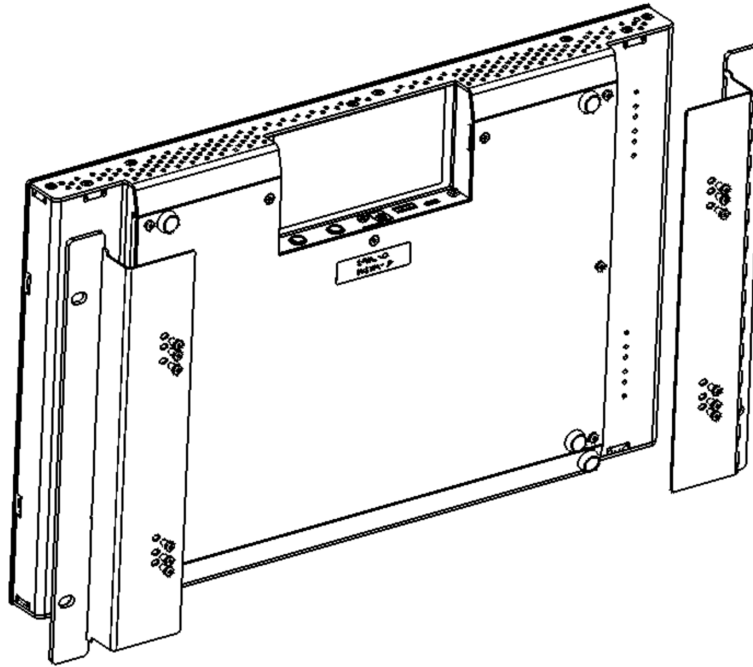

UF8 Physical Specification

Dimensions


17" x 10.5" x 2.4" / 431 x 266 x 62.7 mm (Width x Depth X Height)

Weight

Unboxed - 2.9 kg / 6.4 lbs


Boxed - 5.0 kg / 11.02 lbs

Detailed Dimensions

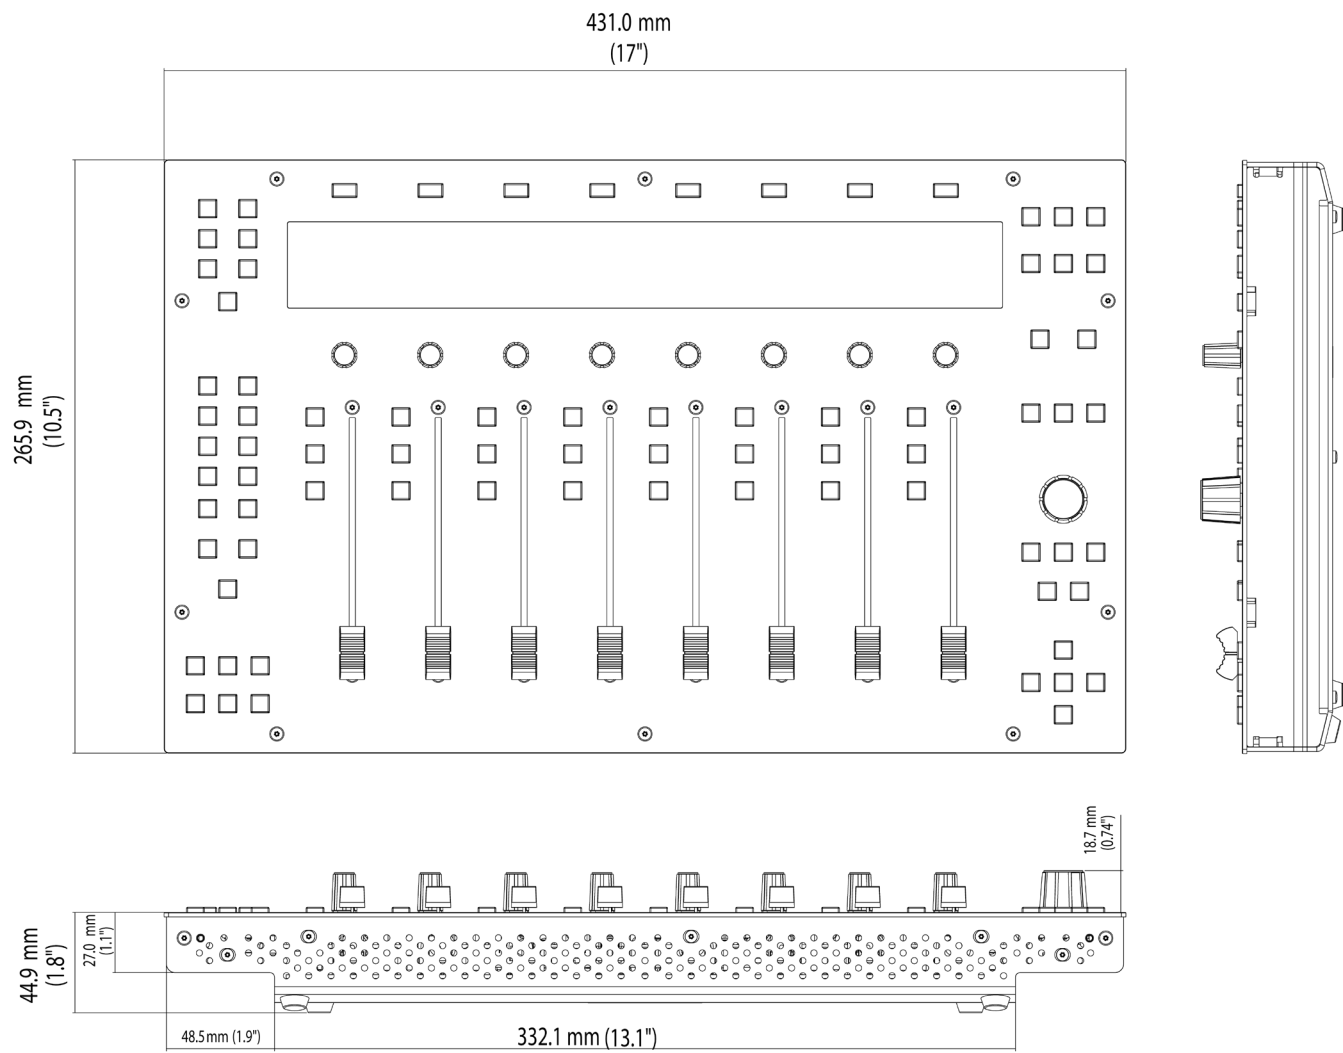

Connecting Your UF8 Hardware

1. Connect the included power supply to the **DC** socket on the connector panel.
2. Connect one of the included USB cables from your computer to the **USB** socket.

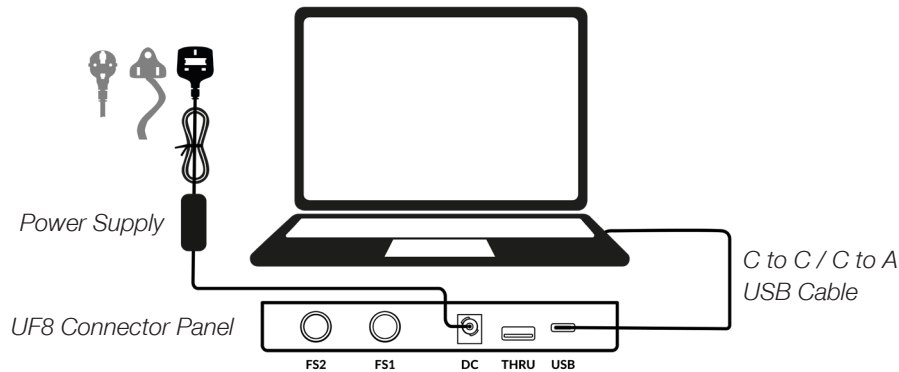


USB Cables

Please use one of the provided USB cables ('C' to 'C' or 'C' to 'A') to connect UF8 to your computer. The type of USB port you have available on your computer will determine which of the two included cables you should use. Newer computers may have 'C' ports, whereas older computers may have 'A'. Please ensure that you are connecting to the port labelled **USB** on UF8, which is a 'C' type connection.

Connecting Multiple UF8s

If you are using more than one UF8, you can use the **THRU** port (USB 'A' type) to link communication across multiple units. This means that only one USB port is required at your computer.

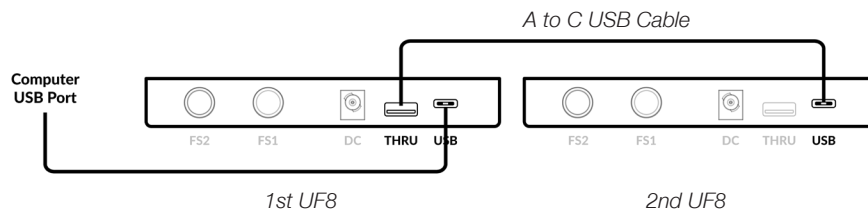

Theoretically, you can chain 4 UF8s together in the way described above. However, by doing so you may exceed the number of hub tiers permitted by your PC/Mac computer. As such, you may need to connect your 3rd/4th UF8 unit directly to another USB port on your computer. The same applies regarding the use of USB hubs; the 3rd/4th UF8(s) may need to be plugged directly into a different USB port on your computer.

Tip: The **THRU** port can also be used to plug in USB dongles that are often required for DAW software.

How Many UF8s Can I Use?

A maximum of 4 UF8s can be used to create a 32-channel control surface.


Downloading SSL 360° Software

UF8 requires the SSL 360° software to be installed on your computer in order to function. SSL 360° is the brains behind your UF8 control surface. Once you have connected your UF8 hardware to your computer as described on the previous page, please download SSL 360° from the SSL website.




1. Go to www.solidstatelogic.com/support/downloads
2. Select **UF8** from Products drop-down list.
3. Download the SSL 360° software for your Mac or PC.

Installing SSL 360° Software

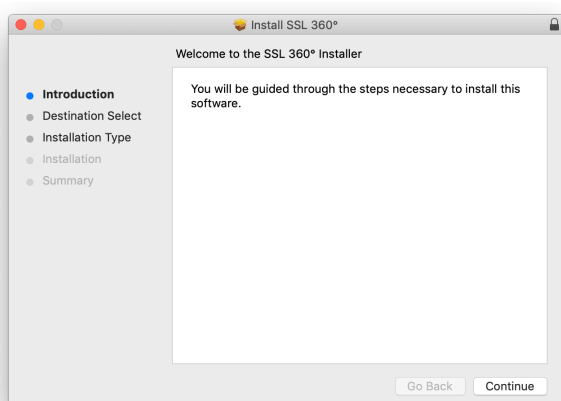

Mac

1. Locate the downloaded SSL 360°.dmg on your computer.
2. Double-click to open the .dmg.
3. Double-click to run the SSL 360°.pkg.
4. Proceed with the installation, following the on-screen instructions.

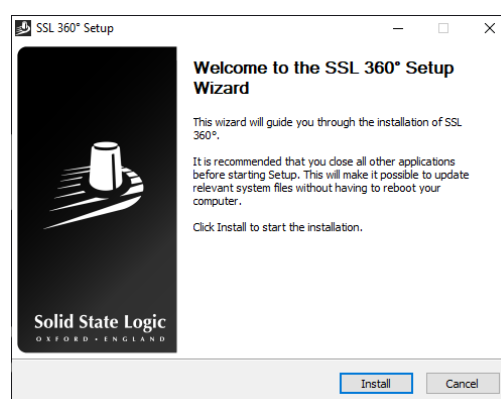

Windows

1. Locate the downloaded SSL 360°.exe on your computer.
2. Double-click to run the SSL 360°.exe.
3. Proceed with the installation, following the on-screen instructions.

System Requirements


Computer operating systems and hardware are constantly changing. Please search for '*UF8 Compatibility*' in our online FAQs to check if your system is currently supported.

Keyboard Identify (Mac Only)


One of the special features of UF8 is its ability to trigger keyboard command sequences of your favourite DAW shortcuts. These are assigned using the SSL 360° software and this is covered later in this User Guide.




When you first plug in your UF8, Mac OS will present the above 'Keyboard Setup Assistant' window because Mac OS wants you to identify which region (Europe, America or Japan) this, as yet unidentified, keyboard is from. **If you connected your UF8 to your computer before installing SSL 360° software, you need to close this setup assistant because SSL 360° needs to be installed on your computer in order to continue through this setup process.** To make the Keyboard Setup Assistant appear again once SSL 360° is installed, do the following: Open up Mac's 'System Preferences' > Go to 'Keyboard' > Click 'Change Keyboard Type' (please note, your UF8 must be connected to your computer via a USB cable) and click 'Continue'.

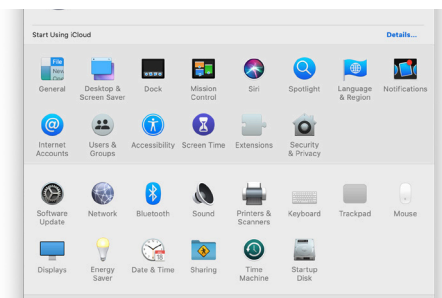

STEP 1: Go to System Preferences and click 'Keyboard'.

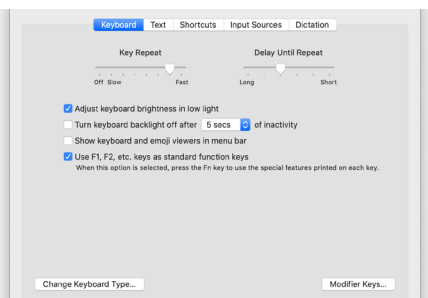

STEP 2: Click 'Change Keyboard Type'

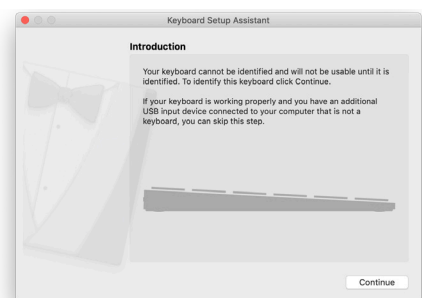

STEP 3: Click 'Continue'.

- When presented with 'Identifying Your Keyboard' and you are being asked to 'Press the key immediately to the right of the Shift Key', at this point, press and hold the **360°** key on UF8 for 3 seconds until the key lights orange.
- This will move you through to the final step of the process, where you can choose the appropriate option (Europe, America or Japan) for your region and then click 'Done'.



STEP 4: When presented with the message 'Press the key immediately to the right of the Shift Key', press and hold the 360° key on UF8 for 3 seconds until it lights orange.



STEP 5: Select your region and click 'Done'.

Registering Your UF8

Register your UF8 for the best possible experience and to gain access to any additional software in your SSL user account.

<http://www.solidstatelogic.com/get-started>



To register your product, head to www.solidstatelogic.com/get-started and follow the on-screen instructions. During the registration process, you'll need to input the serial number of your unit. **This can be found on the label on the base of your unit.**

**XX-XXXXXX-XXXXXXXXXXXXX
SERIAL NUMBER**

Please note: Xs are used to demonstrate the format of the serial number. The actual serial number will contain a mixture of letters and numbers.

Once you have completed registration and logged-in, all of your software content will be available in your user area. You can return to this area at any time by logging back into your SSL account at www.solidstatelogic.com/login should you wish to download the software another time.

UF8 YouTube Tutorials


The SSL YouTube channel hosts in-depth tutorials on how to setup and use UF8 with your DAW.



UF8 Hardware Layout

Front Panel

This section will help familiarise yourself with the front panel controls of the UF8 surface. It is intended to be an overview, rather than a comprehensive explanation of each function or mode. For more detail on the integration of features with each DAW, please refer to the DAW Tutorials sections of this User Guide.

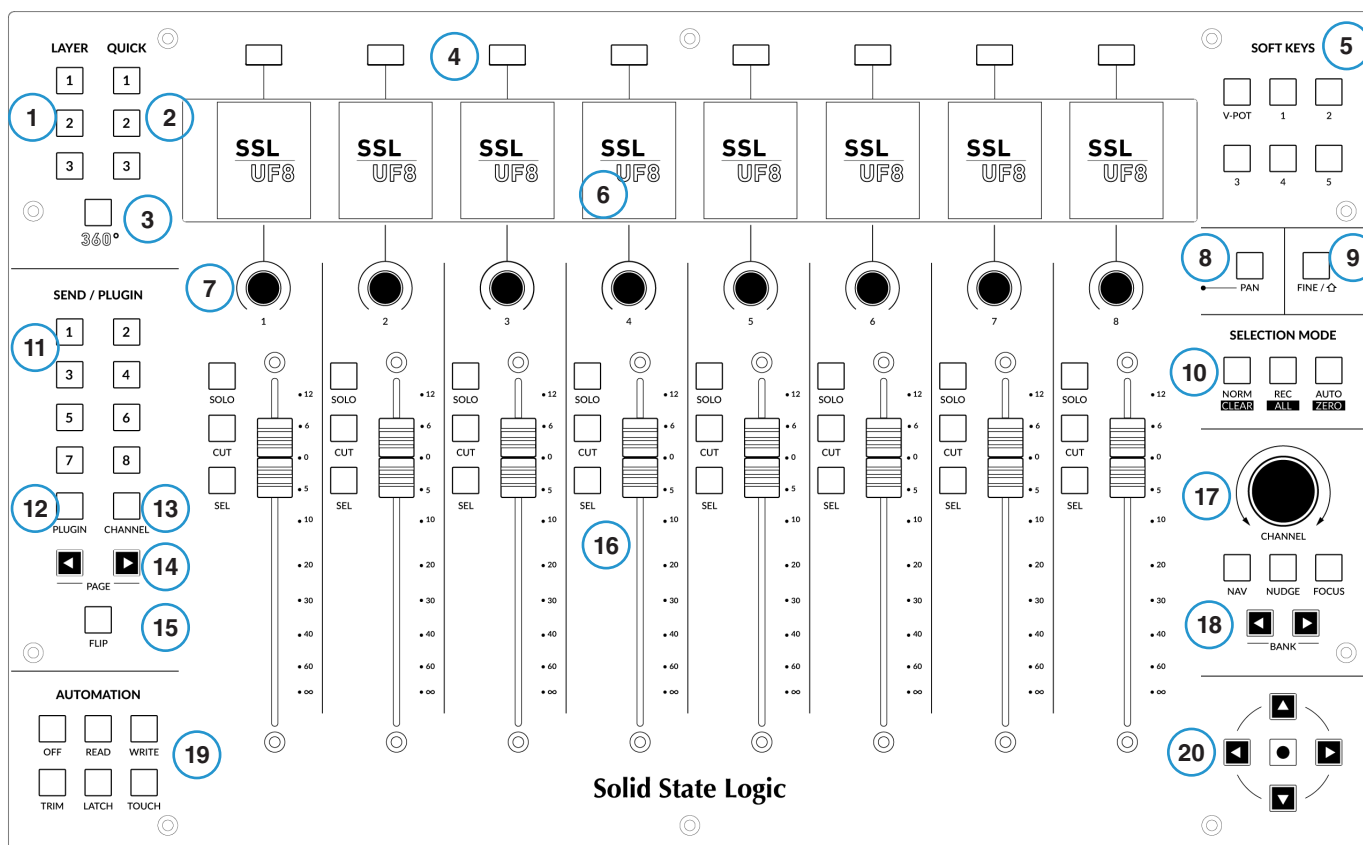

1 - LAYER Keys 1-3

Control of up to 3 DAWs can be configured and switched between using these keys on the UF8 surface.

2 - QUICK Keys 1-3

User-assignable keys that can be mapped to any of the available HUI/MCU commands in SSL 360°, or alternatively any keyboard shortcut sequence of your choosing.

3 - 360° Key

Opens/minimises the SSL 360° software on your computer screen.

4 - 8 x Soft Keys

A line of 8 soft keys allow access to various **V-POT** parameters or, up to 40 user-assignable keys per UF8. The label for the function of each key is displayed in the top section of the LCD below.

5- SOFT KEYS

Determines the operating mode of the 8 top-row soft keys. Keys labelled **1-5** provide access to User Banks 1-5. **V-POT** puts the top-row soft keys into **V-POT** mode. See DAW tutorial sections for more information.

6 - 8 x colour LCD TFTs provide visual feedback including metering, track names, **V-POT** readouts, track record-arm states and more.

7 - 8 x **V-POTS**

"V-Pot" is short for "virtual pot" and these are used to control various DAW parameters including Pan position, Send levels and Plug-in parameters.

8 - **PAN** Key

Assigns the DAW's Pan controls to the V-Pots.

9- **FINE / SHIFT** Key

For most DAWs, this key either engages a **FINE** mode of control for the parameter currently assigned to the V-Pots, or it acts as a Shift Key. The function of this key varies between DAWs.

10 - **SELECTION MODE** Keys

Determines the behaviour of the **SEL** (Select) keys. These Selection Mode keys also perform secondary functions in Pro Tools and Logic when pressed and held, and are used in combination with the **SOLO**, **CUT** and **SEL** keys.

11 - **SEND / PLUGIN 1-8** Keys

The behaviour of these keys varies for each DAW. Please see the relevant DAW Tutorial section for more information.

12 - **PLUGIN** Key

The behaviour of the **PLUGIN** key varies for each DAW. Please see the relevant DAW Tutorial section for more information.

13 - **CHANNEL** Key

The behaviour of the **CHANNEL** key varies for each DAW. Please see the relevant DAW Tutorial section for more information.

14 - **PAGE < and >** Keys

The behaviour of the **PAGE < >** keys varies for each DAW. Please see the relevant DAW Tutorial section for more information.

15 - **FLIP** Key

FLIP is used to assign the current V-Pot parameter to the fader and can be used for tasks such as riding send levels.

16 - **SOLO, CUT, SEL** and 100 mm Motorised Faders

The most common controls found in all DAWs. Please note that the function of the **SEL** keys depends on the currently active **SELECTION MODE**.

17 - Large Notched **CHANNEL** Encoder

The large encoder can function in several different modes:

- **Standard Mode** - Push the encoder itself to return to **CHANNEL** mode. Moving the encoder will bank DAW tracks one at a time.
- **NAV** Mode - 'Nav' is short for Navigation. In this mode, the encoder allows you to move the playhead cursor along your DAW timeline.
- **NUDGE** Mode - In Pro Tools, this mode allows you to use the encoder to move selected audio regions by the currently set Nudge value. In all other DAWs, you can assign it to perform nudging if the DAW has an equivalent nudge DAW command or keyboard shortcut. Or, you can assign it to any command of your liking.
- **FOCUS** Mode - This mode turns the operation of the large encoder into a mouse wheel scroll emulation and is great for controlling plug-ins. Simply hover your computer mouse over the desired control and turn the encoder. The sensitivity of this mode will be determined by your computer's mouse scroll sensitivity settings.

18 - **BANK** < > Keys

These keys allow you to bank through the tracks in your DAW, bringing them onto your UF8 control surface(s). Banking works in groups of 8/16/24/32, depending on the DAW and the number of UF8s you have connected.

19 - **AUTOMATION** Keys

These keys provide access to the various automation modes available in each DAW. Please note that when working in Pro Tools, the **SELECTION MODE** must be in **AUTO** before these keys become active.

20 - **Cursor Keys** and **Mode** (Circle) Key


In standard operation, these keys perform various functions including DAW timeline zooming and important tasks such as selection of plug-in slots (Logic only). Refer to the DAW Tutorials section for more information on this.

As of SSL 360° v1.3, these keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the cursor keys and mode key.

How to enter/exit Transport Mode for the Cursor Keys


Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

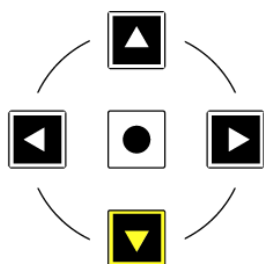

Assignment of Transport Commands

Down arrow is **STOP**
Up arrow is **PLAY**
Left arrow is **REWIND**
Right arrow is **FORWARD**
Circle Key is **RECORD**

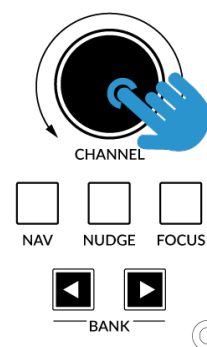


Press and hold the **CHANNEL** encoder to enter/exit Transport Mode

"Nice to meet you, where you been? I could show you incredible things." - Taylor Swift, Blank Space.

Connector Panel

The recessed section hosts UF8's connectors.

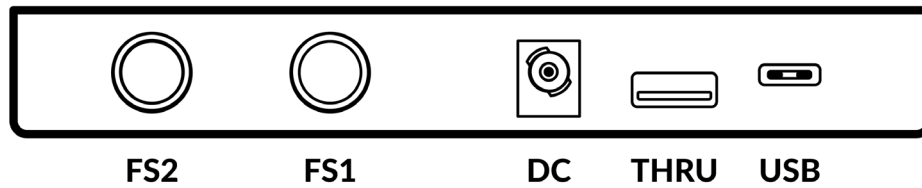

USB - 'C' Type Connector

Connect one of the included USB cables from your computer to the **USB** port on UF8. This handles all of the communication between your DAW and UF8, via the SSL 360° software application.

THRU - 'A' Type Connector

The **THRU** connector can be used to chain multiple UF8s together, without needing to plug each unit into your computer or a hub individually. It can also be used to plug in USB dongles.

DC Connector

Use the included DC Power Supply to provide power for your UF8.

FS1 & FS2 - 1/4" Jack Connectors

These allow for the connection of foot-switches, which can be used to trigger DAW commands or user-assigned keyboard shortcut sequences.


UF8 has been tested with popular foot-switches such as the BOSS FS-6 (other brands are available), whose foot-switch behaviour (or polarity as it is often referred to), is a 'normally closed' switch. In some cases, these foot-switches offer the ability to change the polarity.

Please use a foot-switch designed for '**normally closed**' operation and also, to ensure full compatibility use a **momentary** action foot-switch, or choose a foot-switch that can be set to momentary. This will ensure correct operation with assigned DAW commands.

SSL 360° Software Overview

Overview & Home Page

SSL 360° software is not only the 'brains' behind the UF8 control surface, it is also the command centre from which new versions of software and firmware can be downloaded for your 360° compatible device.

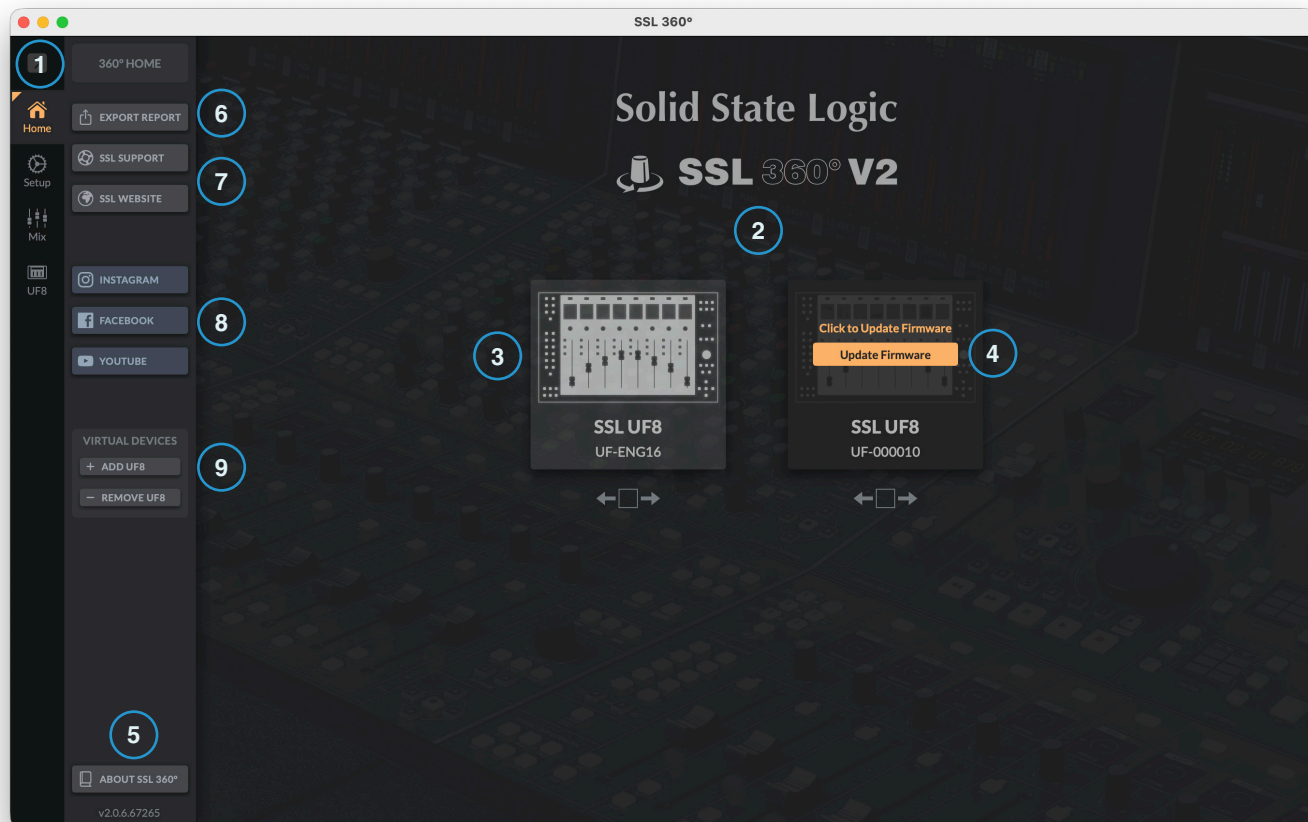

The **HOME** screen:

1 - Menu Toolbar

This toolbar allows you to navigate through the various pages of SSL 360°.

2 - **Update Software** Button

When software updates become available, the **Update Software** button (not shown in the image above) will appear. Click this to download and update your software.

3 - Connected Units

This area shows any 360°-enabled devices connected to your computer, along with their respective serial numbers. **Please allow 10-15 seconds for units to be discovered once they are plugged in.**

Identify & Drag To Re-Order

Usefully, there is a built-in feature that allows you to identify each UF8 control surface and re-order if appropriate. Clicking your mouse down on the image of each connected UF8 will temporarily override that unit's LCDs to display the SSL UF8 logo. If your UF8s are not arranged in the order you want, you can simply drag and drop on-screen to re-arrange.



Clicking the mouse down on a connected UF8 image will cause all the displays on that particular UF8 to momentarily show the SSL UF8 logo, helping you identify each UF8 control surface.

4 - Firmware Updates

If a firmware update becomes available for your UF8, then an **Update Firmware** button will appear. Click on the button to start the firmware update process, being sure to not disconnect the power or USB cable(s) whilst it is in progress.

5 - About SSL 360° & Software Version Number

Clicking this button will open a pop-up window detailing software licensing relating to SSL 360°.

Beneath the button the version number of SSL 360° that is running on your computer is shown. Clicking on the version text will take you to the Release Notes information on the SSL website.

6 - Export Report

Should you encounter any issues with your UF8 or SSL 360° software, you may be asked by a support agent to use the **EXPORT REPORT** feature. This feature generates a text file containing the essential information about your computer system and UF8, alongside technical log files relating to SSL 360° activity, which may help to diagnose any issues. When you click **EXPORT REPORT**, you'll be asked to choose a destination on your computer to export the generated .zip file to, which you can then forward onto the support agent.

7 - SSL Support & Website

These buttons will take you to the SSL Support Site and the SSL website.


8 - SSL Socials

These buttons will take you to the SSL Instagram, Facebook and Youtube pages.

9 - Virtual Devices - Add/Remove Virtual UF8s

Allows you to add or remove virtual UF8s. When adding virtual UF8(s), the UF8 setup page will appear in the left-hand side menu toolbar and allow you to configure your UF8(s), without having a physical unit connected to the computer. Virtual UF8s are also required as part of configuring DAW on the SSL Oracle and Odyssey consoles - see the Oracle/Odyssey User Guides for more detail.

Control Setup Page

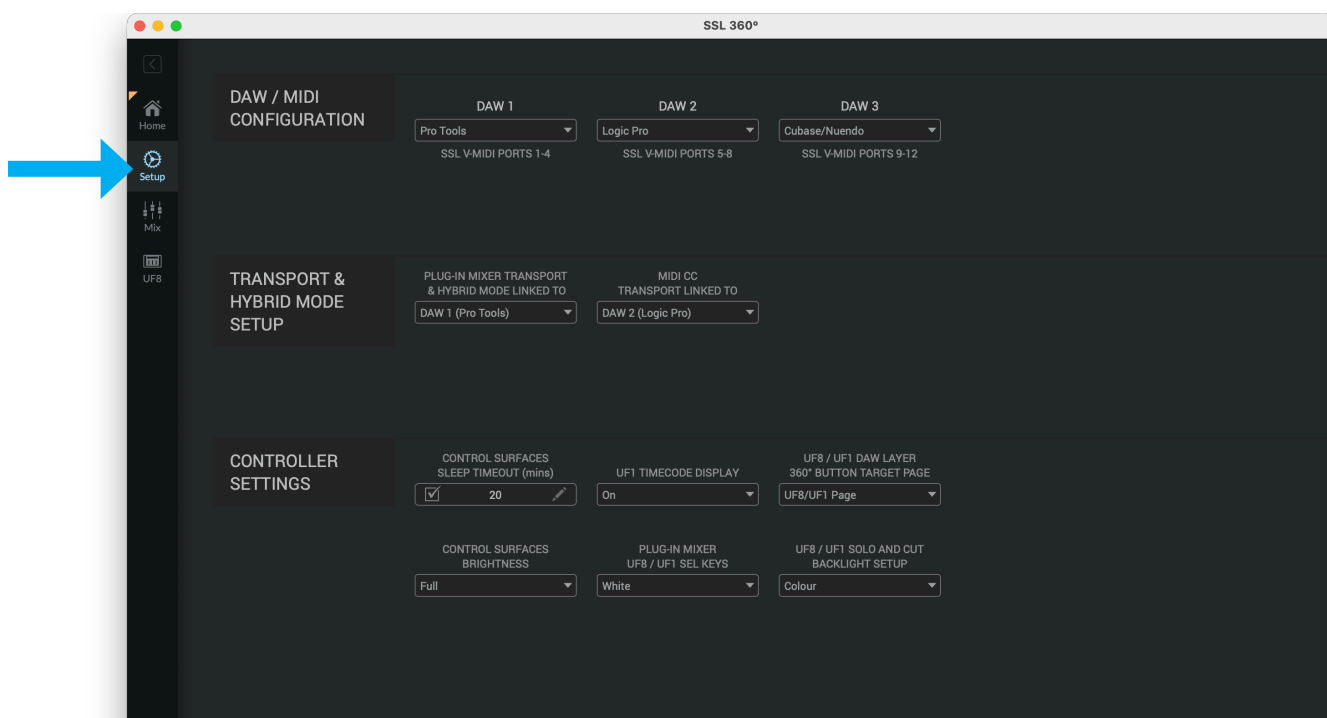



DAW Configuration

The **CONTROL SETUP** page in SSL 360° allows you to nominate up to 3 different DAWs for use with UF8. In the **DAW CONFIGURATION** section, select up to 3 DAWs using the drop-down lists. In the example pictured below, **DAW 1** is set to Pro Tools, **DAW 2** is set to Logic Pro and **DAW 3** is set to Cubase. Once you have nominated the DAW(s) on this page, they will become available for you to assign to each UF8 Layer on the **UF8** Page (covered in more detail on the following pages).

DAW 1 (LAYER 1): SSL V-MIDI Ports 1-4

DAW 2 (LAYER 2): SSL V-MIDI Ports 5-8

DAW 3 (LAYER 3): SSL V-MIDI Ports 9-12

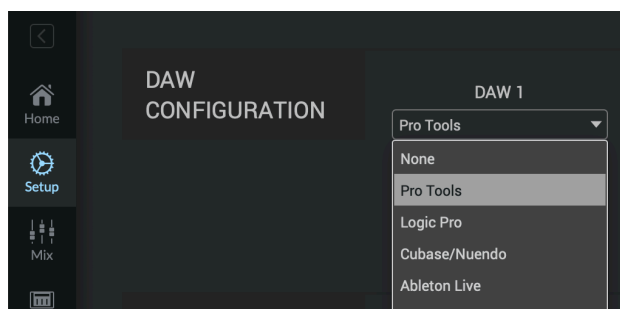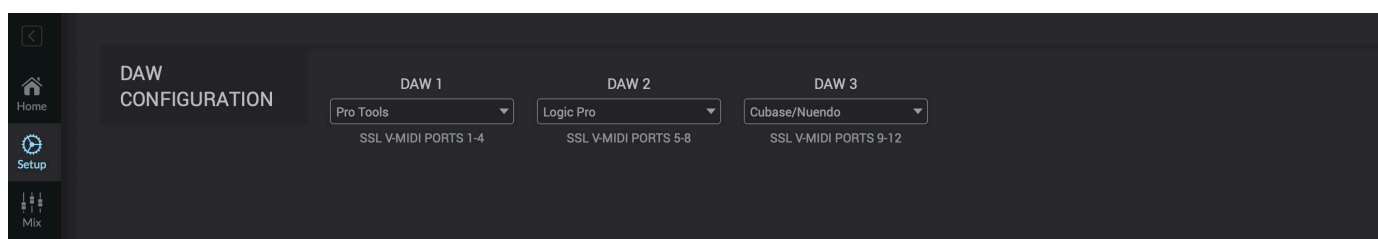


Select your DAW from the drop-down list, starting with DAW 1. If you only use 1 DAW then leave DAW 2 and DAW 3 set to 'None'.

Plug-in Mixer Transport & Hybrid Mode Setup


When a UF8 layer is set to control the SSL 360° **Plug-in Mixer**, you are able to access various HUI/MCU commands and transport functions from your 'regular' DAW layers. Using the Plug-in Mixer in this way is described as 'Hybrid Mode'.

The DAW that drives (the one that is linked to) these buttons on UF8 must be selected from the drop-down list here. You'll be able to choose from any of the 3 DAWs you have nominated in the **DAW CONFIGURATION** section.

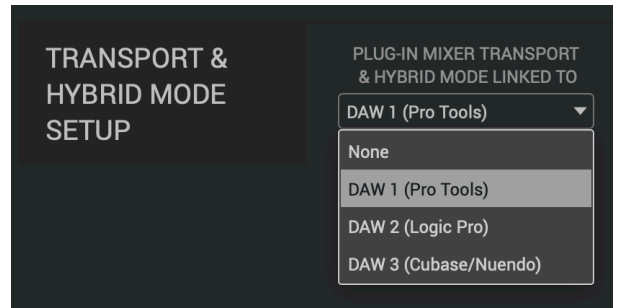

MIDI CC Transport

When a UF8 layer is set to **MIDI CC**, the transport keys on UF8 will operate the DAW's Transport commands. The DAW that drives the transport on UF8 must be selected from the drop-down list here. You can choose from the other 2 DAWs you have nominated in the **DAW CONFIGURATION** section. Note that you cannot choose the MIDI CC 'DAW' itself, as there would be a clash of HUI/MCU MIDI messages.

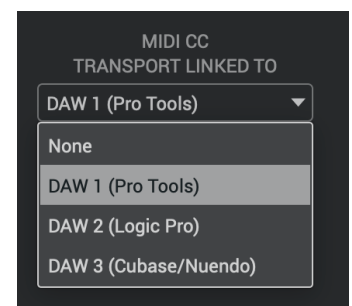

Controller Settings

CONTROL SURFACES SLEEP TIMEOUT (mins)

Determines the length of time before your connected 360° control surfaces go into Sleep mode. Simply type a number between 1 and 99. To force a control surface out of sleep mode, press any button or move any control on the surface itself. You can untick the box to disable Sleep mode.

UF8 / UF1 DAW LAYER 360° BUTTON TARGET PAGE

Choose where the 360° button on UF8/UF1 takes you when pressed. Choose from:

- UF8/UF1 configuration page (default)
- Plug-in Mixer
- SSL 12 Mixer
- SSL 18 Mixer

CONTROL SURFACES BRIGHTNESS

Choose from 5 different brightness options for your connected 360°-enabled controllers (UF8/UF1/UC1). The brightness adjusts both the displays and buttons. This is useful for dark studio environments, where the default 'Full' settings might be too bright.

PLUG-IN MIXER UF8/UF1 SEL KEYS


When UF8 is set to control the Plug-in Mixer Layer, this setting determines if the colour of the **SEL** keys matches the DAW track colour or not (compatible DAWs only).

UF8 / UF1 SOLO AND CUT BACKLIGHT SETUP

Determines if the Solo and Cut Keys light white or Yellow (Solo) and red (Cut) - 'Colour'.

UF8 Page

The UF8 page can be selected from the menu toolbar on the left-hand side and is where you configure UF8 to work with your DAW(s). It is also the place where you can customise any of the user-assignable keys. Customised DAW profiles can then be saved and loaded as .xml files should you need to work on another computer with SSL 360° installed.

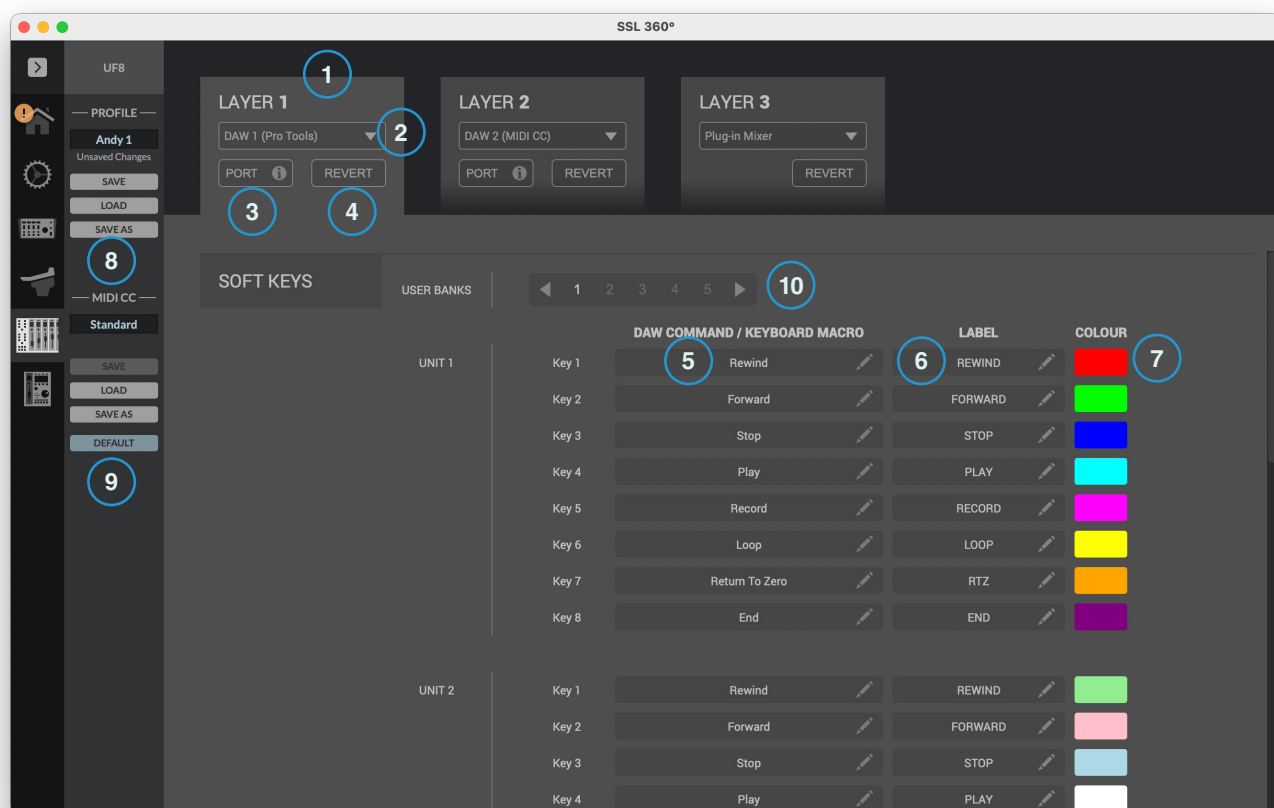

1 - LAYER Tabs

UF8 can be configured for 3 different DAWs simultaneously, with each DAW occupying what is called a 'Layer'. If you only use one DAW, then it is likely you'll only need one layer. If using multiple DAWs, simply click in the **LAYER 2** or **LAYER 3** tabs to configure as appropriate.

2 - DAW / Plug-in Mixer Profile Selection

Use the drop-down list to select your DAW for the chosen layer, or to set a layer to control the Plug-in Mixer. The DAW you can select is determined by the choice you made on the **CONTROL SETUP** page. See the previous page of this User Guide for more information.

3 - PORT INFO

Clicking on **PORT INFO** provides some basic instructions on how to configure your **SSL V-MIDI** ports correctly (useful as a reminder). If you are configuring UF8 for the first time, please refer to the more detailed explanations found at the start of each DAW Tutorial section as the **PORT INFO** does not cover every detail.

4- REVERT

Allows you to revert this Layer to the factory-shipped DAW profile.

5 - DAW Command/Keyboard Shortcut Assignments

Clicking on the pen symbol will allow you to change the assignment of any of the user-assignable keys. See Page 24.

6 - Short Label

Using your computer keyboard, you can type the label that you wish to appear on the UF8 LCD just below the User Key.

7 - Colour

Allows you to customise the colour of the rubber buttons. Clicking on the segment will open a palette of 12 colour options.

8 - Profile Name and **SAVE/LOAD/SAVE AS** Buttons

Allows you to save your customised DAW profiles as an .xml file to your computer or any connected hard-drives. The name of the currently active profile is shown above these buttons. If you have made any changes to the saved profile, then 'Unsaved Changes' will show above the **SAVE** button. The save/load data also includes any re-mapping of MIDI CCs on the control surface, along with the MIDI channel numbers.

9 - MIDI CC Profile Name and **SAVE/LOAD/SAVE AS/DEFAULT** Buttons

Allows you to save/load customised MIDI CC name/labels, colours and MIDI CC values. The name of the currently active profile is shown above these buttons. If you have made any changes to the saved profile, then 'Unsaved Changes' will show above the **SAVE** button. The **DEFAULT** button reverts the MIDI CC name/labels, colours and MIDI CC values to their default (uncustomised) settings.

10 - Soft Key - User Banks

When a Layer is set to a DAW, this determines which bank of soft keys are being edited

When a Layer is set to MIDI CC, this determines which page of MIDI CC functions are being edited.

Built-in Auto-Saving Feature

Changes you make to the software are automatically stored in the background, so you don't need to worry about remembering to save each time you change something in SSL 360° software.


User-Assignable Keys

A number of keys on UF8 are user-assignable and can be changed from their factory shipped assignments. Each UF8 unit has the following user-assignable keys that can have either DAW commands or keyboard shortcut sequences assigned to them:

- 6 x banks of 8 Top-Row Soft Keys: V-POT Bank (MCU DAWs only) and 1-5 Soft Key Banks (all DAWs) in the top-right of UF8.
- 3 x QUICK Keys
- 2 x Foot-switches
- CHANNEL encoder in Nudge Mode (MCU DAWs only)


Factory / User Modes

As of SSL 360° v1.7, even more keys are available to customise. The following sets of keys can be toggled between their factory assignments or user-assignable modes: **SEND/PLUG-IN** section keys, **AUTOMATION** section keys and **PAN & SHIFT** keys.

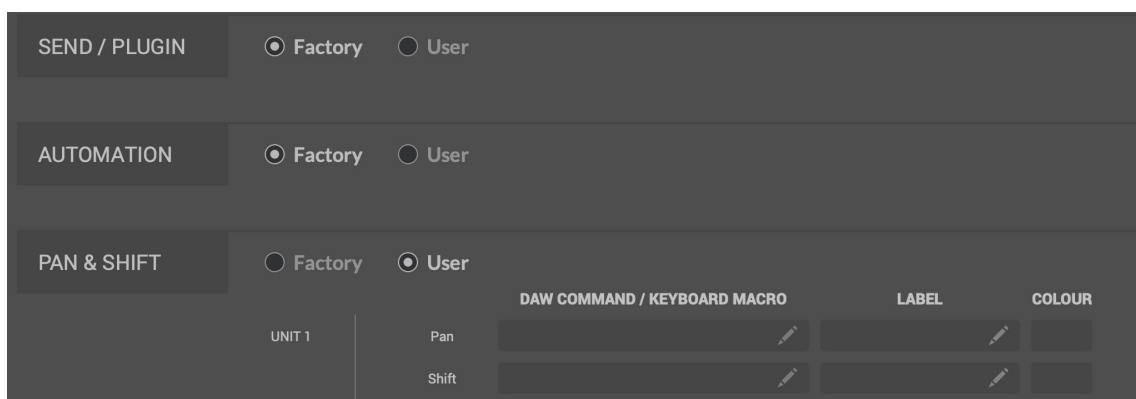


Assigning DAW Commands

Clicking on the pen symbol for any user-assignable key will bring up a pop-up window, from which **DAW command** can be selected using the radio buttons on the left-hand side. To assign a different DAW command to the button in question, simply select one from the list of available HUI/MCU commands. The **SHORT LABEL** text field allows you to enter the label you want to appear on the LCD to accompany this command. The list of available commands depends on the selected DAW.

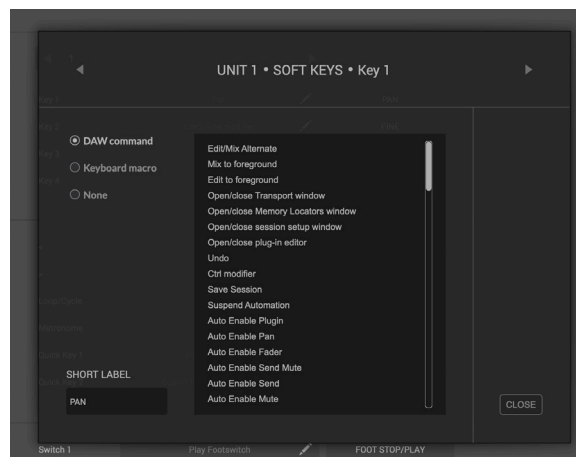

Assigning Keyboard Shortcut Sequences


If you would like to assign a keyboard shortcut or shortcut sequence, select the **Keyboard macro** option. Once selected, simply click your mouse cursor into the area that says '**Type your commands here...**' and use your keyboard to enter the desired key press or sequence. When adding a sequence of multiple commands, you can enter a delay at the start of each line. This can be useful for certain DAW operations where DAW windows or menus are sometimes slow to open - it means you can add delays where necessary to ensure the sequence is properly executed (not executed too quickly). Should you make a mistake and need to start again, you can use the **CLEAR ALL** button. Alternatively, you can use the individual **X** buttons to delete particular lines. The **SHORT LABEL** text field allows you to enter the label you want to appear on the LCD to accompany this keyboard shortcut sequence.

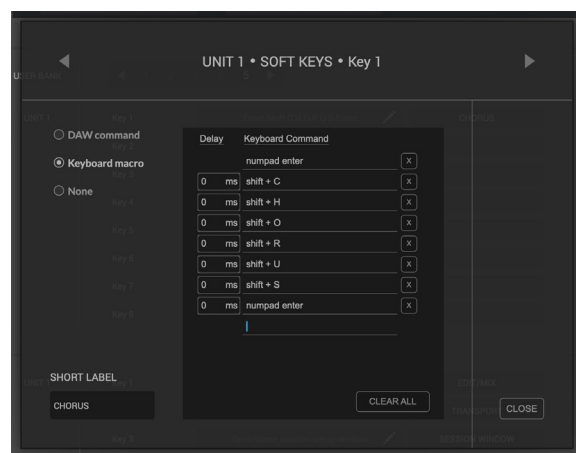

ADVANCED Setup Options


Transport Master

If you are running multiple DAWs that are linked using MIDI timecode, then you can designate 1 of the 3 DAW profile layers to be transport master. This means that the transport keys will always trigger from the DAW assigned as Transport Master, even if your UF8 is controlling a different DAW Layer.



ADVANCED Setup Options - HUI

The following tick-box options are presented for Pro Tools profile selections only:



Always Fine Pan - Enabling this option will automatically change the operation of the V-Pots to **FINE** mode when controlling pans. This will also cause the Pan position to be displayed on the LCD whilst being turned.

Always Fine Sends - Enabling this option will automatically change the operation of the V-Pots to **FINE** mode when controlling Sends. This will also cause the Send level to be displayed on the LCD whilst being turned.

Show Auto State - Enabling this option will display an indication of the Pro Tools automation state (READ/WRITE/TRIM) per channel, just above the DAW metering on the LCD at all times. If TRIM is engaged, the indication will flash between TRIM and READ or TRIM and WRITE.

DAW Communication

SSL V-MIDI Ports

UF8 communicates with your DAW using hi-speed USB MIDI communication via a specialised MIDI driver, installed as part of the SSL 360° software. The driver is presented on your computer system as 'virtual' midi ports called **SSL V-MIDI**. The number of **SSL V-MIDI** Ports you'll need to configure in your DAW depends upon the number of UF8s you have connected. The table below illustrates how the SSL 360° software maps the virtual midi ports to each of your connected UF8s.

DAW LAYER	1st UF8 Unit	2nd UF8 Unit	3rd UF8 Unit	4th UF8 Unit
1	SSL V-MIDI Port 1	SSL V-MIDI Port 2	SSL V-MIDI Port 3	SSL V-MIDI Port 4
2	SSL V-MIDI Port 5	SSL V-MIDI Port 6	SSL V-MIDI Port 7	SSL V-MIDI Port 8
3	SSL V-MIDI Port 9	SSL V-MIDI Port 10	SSL V-MIDI Port 11	SSL V-MIDI Port 12

Each DAW varies slightly in the way in which it requires MIDI controller(s) to be setup and these steps are covered in detail in each of the DAW Tutorials.

DAW Protocols

SSL V-MIDI provides the means of communication between UF8 and the DAW but the protocol (or in other words 'language') that is being spoken depends on the DAW's preferred method of communication with external control surfaces. Furthermore, even DAWs that use the same protocol vary in their application of that protocol (you could draw an analogy to varying dialects found within different geographical regions of the same country). Each DAW Tutorial will aim to guide you through each DAW's implementation of the protocol that they have chosen to implement and how it applies to UF8.

HUI

The HUI (Human User Interface) protocol is the fundamental way in which Pro Tools communicates with UF8. As of SSL 360° v2.1 we have supplemented UF8's integration with Pro Tools via PTSL (Pro Tools Scripting Language). This allows for longer track names and colours to be displayed. In addition, features such as **CHANNEL** and **PLUGIN** mode also provide an enhanced workflow compared to other controllers using HUI.

MCP/MCU

The MCP (Mackie Control Protocol), also commonly referred to as MCU, is the way in which many DAWs such as Logic, Cubase/ Nuendo, Live and Studio Pro/One communicate with UF8. The implementation of MCU differs between DAWs and traditionally, if you had an MCU control surface and were not using Logic, you would have to place a special overlay onto the surface so that the buttons were labelled with the correct functions. With UF8 we have designed the surface in such a way to eliminate the need for any special overlays, in part by using the top-zone of the LCDs to provide labels for the functions hosted on the buttons that reside just above. The functions and labelling of the buttons dynamically change, as appropriate, depending on the currently loaded DAW profile.

Plug-in Mixer & Hybrid Mode


Configuring a UF8 to control the Plug-in Mixer Layer primarily uses our own proprietary protocol (think of it as 'Native SSL 360° control'). This aspect is used to control the SSL 360°-enabled plug-ins in your DAW, via SSL 360°. In addition, a number of DAWs support non-HUI/MCU protocols, such as via VST3 extensions/PTSL/OSC, allowing a different method of controlling various DAW parameters via SSL 360°-enabled plug-ins. As of SSL 360 v2, you are able to supplement Plug-in Mixer Mode, by assigning certain buttons and controls to HUI/MCU commands, keyboard shortcuts and Transport functions from your 'regular' HUI/MCU DAW layers. Using the Plug-in Mixer in this way is described as 'Hybrid Mode'. See the Plug-in Mixer & Hybrid Mode sections of this User Guide.

Pro Tools with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Pro Tools profile on **LAYER 1** of UF8. If you wish to configure Pro Tools on a different layer, please refer to the **DAW Communication** section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected to your computer are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered, then click and drag with your mouse to re-arrange.
3. Go to the **UF8** page and set **LAYER 1** to **Pro Tools** using the drop-down list. If Pro Tools is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

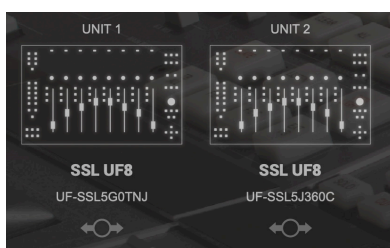

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

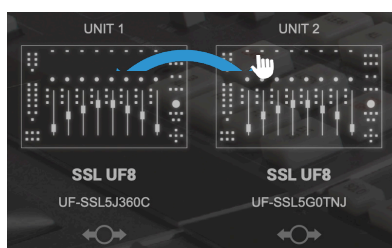


STEP 2 : Click and drag to re-order
units if necessary.

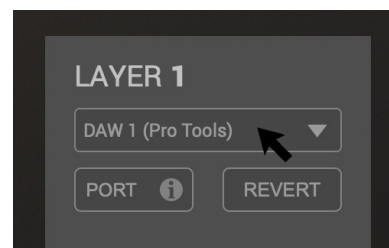


STEP 3 : Select the default Pro Tools
DAW profile from the UF8 page.

Pro Tools Setup

4. Open Pro Tools. Go to the **Setup** Menu > **MIDI** > **MIDI Input Devices...**. In this list, ensure that any **SSL V-MIDI** Ports you need are ticked. e.g. If you have 1 UF8, just tick **SSL V-MIDI Port 1 Source**. If you have 2 UF8s, tick **SSL V-MIDI Port 1 Source** and **SSL V-MIDI Port 2 Source** etc.
5. Go to the **Setup** Menu > **Peripherals** > **MIDI Controllers** tab. Configure each UF8 unit as a **HUI** Type. Set the first unit to **Receive From SSL V-MIDI Port 1 Source** and then **Send To** as **SSL V-MIDI Port 1 Destination**. Repeat for all subsequent UF8s, incrementing the port number each time.

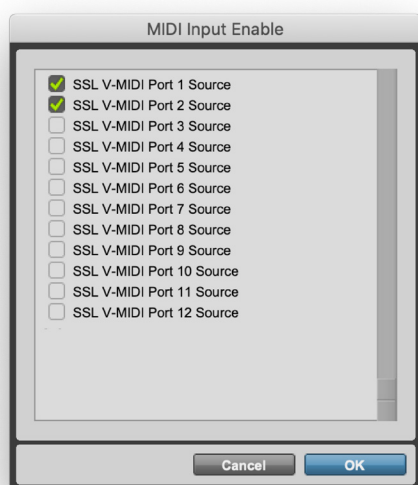


STEP 4 : Enable SSL V-MIDI Port(s) in Pro Tools.

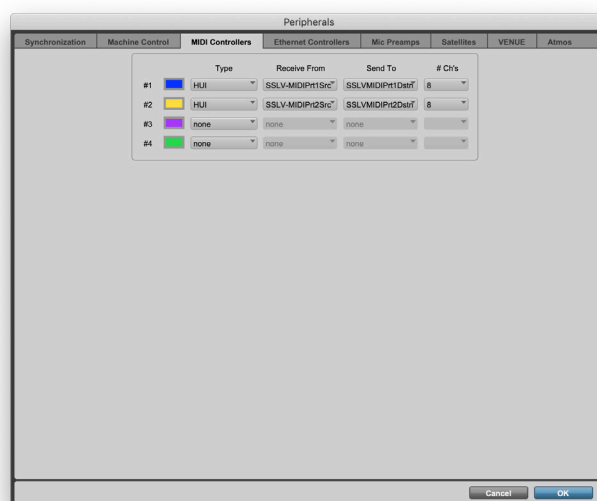

STEP 5 : Setup each UF8 as a HUI Controller, incrementing
the SSL V-MIDI port number for each additional HUI.

LCD Layout

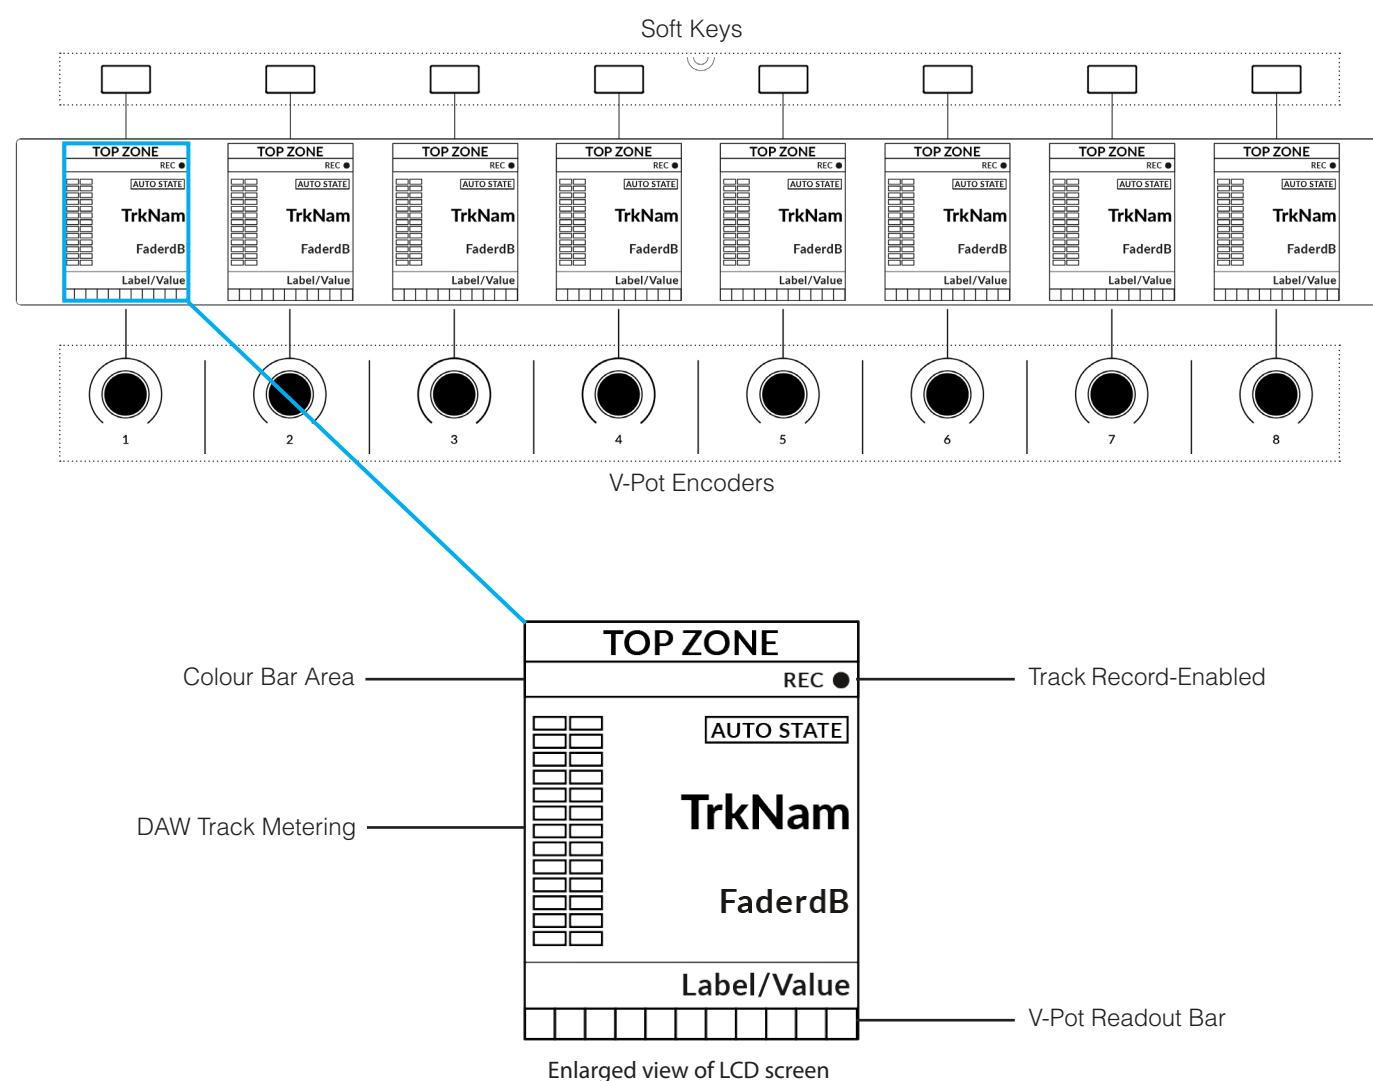

Top Zone - Provides a label for the function assigned to the soft key directly above.

Colour Bar Area - Displays a representation of the DAW track colour (requires SSL 360° v2.1 and above. Also requires Pro Tools 2025 or above).

Auto State - Shows the current automation state of the track (when **Show Auto** is enabled in SSL 360°).

Track Record Enabled (REC) - Indicates that the track has been record-enabled.

TrkNam - Displays the 8-character track name (requires SSL 360° v2.1 and above. Also requires Pro Tools 2025 or above). Else - Displays the 4-character track name (SSL 360° v2.0 and below).

FaderdB - Provides a readout of the current fader position.

Label/Value - Displays a label or value readout for the parameter currently assigned to the V-Pot.


DAW Track Metering - 12-segment track metering + clip

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot function.

*Track Metering Power Tip: The **F1** command, available in the DAW commands list SSL 360° will clear clips on the track metering. You can assign this command to any of the Quick Keys or User keys on UF8. Alternatively, you'll find this command pre-assigned to the 6th Soft Key in User Bank 3.*

Tutorial

This section guides you through using UF8 with Pro Tools.

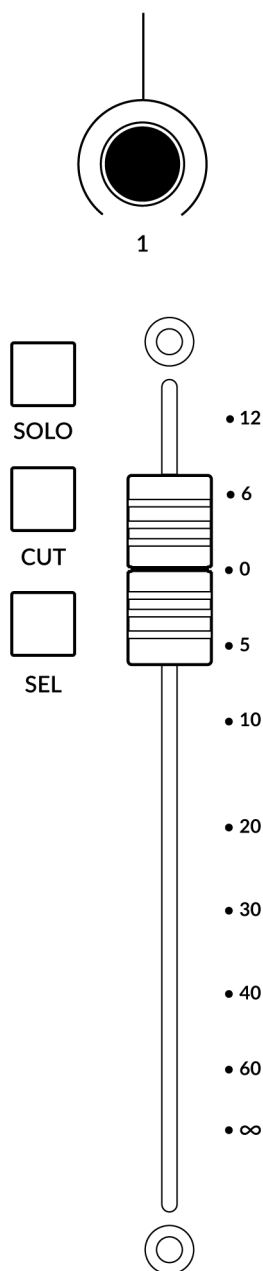

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active (Pan, Send etc). These modes are explained on the pages that follow.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Pro Tools tracks and are great for balancing mix levels and riding volume automation.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Pro Tools.

In Use:

When solo'ing tracks, expect the **CUT** keys of UF8 to flash on all tracks that are not solo'd.

Double-pressing a **SEL** key will open up the Pro Tools re-name track window on your computer screen.

The non-contiguous selection of multiple **SEL** keys can be achieved by pressing and holding the first **SEL** key you want to select and then pressing subsequent **SEL** keys.

Holding the **Shift/Alt** modifier key (found within **SOFT KEY** User Bank 3) and pressing the **SEL** keys will allow you to select a contiguous range of **SEL** keys.

Holding the **Opt/Alt** modifier key (also found within **SOFT KEY** User Bank 3) and pressing a **SEL** key will allow you to toggle the selection of all **SEL** keys.

Selection Mode


The primary purpose of the **NORM**, **REC** and **AUTO** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys. These 3 modes inter-cancel.

NORM - The **SEL** keys behave as normal track selection functions of Pro Tools.

REC - The **SEL** keys become track record-arm buttons.

AUTO - When in this mode, you can see the automation status label on the bottom of the display as you change the automation status mode of a particular track. To do this, use the combination of **SEL** key and the **AUTOMATION** state keys found on the bottom-left corner of UF8.

SELECTION MODE

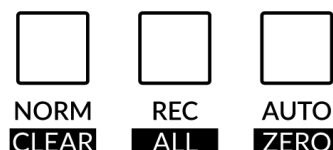

Secondary Functions Of The Selection Mode Keys

You will notice that there are additional labels beneath the **SELECTION MODE** keys - **CLEAR**, **ALL** and **ZERO**. These functions are accessed by a press and hold action and provide useful additional workflow features:

Clear Solos - Press and hold **CLEAR** and then press any **SOLO** key to clear solos.

Clear Mutes/Cuts - Press and hold **CLEAR** and then press any **CUT** key.

Clear Selection Keys - Press and hold **CLEAR** and then press any active **SEL** key.


Record-Arm All Tracks - Press and hold **ALL** and then press any **SEL** key.

Zero Fader(s) - Press and hold **ZERO** and then press **SEL** key. This will also work if you have multiple tracks selected.

Zero All Faders - Press and hold the **ALL** and **ZERO** keys together and then press any **SEL** key.

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of one channel at a time. If you find yourself in **NAV**, **NUDGE** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

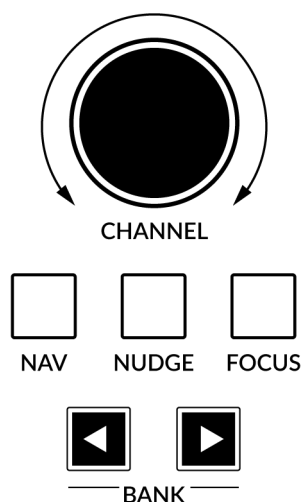

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Pro Tools, allowing you to navigate through your session.

Nudge

Pressing the **NUDGE** key puts the **CHANNEL** encoder into Nudge mode, which will allow you to move selected audio regions backwards and forwards by the Nudge value you have set within Pro Tools.

Focus


Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in, hover your computer mouse over a control and turn the encoder for hands-on control. The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.

Scroll Into View

The 'Scroll Into View' feature offered by Pro Tools is a handy way to select a track within Pro Tools and make it the first track on your UF8 surface.

In Pro Tools, simply right-click with your mouse in the selected track area (white area) and choose 'Scroll Into View'.


There is a super-handy keyboard shortcut for Scroll Into View, that is: **Shift+Ctrl+Mouse click** in the selected track area (white area) of the Pro Tools GUI.

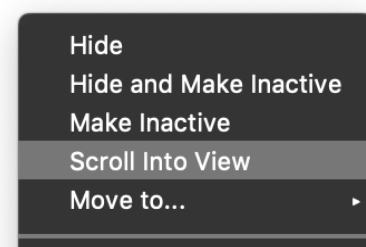

Bank Keys

The **BANK** < > keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected. e.g. 8 for one UF8, 16 for 2 UF8s etc.

Cursor Keys and Mode Key

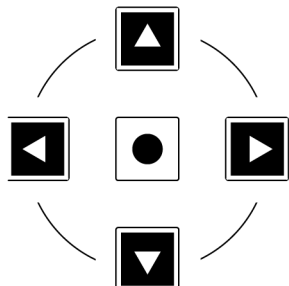

In the lower-right corner of your UF8 are the Cursor keys with the Mode key in the centre.

When the Mode key is lit the cursor keys perform horizontal and vertical zooming.

Pressing the Mode key again, the left and right cursors move between audio clip edit points, or, tab between transients if Tab To Transient is active in Pro Tools. Up and down will move the edit cursor between tracks.


Cursory Keys - Transport Mode

As of SSL 360° v1.3, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

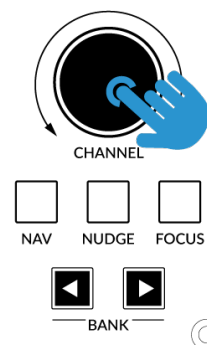

Press and hold the CHANNEL encoder to enter/exit Transport Mode

Assignment of Transport Commands


Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

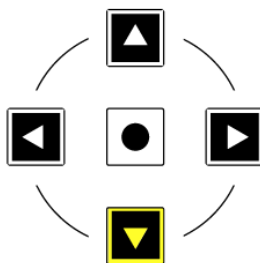


Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequently needed DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Toggle Edit and Mix Window
- 2 - Toggle Floating Transport Window Open/Close
- 3 - Toggle Session Setup Window Open/Close

QUICK

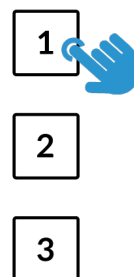

Pan



Pressing the **PAN** key once will assign the V-Pots to control the track pans. The V-Pot readout bar will display the pan position on the LCD. Press the **PAN** key again (it will pulse) to toggle the V-Pots into controlling the right-hand pan for stereo tracks. Pushing a V-Pot will default a pan to the centre position.

Fine

Press and hold the **FINE** key whilst turning a V-Pot that is controlling Pans or Sends, to operate in a fine resolution. Doing this will also show you the current Pan or Send value on the LCD. Ignore the Shift label, this is applicable for when UF8 is working with Cubase.




If you prefer the FINE behaviour and would like FINE mode to be engaged automatically every time you turn a V-Pot in Pan or Send modes, you can enable the 'Always Fine Pan' and/or 'Always Fine Sends' in SSL 360°, on the UF8 page under ADVANCED settings.

Sends

Number keys **1-5** in the **SEND / PLUGIN** section will allow you to control send levels A-E on the V-Pots. The V-Pot readout bar will display the Send position on the LCD. Pushing on the V-Pot will default a send to 0 dB. Keys 6-8 are disabled as they are not made available for control by Pro Tools.

- 1 = Send A
- 2 = Send B
- 3 = Send C
- 4 = Send D
- 5 = Send E


SEND / PLUGIN

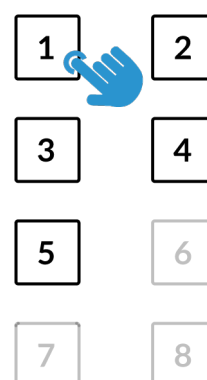


Pre/Post

Sends can be toggled between their pre/post state using the Soft Keys on UF8. Ensure the Soft Keys are in V-Pot mode, by pressing the **V-POT** button in the **SOFT KEYS** selection area, then simply use the relevant Soft Key to toggle between post/pre states for each Send as desired.

SOFT KEYS

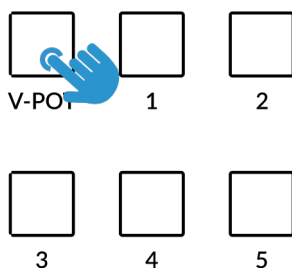

STEP 1 : Select V-POT Soft Keys Mode.

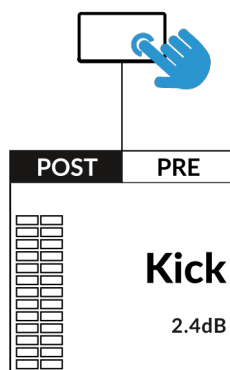


STEP 2: Use the Soft Keys to toggle Sends between post and pre.


Send Mutes

The Soft Keys can also be used to toggle Send Mutes on/off. Simply press the **V-POT** button a second time to toggle into Send Mute Mode.

SOFT KEYS

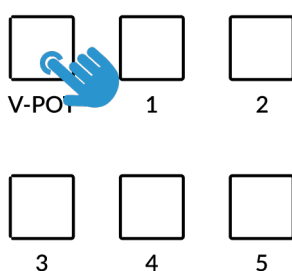

STEP 1 : Press V-POT a second time to toggle Soft Keys keys into Send Mute Mode.

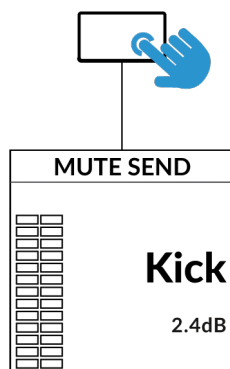

STEP 2: Use the Soft Keys to toggle Send Mutes on/off.



Flip

Sends can be flipped to the faders using the **FLIP** key. This is useful for riding Send levels or creating headphone mixes using faders instead of V-Pots. In **FLIP** mode, the V-Pots control the Pan of the currently selected Send.

Channel Mode


Channel Mode allows you to access Sends A-E and the Pan of the selected track, all from one place. This is a unique UF8 control feature, that utilises the touch-sense encoders to automatically switch send selection.

1. To enter and exit Channel Mode, press the **CHANNEL** key.
2. Select a track that you wish to control the Sends and Pans on using a **SEL** key.
3. Use V-Pots 1-5 to control Sends A-E or V-Pot 8 to control Pan.




CHANNEL

STEP 1 : Enter Channel Mode by pressing the CHANNEL key.

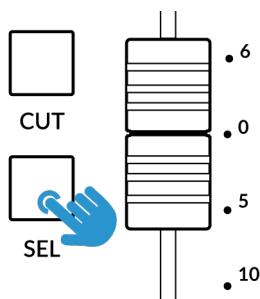

STEP 2: Use a SEL key to select a track.

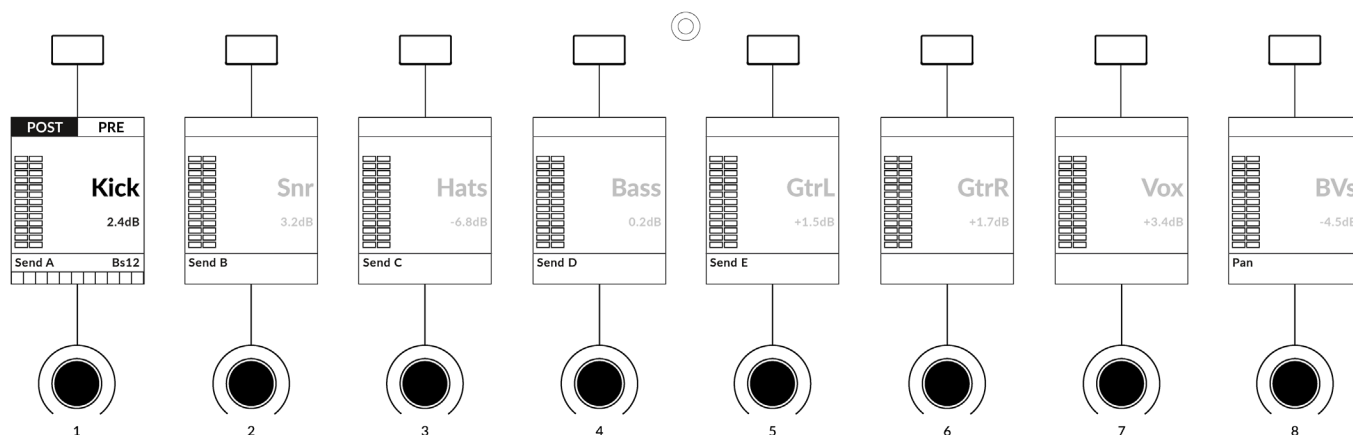

STEP 3: Use V-Pots 1-5 to control Sends A-E and V-Pot 8 to control Pan.

Working in Channel Mode

- Channel Mode turns the **SEL** keys and LCDs purple to indicate that you're working in Channel Mode.
- All non-selected tracks are dimmed on the LCDs to make it clear that you're working with Sends & Pan on the **selected track**.
- The V-Pot readout bar, together with a bus name label will appear on screen whilst the V-Pot is being touched and revert to the idle screen state 3-seconds after touch is released.
- Pre/Post States can also be toggled for each send using the corresponding Soft Key.
- Simultaneous adjustment of more than one V-Pot and **FLIP** mode are not possible in Channel Mode.


Plug-in Mode

Plug-in Mode provides a smart way of accessing plug-in parameters for Inserts A-E of the selected track, whilst automatically opening the plug-in GUI at the same time.

1. To enter and exit Plug-in Mode, press the **PLUGIN** key.
2. Use a **SEL** key to select a track.
3. Press one of the number keys **1-5** (corresponding to Insert Slots A-E).




STEP 1 : Enter Plug-in Mode by pressing the **PLUGIN** key.

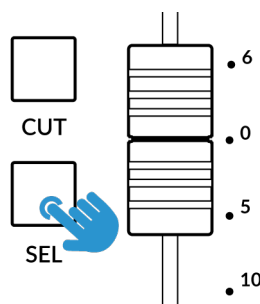


STEP 2 : Use a **SEL** key to select a track.

SEND / PLUGIN

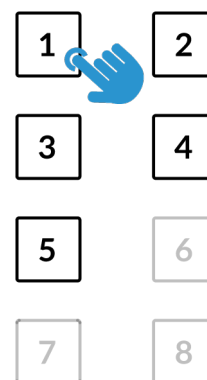

STEP 3 : Select an insert slot using the number keys.

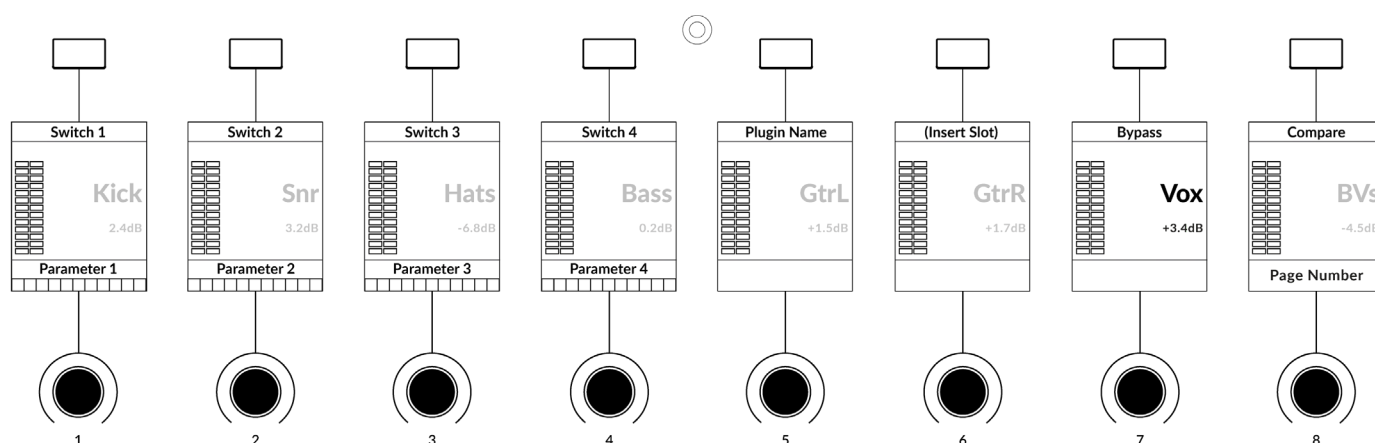

Working in Plug-in Mode

- Plug-in Mode turns the **SEL** keys and LCDs cyan to indicate that you're working in Plug-in Mode.
- In the Pro Tools session, you will see the currently selected insert slot on screen have a thin blue outline around it - please note when working in Plug-in Mode, you will not see the Pro Tools track selection itself change.
- All non-selected tracks are dimmed on the LCDs to make it clear you're working on the selected track only.
- The parameters of each plug-in will be laid out on V-Pots 1-4 and Soft Keys 1-4.
- Use the **PAGE** < > keys or the 8th V-Pot to access the various pages of parameters for each plug-in.
- Pro Tools' **Compare** and **Bypass** plug-in features can be actioned using Soft Keys 7 and 8.
- The F5 command, available in the DAW commands list (also pre-assigned to the 7th Soft Key in User Bank 3) allows you to toggle the V-Pots between Fixed and Velocity-Sensitive modes, which apply to controlling plug-ins specifically.



Use the **PAGE** keys to move through the plug-in parameter pages

- Although you cannot select Insert Slots F-J directly from UF8 (Pro Tools does not make them available), once you have selected a track and opened a plug-in in Slots A-E using the number keys, you can click with your mouse on-screen in Pro Tools on any Insert Slot in F-J and the UF8 surface will be able to control the parameters.
- When automating plug-in parameters in Plug-in Mode, any plug-in parameters in a write-ready automation state will show the current V-Pot bar segment flashing, before changing to become solid when writing automation.


When working with multiple UF8s, the tracks on which you want to control the plugin(s) must be banked down to the first UF8 surface.

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

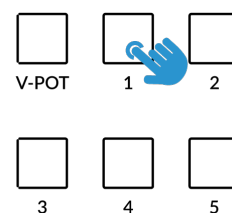


User Bank 1

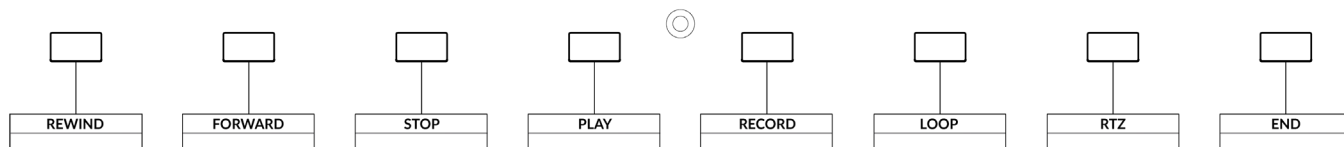


User Bank 2

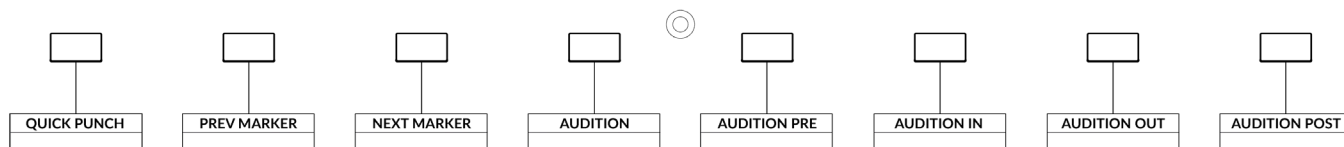


User Bank 3

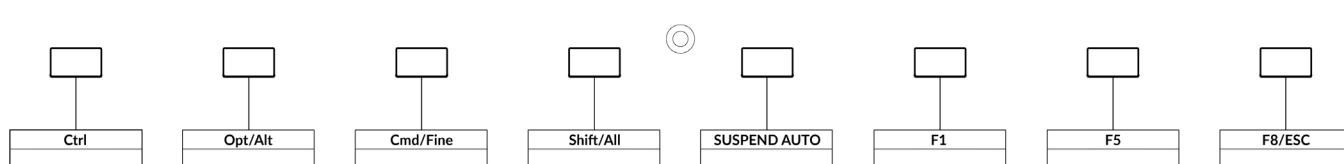

User Bank 4

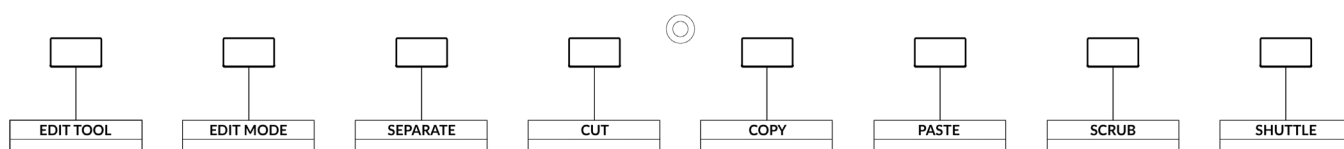

User Bank 5 (Empty)

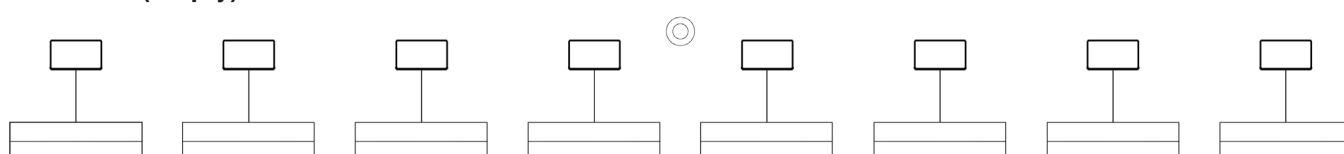

Assignable DAW Commands List - Pro Tools

The following DAW commands are available in SSL 360° to assign to any of the user-assignable keys.


Edit/Mix Alternate	Edit Cut
Mix to foreground	Edit Copy
Edit to foreground	Edit Paste
Open/close Transport window	Edit Delete
Open/close Memory Locators window	Status Auto
Open/close Session Setup window	Status Monitor
Open/close plug-in editor	Status Group
Undo	Group Suspend
Ctrl Modifier	Group Create
Save Session	Play Foot-switch
Suspend Automation	Record Foot-switch
Auto Enable Plug-in	Scrub
Auto Enable Pan	Shuttle
Auto Enable Fader	Default
Auto Enable Send Mute	Kpad Clr
Auto Enable Send	Kpad =
Auto Enable Mute	Kpad *
Option/Alt modifier	Kpad -
Cmd/Fine modifier	Kpad +
Shift/All modifier	Kpad .
Edit Tool	Kpad Enter
Edit Mode	Kpad 0
Fkey 1	Kpad 1
Fkey 5	Kpad 2
Fkey 8/Esc	Kpad 3
Audition	Kpad 4
Audition Pre	Kpad 5
Audition In	Kpad 6
Audition Out	Kpad 7
Audition Post	Kpad 8
RTZ	Kpad 9
End	
Online	
Loop	
Quick Punch	
Forward	
Rewind	
Stop	
Play	
Record	
Next Marker	
Previous Marker	
Last Marker	
Reset Marker	
Edit Capture	
Edit Separate	

Logic with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Logic profile on **LAYER 1** of UF8. If you wish to configure Logic on a different layer, please refer to the **DAW Communication** section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered, then click and drag with your mouse to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Logic** using the drop-down list. If Logic is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

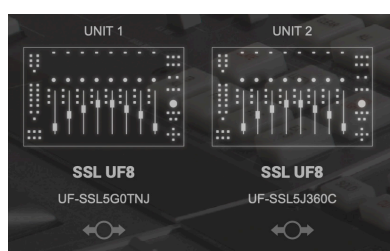

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

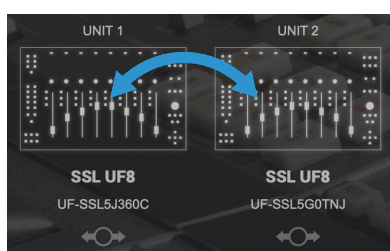


STEP 2 : Click and drag to re-order
units if necessary.

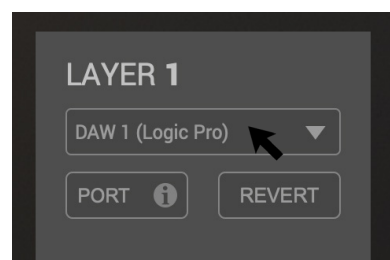


STEP 3 : Select the default Logic
DAW profile from the UF8 page.

Logic Setup


4. Open Logic. Go to **Control Surfaces > Preferences...** and then go to the **Advanced** tab. Make sure **Control Surfaces** is ticked under **Additional Options**.
5. Within the same **Preferences** menu, go to the **Control Surfaces > General** tab and ensure that 'Multiple Controls Per Parameter' is set to '1' and 'Only when all parameters fit one page' is unticked. Also, increase 'Maximum MIDI Bandwidth' to 100%.
6. Go to the **Help Tags** tab and ensure that 'Parameter name' and 'Parameter value' are both unticked.

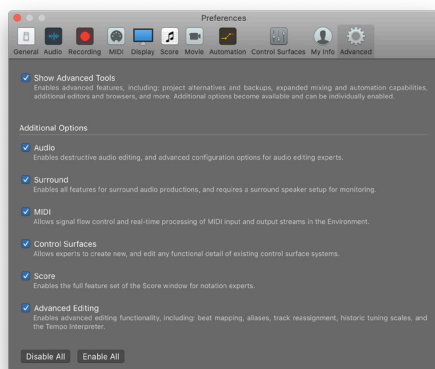

STEP 4 : On the 'Advanced Tab', tick
'Control Surfaces' in the 'Additional
Options' section.

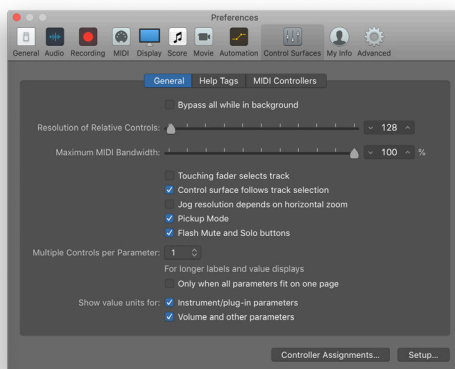

STEP 5 : On the 'Control Surfaces' >
'General' tab ensure that 'Multiple Controls
per Parameter' is set to '1' and 'Only when
all parameters fit on one page' is unticked.
Set 'Maximum MIDI Bandwidth' to 100%.

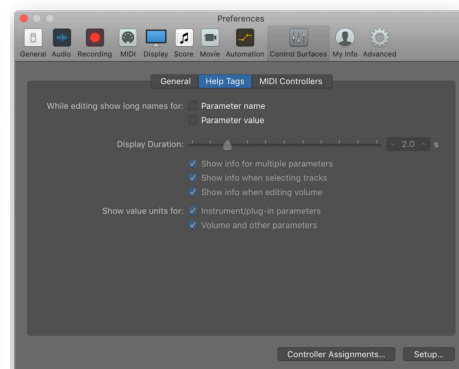


STEP 6 : On the 'Control Surfaces' > Help
Tags' tab, ensure that 'Parameter name'
and 'Parameter value' are both unticked.

7. Go to **Preferences > MIDI** and select the **Inputs** tab. In this list, ensure that any **SSL V-MIDI** Ports you need are ticked. e.g. If you have 1 UF8, just tick **SSL V-MIDI Port 1 Source**. If you have 2 UF8s, tick **SSL V-MIDI Port 1 Source** and **SSL V-MIDI Port 2 Source** etc.

Versions of Logic preceding 10.5 may not have the 'Inputs' tab available. If so, you can skip this step, as all MIDI ports default to be turned on.


8. Go to the **Control Surfaces > Setup**. Click **New > Install...** from the drop-down list in the top-left of the window. From the list, choose **Mackie Designs | Mackie Control | Logic Control** and click the **Add** button. Click on the image of the Mackie Control that has been added to the window and in the device setup options list on the left-hand side, configure the **Output Port** to **SSL V-MIDI Port 1 Destination** and set the **Input Port** to **SSL V-MIDI Port 1 Source**.

Subsequent UF8s should be set up as extender units i.e. **Mackie Designs | Mackie Control Extender | Logic Control** and their input and output ports increased incrementally for each UF8. e.g. a second UF8 is set up as a **Mackie Control Extender**, with Input and Output Ports assigned to **SSL V-MIDI Port 2**.

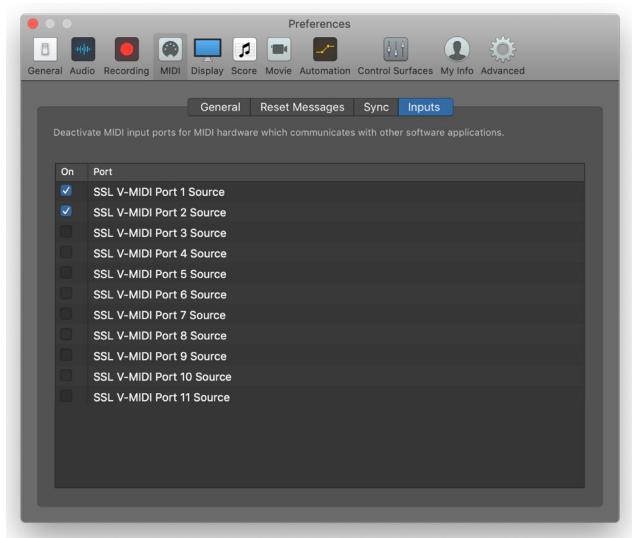

STEP 7 : Enable SSL V-MIDI Port(s) in Logic.

If you're working with a version of Logic that precedes 10.5, then skip this step.

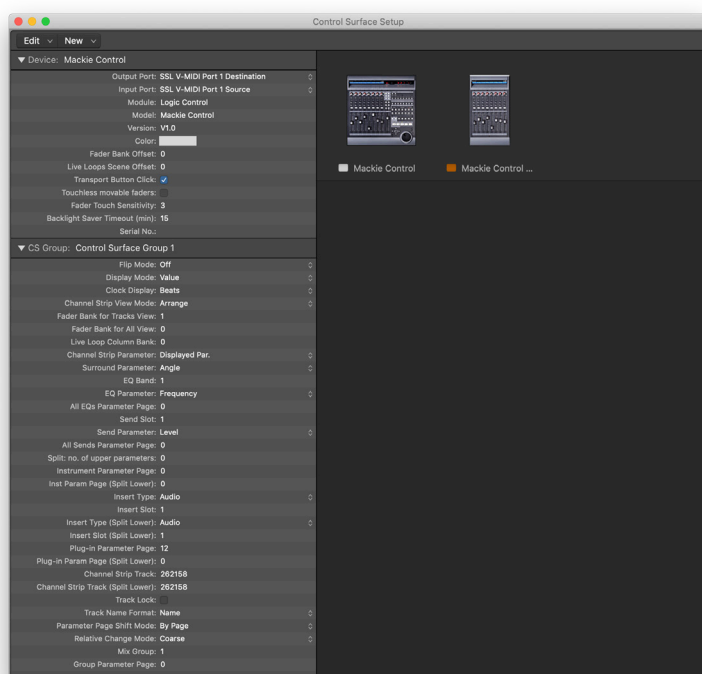


STEP 8 : Set up the first UF8 as a Mackie Control Unit and subsequent UF8s as Mackie Control Extenders, incrementing the SSL V-MIDI Port number for each Extender.

If you do not see the device setup options list on the left-hand side, press 'i' on your computer keyboard to show it.

Ensure that each Mackie Control Extender (additional UF8) has the 'Fader Bank Offset' setting in the device setup options list set to '8' for the second UF8, '16' for the third and '24' for the fourth.

Ensure that 'Channel Strip View Mode' is set to 'Arrange' in the device setup options list, to ensure that UF8 follows the order of tracks in your Logic arrangement.

LCD Layout

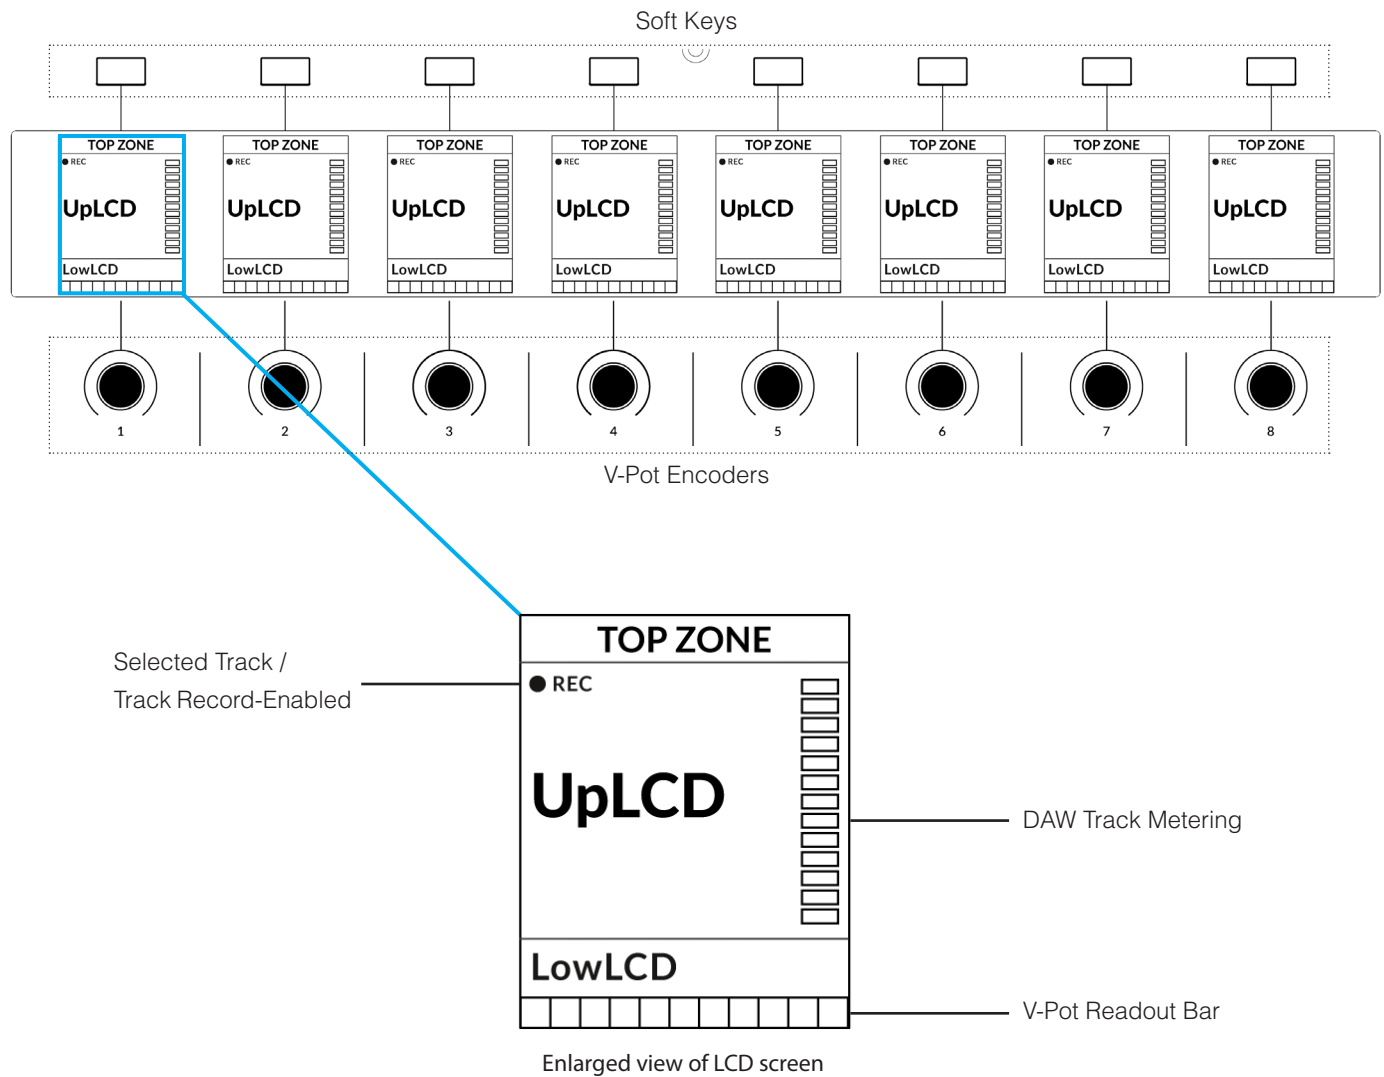

Top Zone - Provides a label for the function assigned to the soft key directly above.

Selected Track / Track Record-Enabled (REC) - In Logic, the **REC** text follows the currently selected track. If the track is record-enabled, the **REC** text pulses.

UpLCD - Displays the 6-character track name.

LowLCD - Displays a label or value readout for the parameter currently assigned to the V-Pot.

DAW Track Metering - 12-segment track metering + clip

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.



Tutorial

This section guides you through using UF8 with Logic.

Before You Start...

The information in this Logic Tutorial sets out the key features of using UF8 with Logic.


For complete, in-depth coverage of all the functions and features you can control in Logic using UF8, please refer to the Logic **Help Menu > Logic Pro Control Surface Support** document. Open the document and go to the **Mackie Control** section.

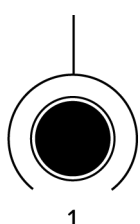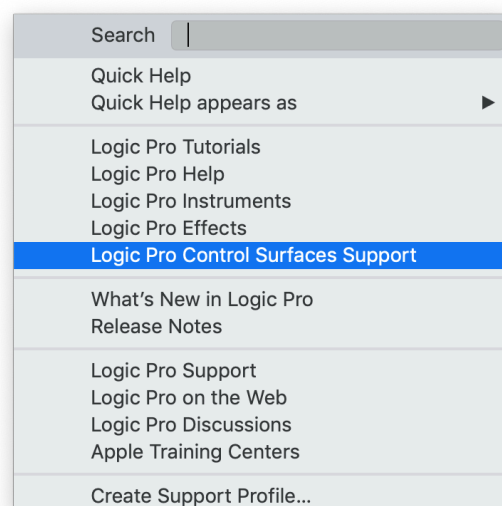

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active (Pan, Send etc) but it is typically used for tasks such as controlling Pan position, Send levels, Plug-in parameters or scrolling through parameter options/lists.

The Mackie Control section of the Logic Pro Control Surfaces Support contains a full Mackie Control Protocol guide.

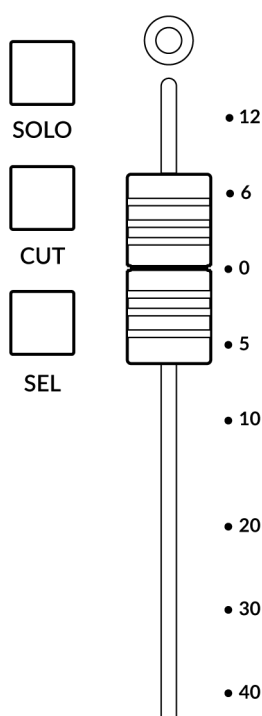

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Logic tracks and are great for balancing mix levels and writing automation.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Logic.

In Use:

When solo'ing tracks, expect the **CUT** keys of UF8 to flash on all tracks that are not solo'd if the Logic Control Surface preference 'Flash Mute and Solo Buttons' is ticked.

In Logic MCP (Mackie Control Protocol), only one track can be selected using the **SEL** key at a time.

Selection Mode


The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.

NORM - The **SEL** keys behave as the standard track selection function of Logic.

REC - The **SEL** keys become track record-arm buttons.

AUTO - Disabled. This key only applies for Pro Tools profiles.

SELECTION MODE

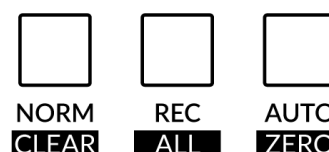

Secondary Functions Of The Selection Mode Keys

You will notice that there are additional labels beneath the **SELECTION MODE** keys. These functions are accessed by a press and hold action and provide useful additional workflow features in Logic:

Clear Solos

Press and hold **CLEAR** and then press any **SOLO** key.

Clear Mutes/Cuts


Press and hold **CLEAR** and then press any **CUT** key.

Zero Fader

Press and hold **ZERO** and then press a **SEL** key (**SEL** key must not be currently selected one).

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

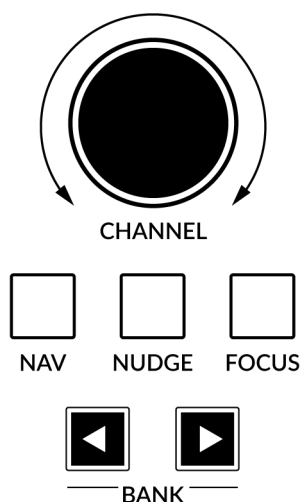

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Logic, allowing you to navigate through your session.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.


*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK < >** keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected. e.g. 8 for one UF8, 16 for 2 UF8s etc.

Cursor Keys and Mode Key

In the lower-right corner of UF8 are the Cursor keys with the Zoom key in the centre.

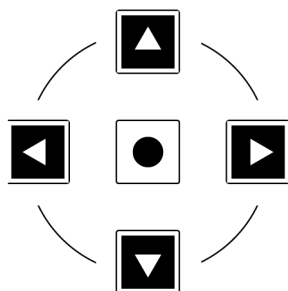

When the Zoom key is lit the cursor keys perform horizontal and vertical zooming.

Pressing the Zoom key again, the up and down and left and right cursor keys are used to navigate through parameter functions and pages in V-Pot assignment modes (Sends, Plug-ins etc).

The next page of this User Guide provides more information on using the cursor keys in conjunction with 'Channel View' and 'Mixer View' in Logic's Mackie Control implementation.


Cursory Keys - Transport Mode

As of SSL 360° v1.3, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

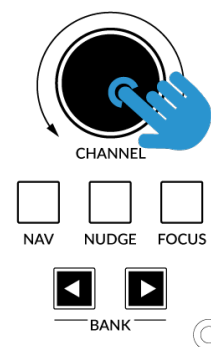

Press and hold the CHANNEL encoder to enter/exit Transport Mode

Assignment of Transport Commands


Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**


Right arrow is **FORWARD**

Circle Key is **RECORD**

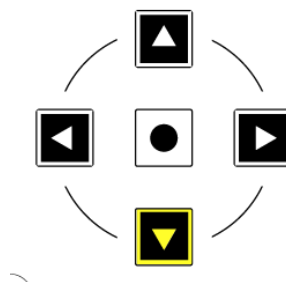


Automation

You can select the automation mode for each track directly from UF8. To do this, select a track you want to change the automation state of using the **SEL** key(s). Then, press the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8.

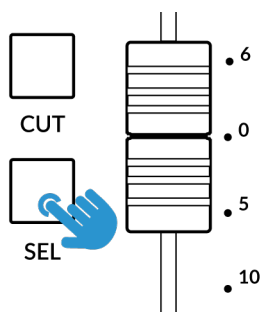

STEP 1: Select a track using SEL key

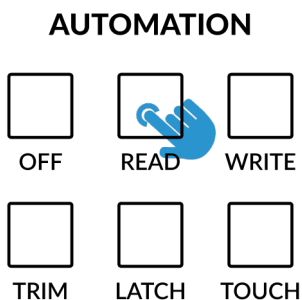

STEP 2: Select the desired automation state.

*Tip: Hold the **OPTION** modifier (pre-assigned within **SOFT KEY** User Bank 3 as 'Opt') and then press one of the **AUTOMATION** keys to assign all tracks to a particular automation mode.*


Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Show/hide Mixer within the Arrange window.
- 2 - Switch to 'AUX' view mode (one of the 'Global View' modes) - which shows only Aux tracks within the mixer.
- 3 - Global View Mode On/Off - Enters and exits 'Global View' Mode.

QUICK

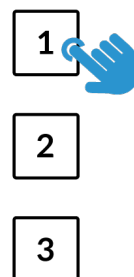


Fine

Press and hold the **FINE** key whilst turning a V-Pot that is controlling Send Levels for finer control. This key also functions as the **Cmd/Alt** modifier, allowing you to access secondary functions on many Mackie Control commands. Please refer to the Mackie Control section of the *Logic Pro Control Surfaces Support User Guide* for more info.

V-Pot Assignment Modes

UF8 offers direct access to the six main Mackie Control V-Pot assignment modes. These V-Pot assignment modes are accessed via the keys labelled below: 1. **PAN**, 2. **SEND**, 3. **INSTRUMENT**, 4. **EQ**, 5. **TRACK** and 6. **PLUGIN**. For an in-depth explanation of each V-Pot assignment mode, please refer to the Mackie Control section Logic Pro Control Surface Support document.

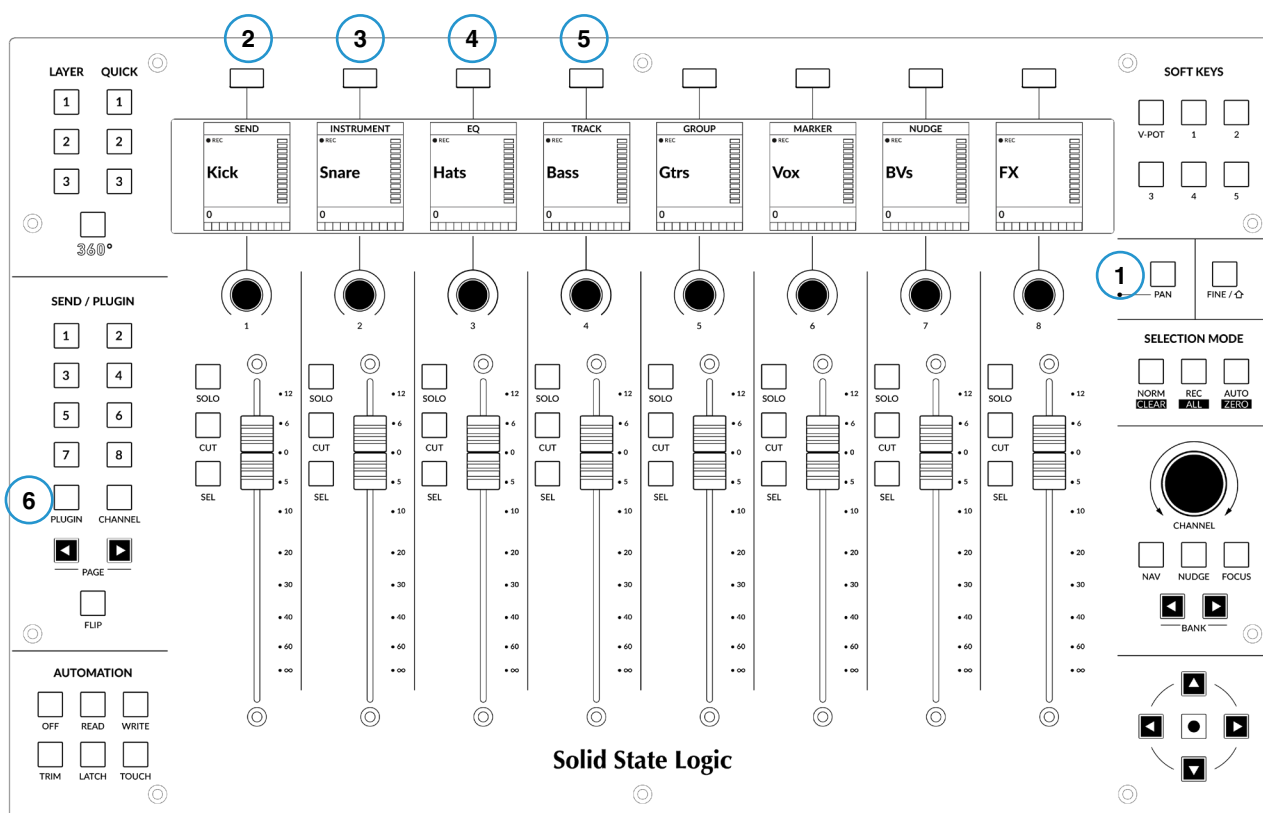


Channel View & Mixer View

Each V-Pot assignment mode can operate in two different ways - 'Channel View' or 'Mixer View'. Pressing the currently active V-Pot assignment key will toggle between the two view modes.

Let's take **SEND** mode as an example. The first time you press the **SEND** key, you will be put into 'Mixer View'. In this view, you can control one Send parameter (Destination/Level/Pan/Mute) for all tracks using the V-Pots. In 'Mixer View' the Left and Right cursor keys move between the next and previous parameter and the Up and Down cursor keys change the Send Slot selection e.g. Send 1, Send 2, Send 3 etc. Ensure the Zoom key is not active.

Pressing the **SEND** key again will toggle you into 'Channel View' which, by contrast, presents multiple Send parameters (Destination/Level/Pan/Mute) for the currently selected track across V-Pots. In 'Channel View', the Left and Right cursor keys will move between parameter pages and the Up and Down cursor keys will change the selected track (as long as the central Zoom key is not lit).

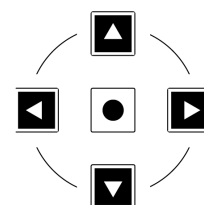


The cursor keys are integral to operating in Channel View and Mixer View.

Pressing and holding a V-Pot Assignment Key

Many of the V-Pot assignment keys have a press and hold feature. For example, press and hold the **SEND** key to display a sub-menu of options on the LCDs. In this particular example, 'Level' is presented above V-Pot 2, so pushing V-Pot 2 (whilst keeping **SEND** held down), assigns the V-Pots to control Send levels. This offers an alternative method of achieving the same task as using the cursor keys in 'Mixer View'.

Send / Plugin and Channel Key - How To Tell If You're In Channel View or Mixer View

The numbered keys in the **SEND / PLUGIN** section and the **CHANNEL** key are used to display if you are operating in 'Channel View' or 'Mixer View'. On a traditional Mackie Controller, this information would be displayed on the 2-digit Assignment, or 'Mode Display'.

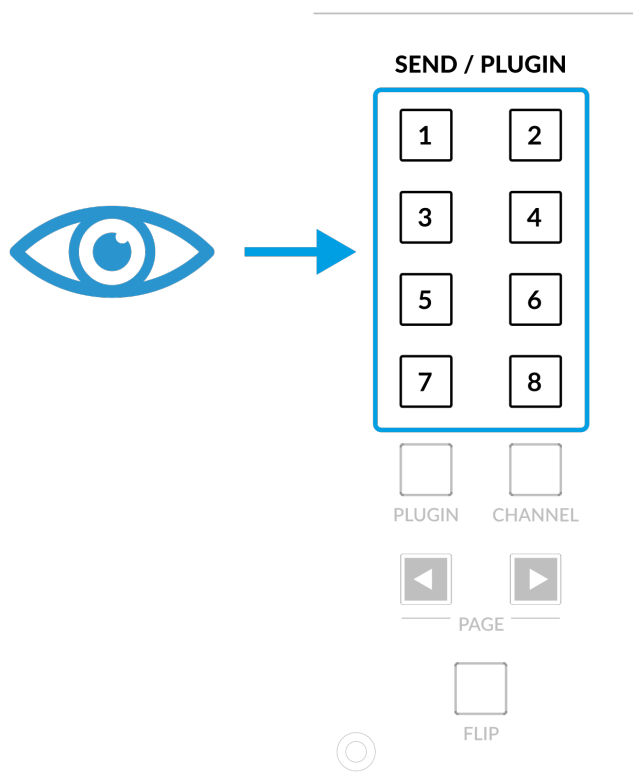


Mixer View

In 'Mixer View' the currently selected slot number (e.g. Send Slot or Plug-in Slot), will light the corresponding number key.

Channel View

In 'Channel View' the **CHANNEL** key will light.

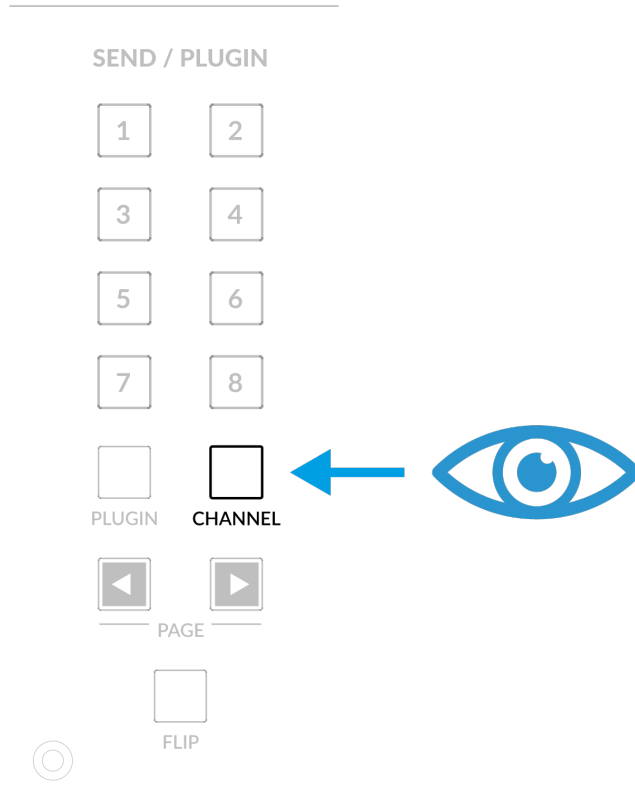

Page Keys

The **PAGE** < > keys offer no functionality in the Logic UF8 profile and are therefore disabled.




Flip

Pressing the **FLIP** key will engage or disengage one of Logic's three possible Flip modes - 'Flip', 'Swap' or 'Zero'. These are useful for various reasons, the most obvious 'Flip' feature allowing you to control V-Pot parameters such as Send levels or Plug-in parameters on the faders instead of the V-Pots. The Flip mode used is configured in the Mackie Control Surface Setup.



Group, Marker and Nudge

Soft Keys 5, 6 and 7 in the **V-POT** Soft Key bank allow access to Mackie Control 'Group', 'Marker' and 'Nudge' functions.

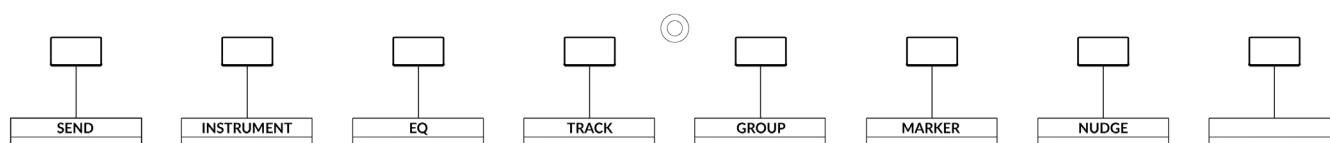


For a detailed breakdown of exactly how GROUP, MARKER, NUDGE or any of the other Mackie Control commands operate, please refer to the Mackie Control section of the Logic Pro Control Surface Support document.

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

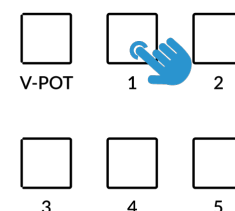


User Bank 1

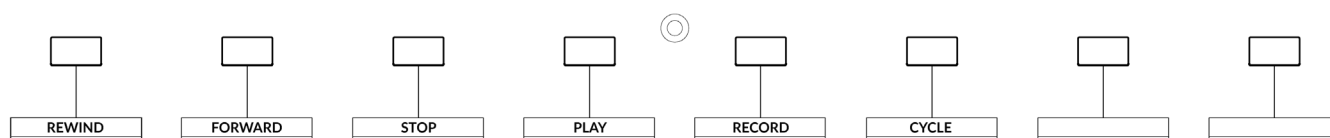


User Bank 2

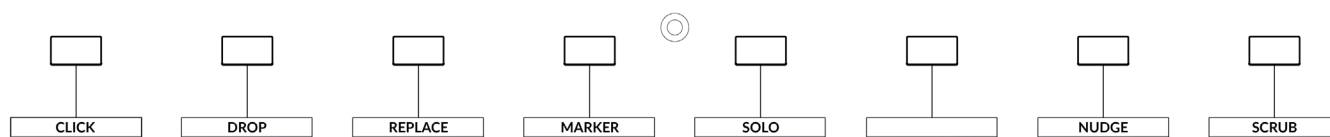


User Bank 3

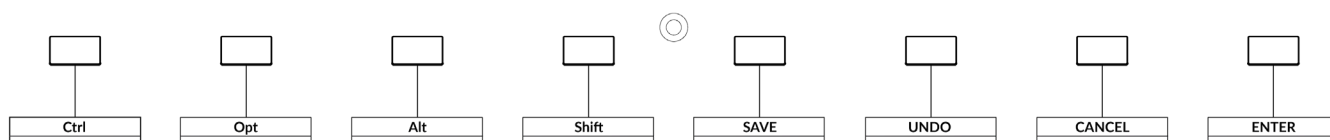

User Bank 4

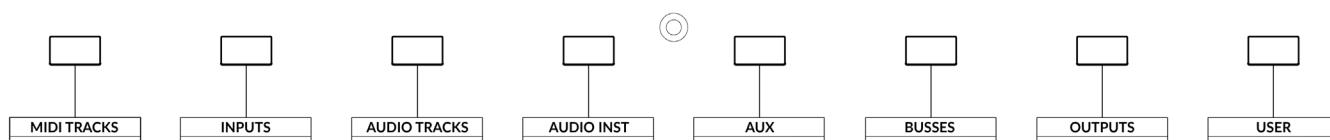

User Bank 5

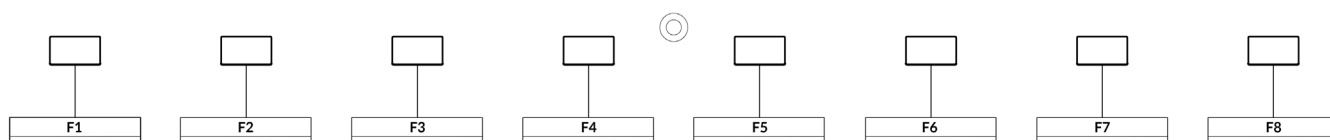

"Oh, tell me now, where was my fault, in loving you with my whole heart?" - White Blank Page, Mumford & Sons.

Assignable DAW Commands List - Logic

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys.


Track	Solo
Pan/Surround	Forward
EQ	Rewind
Send	Stop
Plugin	Play
Instrument	Record
Flip	Scrub
Global	Play Foot-switch
Name/Value	Record Foot-switch
SMPTE/Beats	
F1	
F2	
F3	
F4	
F5	
F6	
F7	
F8	
MIDI Tracks	
Inputs	
Audio Tracks	
Audio Instruments	
Aux	
Busses	
Outputs	
User	
Shift	
Option	
Control	
Alt	
Read	
Write	
Touch	
Latch	
Trim	
Save	
Undo	
Group	
Cancel	
Enter	
Marker	
Nudge	
Cycle	
Drop	
Replace	
Click	

Cubase/Nuendo with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Cubase/Nuendo profile on **LAYER 1** of UF8. If you wish to configure Cubase on a different layer, please refer to the **DAW Communication** section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Cubase** using the drop-down list. If Cubase is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

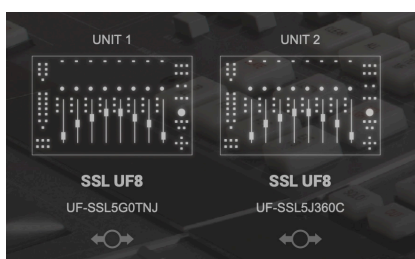

STEP 1 : Open SSL 360° application. Connected UF8s appear on-screen.

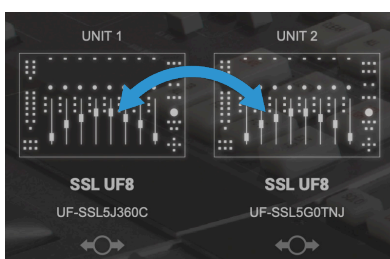


STEP 2 : Click and drag to re-order units if necessary.

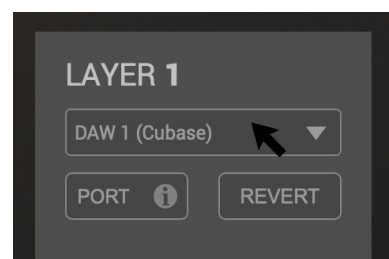


STEP 3 : Select the default Cubase DAW profile from the UF8 page.

Cubase Setup


4. Open Cubase. Go to **Studio > Studio Setup...**
5. Click the **+** symbol in the top-left of the window and select **Mackie Control** from the drop-down list. Set the **MIDI Input** to **SSL V-MIDI Port 1 Source** and set **MIDI Output** to **SSL V-MIDI Port 1 Destination**. Click **Apply**. If you only have one UF8, skip to step 10.
6. If you have multiple UF8s, repeat step 5 - adding another **Mackie Control** and incrementing the **SSL V-MIDI Port** number for the **MIDI Input** and **MIDI Output** each time - e.g. the second UF8 would be set to **SSL V-MIDI Port 2**.

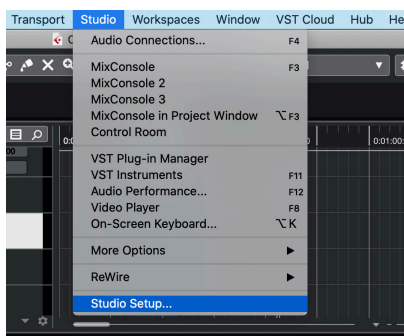

STEP 4 : Open the Studio > Studio Setup... menu in Cubase.

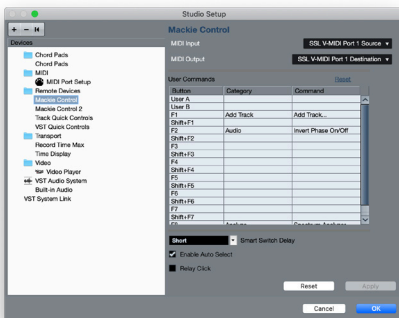


STEP 5 : Add a Mackie Control and configure MIDI Input and MIDI Output to SSL V-MIDI Port 1. Click Apply.

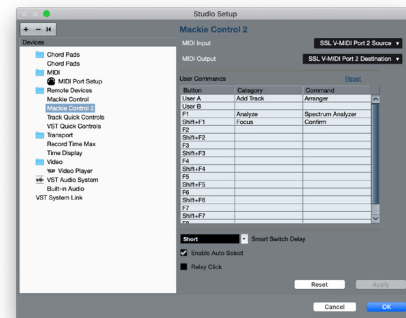


STEP 6 : If you have multiple UF8s, add more Mackie Control units and increment SSL V-MIDI Port number.

If you have multiple UF8s and have followed Steps 1-6 you will notice that, even though you have configured multiple Mackie Controllers on different **SSL V-MIDI Ports** and clicked **Apply**, the UF8s in front of you are mirroring the same bank of tracks. This is due to a peculiarity of Cubase's Mackie Control Setup. To correct this, please now do the following:


7. Change **MIDI Input** and **MIDI Output** on the first **Mackie Control** to **SSL V-MIDI Port 2** and click **Apply**.
8. Change the **MIDI Input** and **MIDI Output** on the second **Mackie Control** to **SSL V-MIDI Port 1** and click **Apply**.
9. To make Cubase refresh the LCDs on UF8, press any of the Soft Keys in the **V-POT** bank such as **FX Send** or **EQ**.

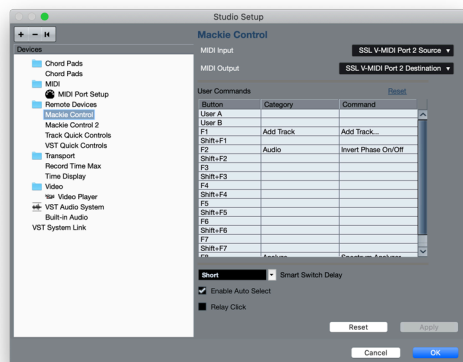

STEP 7 : Select the first Mackie Control and change it to be configured for SSL V-MIDI Port 2.

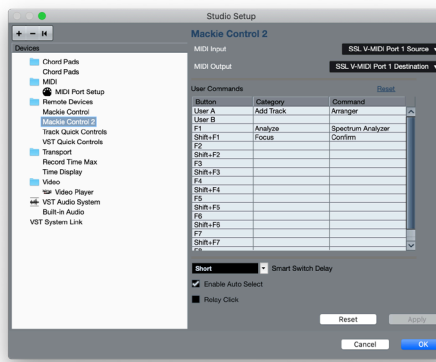


STEP 8 : Select Mackie Control 2 and change it to be configured for SSL V-MIDI Port 1.

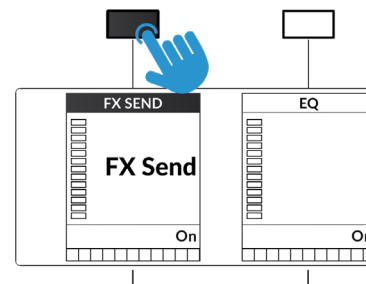


STEP 9 : Force Cubase to update UF8's LCD Screens by changing V-POT assignment mode on UF8 e.g. press FX SEND.

10. Next, go to **Studio > More Options** and click on **Mackie Control** and **Mackie Control 2**, ensuring both small pop-up windows that appear have **Cubase** selected, instead of **Compatibility**. This is important as UF8 has been designed to work with Steinberg's latest implementation of the Mackie Control Protocol and must be in **Cubase** mode to ensure all features work as expected.




11. As a final step, go to **Studio Setup > MIDI Port Setup** and deactivate the **In 'ALL MIDI Inputs'** option for your **SSL V-MIDI Ports** and click **OK**. This will ensure that MIDI Instrument Tracks set to receive from **ALL MIDI Inputs** do not pickup MIDI data from UF8.

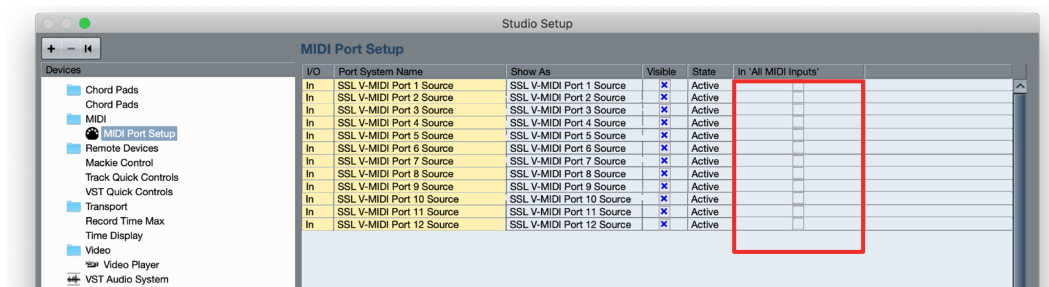

STEP 11 : Disable In 'ALL MIDI Inputs' for SSL V-MIDI Ports

LCD Layout

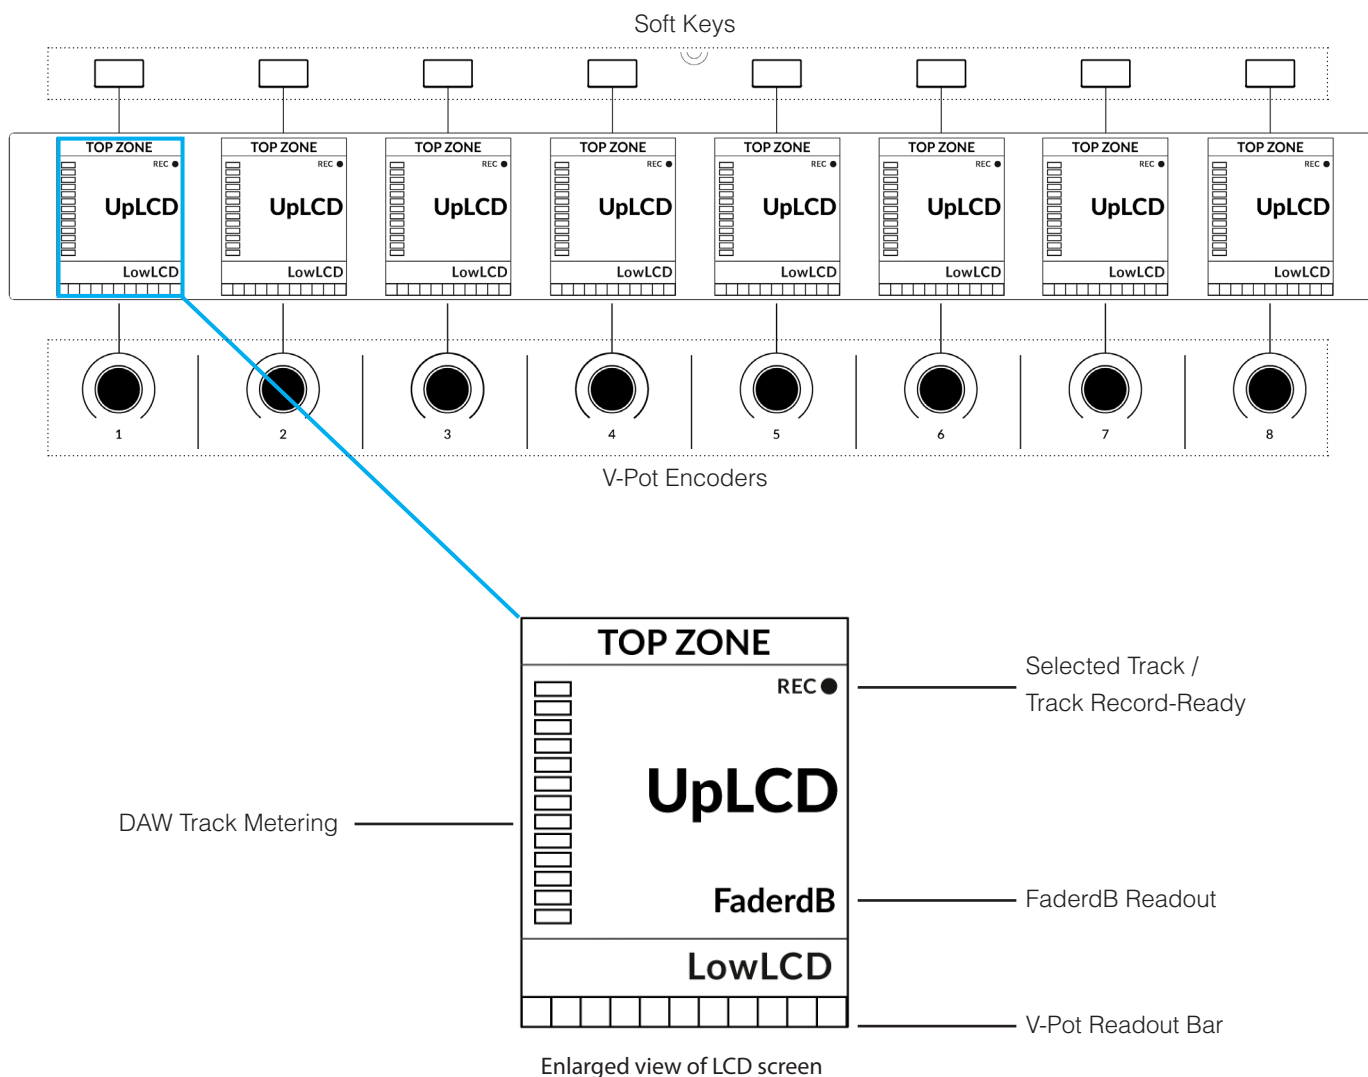

Top Zone - Provides a label for the function assigned to the soft key button directly above.

Selected Track / Track Record-Enabled (REC) - In Cubase, the **REC** text follows the currently selected track and also indicates the track is Record-Ready.

UpLCD - Displays the 6-character track name or information regarding the current V-Pot assignment, depending on the current mode.

FaderdB - dB readout of the DAW track fader level.

LowLCD - Displays name or value information for the V-Pots, depending on which mode or page is selected.

DAW Track Metering - 12-segment track metering + clip

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.


Tutorial

This section guides you through using UF8 with Cubase.



Before You Start...

The information in this Cubase Tutorial sets out the key features of using UF8 with Cubase.

For complete, in-depth coverage of all the functions and features you can control in Cubase using UF8, please refer to the Mackie MCU Pro section of Steinberg's *Remote Control Devices* PDF document, available via the Cubase/Nuendo Help menu.

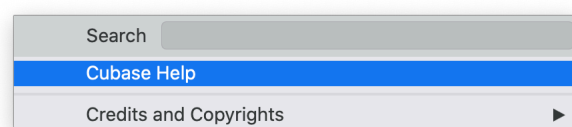


The Cubase Help menu can be used to find the link to the 'Remote Control Devices' document shown below

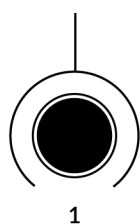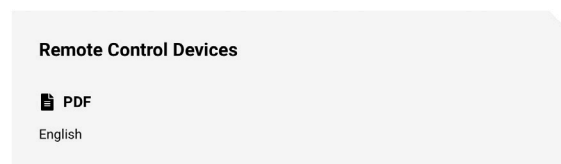

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active (Pan, FX Send etc) but is typically used for tasks such as controlling pan position, send levels, plug-in parameters or scrolling through parameter options/lists.

The V-Pot has a push function, which by default operates the track Monitor function when the V-Pot assignment mode is Pan.

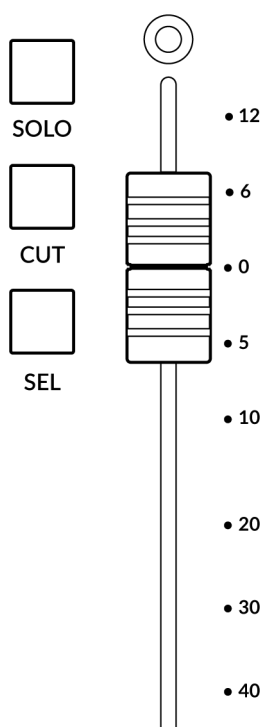

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Cubase tracks and are great for balancing mix levels and writing automation.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Cubase.

Tip:

The Solo Defeat MCU function (pre-assigned to Quick Key 3) can be used to clear all solos.

Pressing and hold the MCU Shift function (the **FINE / SHIFT** key) and pressing Solo Defeat (Quick Key 3) can be used to clear all mutes.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.

NORM - The **SEL** keys select a track in Cubase.

REC - The **SEL** keys record-arm multiple tracks.


AUTO - Disabled. This key only applies for Pro Tools profiles.

SELECTION MODE



You will notice that there are additional labels beneath the **SELECTION MODE** keys. These functions have no purpose in the Cubase UF8 profile.

Channel Encoder

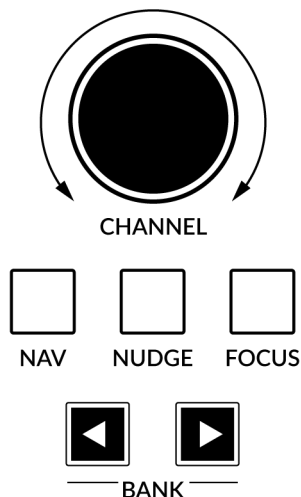

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Cubase, allowing you to navigate through your session.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.


Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.

*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK < >** keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected. e.g. 8 for one UF8, 16 for 2 UF8s etc.

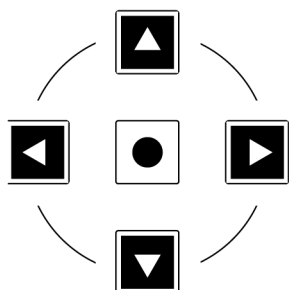

Cursor Keys and Mode Key

In the lower-right corner of UF8 are the Cursor keys with the Zoom key in the centre.

When the Zoom key is lit the cursor keys perform horizontal and vertical zooming.

Pressing the Zoom key again, the cursor keys mirror the actions of the cursor keys on your computer keyboard in Cubase.


Cursory Keys - Transport Mode

As of SSL 360° v1.3, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

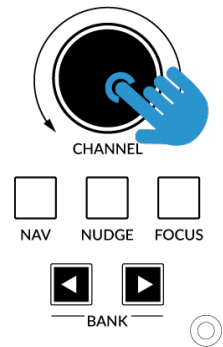

Press and hold the **CHANNEL** encoder to enter/exit Transport Mode

Assignment of Transport Commands


Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**


Circle Key is **RECORD**

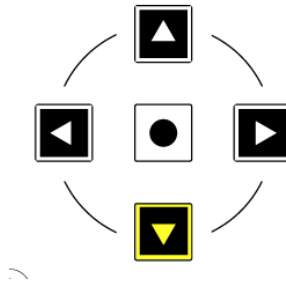

Automation


You can select the automation mode for each track directly from UF8. To do this, select a track you want to change the automation mode of using the **SEL** key. Then, press the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8. Press **READ** or **WRITE** again to toggle on/off.

Note that **READ** and **WRITE** are the only automation keys that apply to Cubase, so all other keys in this section are disabled when using Cubase.

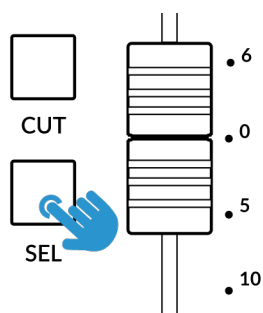

STEP 1: Select a track using SEL key

AUTOMATION

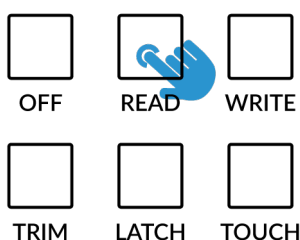

STEP 2: Select the desired automation state.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Show/hide Mix Console Window.
- 2 - Show/hide Edit Window.
- 3 - Solo Defeat - clears any solos.

QUICK



Fine / Shift Key

The key labelled **FINE / SHIFT** is programmed to execute Cubase's MCU **SHIFT** command (ignore the 'FINE' text). This command, when used in combination with other MCU functions or V-Pot assignment modes, provides access to alternative/additional functionality.

Please refer to the **Mackie MCU Pro** section of the **Cubase Remote Control Devices** PDF for more information.

Page Keys

The **PAGE** < > keys allow you to move through the various parameter pages that are available within each V-Pot assignment mode (or 'Parameter Group' as Cubase refers to them). The current page selection is displayed on UF8's LCDs.



Important

UF8's **PAGE** < > are actioning the same MCU commands that are referred to in Cubase's MCU implementation document as **CHANNEL** < >. The action is the same but on UF8, we chose to label the keys differently.

Flip

Pressing the **FLIP** key switches the functions of the V-Pots and faders. This is useful for various reasons, including tasks such as controlling Send levels or Plugin parameters on the faders instead of the V-Pots.



Fader Bank Keys


Number keys **1-8** provide access to Cubase's MCU Fader Bank 1-8 commands (you can ignore the **SEND / PLUGIN** label as this applies only to Pro Tools / Logic UF8 profiles).

By default, this means that keys **1-8** apply your first 8 Channel Visibility settings to the UF8 surface.

With the **FINE / SHIFT** key held, keys **1-8** apply specific channel types (Audio, Groups, FX Channels, MIDI etc) to the UF8 surface.

Please reference **Cubase Remote Control Devices** documentation for more information.

SEND / PLUGIN

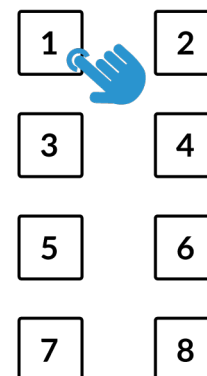

Channel Key




CHANNEL

This key serves no purpose for Cubase profiles on UF8 and is therefore disabled.

V-Pot Assignment Modes

UF8 offers direct access to the main modes of Cubase's Mackie Control implementation. For an in-depth explanation of how to use each V-Pot assignment mode, please refer to the **Mackie MCU Pro** section of Steinberg's **Remote Control Devices** document.

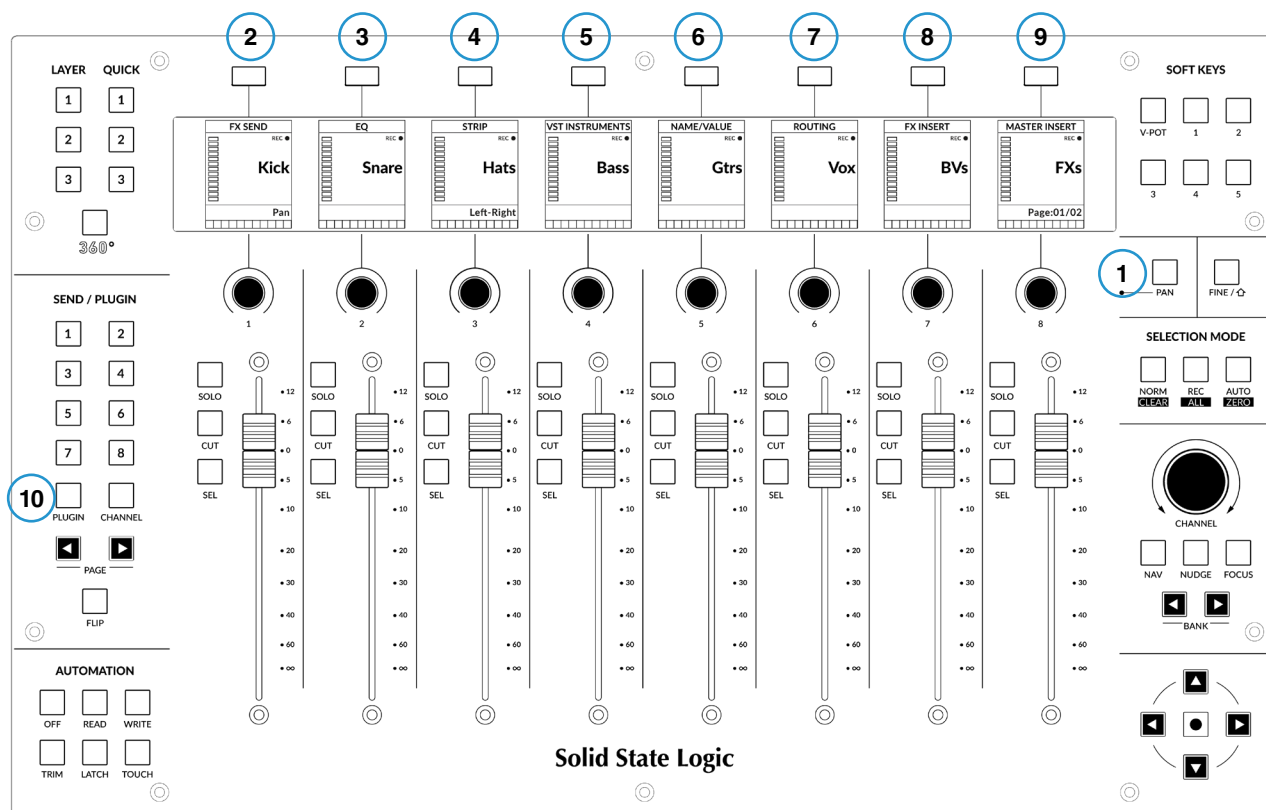

Nomenclature Table

The column 'Cubase/Nuendo MCU Function', contains the MCU function names as referred to in Steinberg's **Remote Control Devices** documentation. These names are taken from the Cubase/Nuendo overlays that are placed onto a Mackie Controller (replacing the default Logic labels). The Cubase MCU implementation has evolved over the years and as such, some of the labels don't quite match the functionality, so we have presented the most intuitive labels possible on UF8 to make operation easier. For example the 'FIRST' key on a Mackie Control with a Cubase overlay accesses controls for routing so we have labelled our key **ROUTING** instead.

Mode	Cubase/Nuendo MCU Function	UF8 Label
1	PAN	PAN
2	LAST	FX SEND
3	EQ	EQ
4	DYN/FX/AUX	STRIP
5	INSTRUMENT	VST INSTRUMENTS
6	NAME/VALUE	NAME/VALUE
7	FIRST	ROUTING
8	SENDS	FX INSERT
9	MASTER	MASTER INSERT
10	PLUGINS	PLUGIN


Name/Value

Strictly speaking, the **NAME/VALUE** function is not a V-Pot assignment mode by itself but it does have the useful function of displaying parameter values on the LCD screens. Without engaging this, parameter values are shown when a V-Pot is turned.

Example - Controlling Sends

It is beyond the scope of this User Guide to cover all of the different V-Pot assignment modes within the Cubase MCU implementation, however an example of controlling Sends is presented below.


Send Settings - Selected Channel

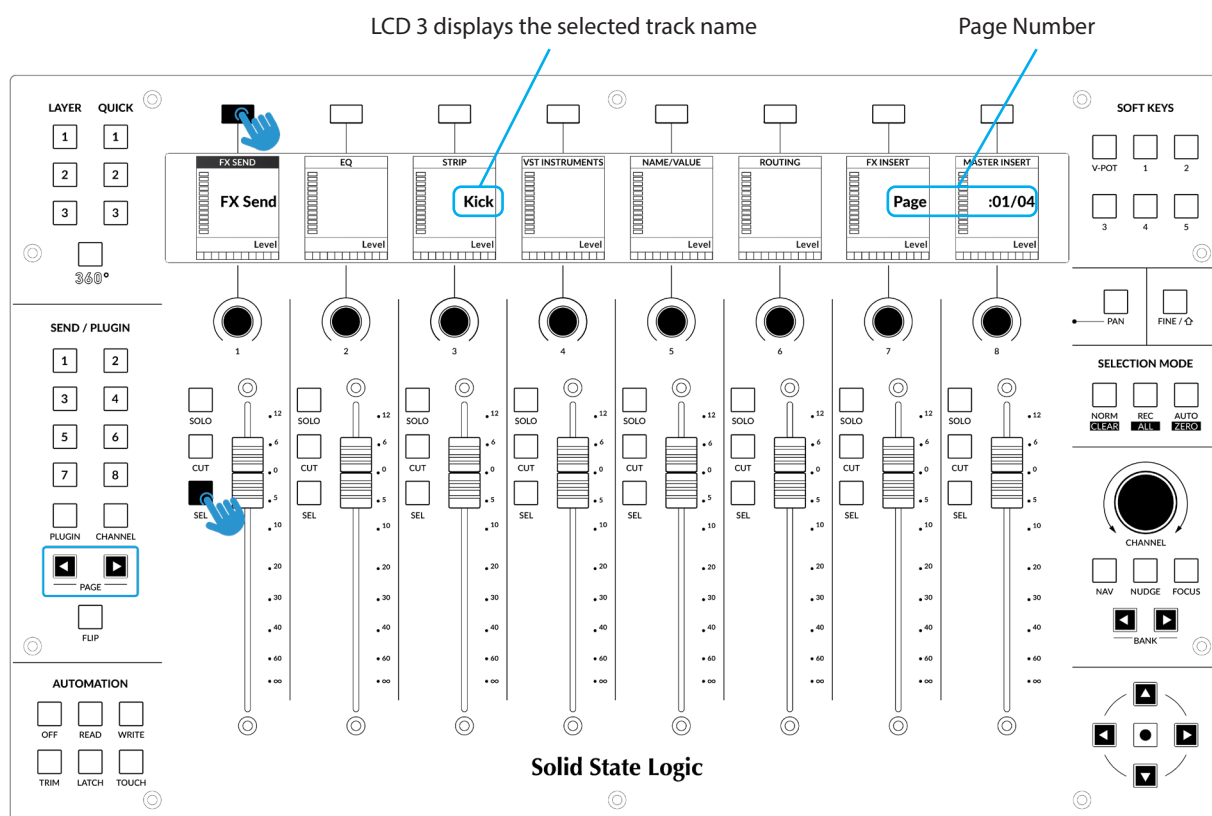

- Press the **FX SEND** key. This mode allows you to control all the Send parameters for the currently selected track using the V-Pots - e.g. all the Send levels on the selected track.
- Use the **PAGE** keys to move between parameter pages.

Send Settings - Global

Alternatively, Global mode provides you with access to the advanced send settings for the tracks currently on the UF8 surface. For example, you can control a send parameter (e.g. level), of FX Send 1 across multiple tracks at once using the V-Pots.

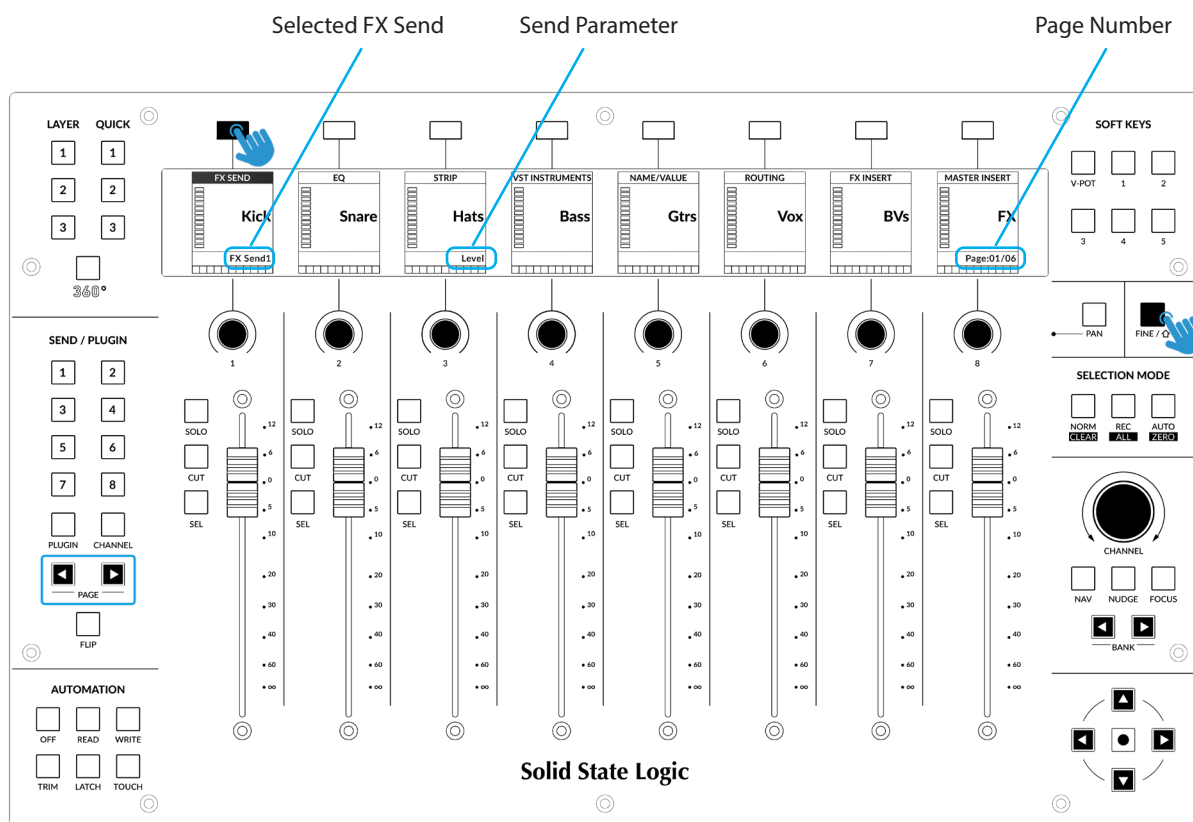

- This is an example of a V-Pot assignment mode that is accessed by pressing and holding the SHIFT MCU Command (the key labelled **FINE/SHIFT** on UF8).
- Press and hold the **FINE/SHIFT** key and then press the **FX SEND** key. This will select FX Send 1 but you can move through the rest of the FX Sends by continuing to keep **FINE/SHIFT** held and repeatedly pressing the **FX SEND** key
- Use the **PAGE** keys to move between parameter pages.


Each V-Pot assignment mode may vary slightly in terms of how it operates so it's important to refer to the Mackie MCU Pro section of Steinberg's Remote Control Devices PDF for more information.

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

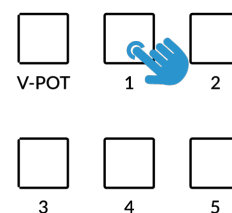


User Bank 1

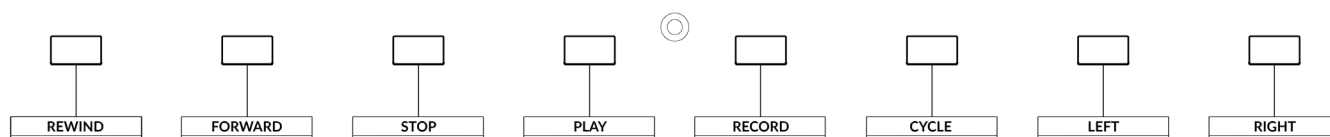


User Bank 2

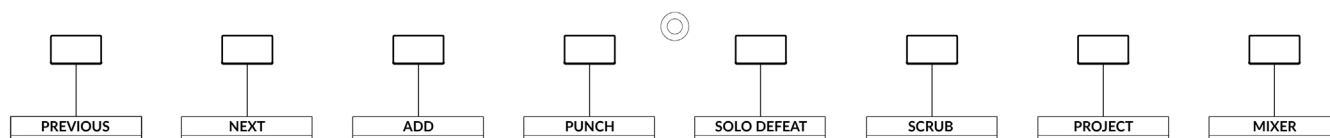


User Bank 3

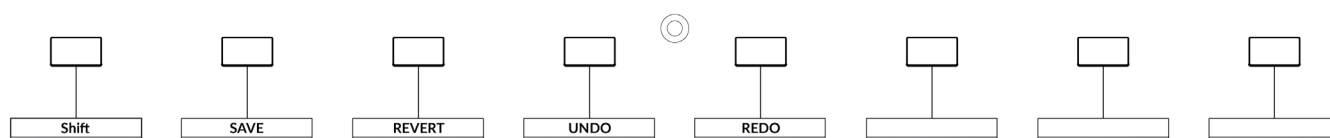

User Bank 4

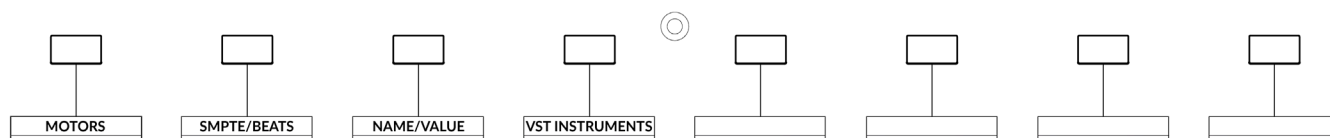

User Bank 5

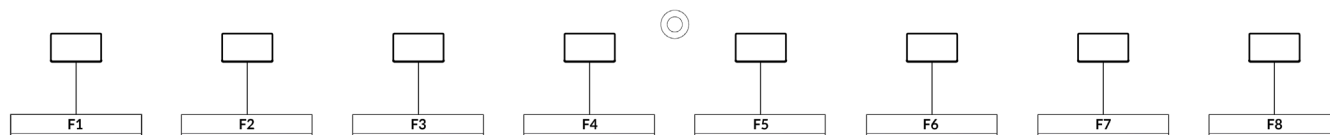

Function Select Keys 1-8 (F1 - F8)

In the **Studio Setup...** menu within Cubase, where the Mackie Control ports are configured during setup, you can program the **F1 - F8** keys found in User Bank 5 to any of the extensive list of Cubase commands made available in the **User Commands** table - choose a category and then a command from that category. Each **F** key can be shifted using the **FINE/SHIFT** key, giving you a total of 16 user commands plus the optional 'User A' and 'User B' foot pedals.

Assignable DAW Commands List - Cubase/Nuendo

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys. Labels in brackets are added to clarity what the function does.


First (Routing)	Add
Pan	Next
EQ	Forward
Last (FX Sends)	Rewind
Plugins (IFX Inserts)	Stop
Dyn/FX/Aux (Strip)	Play
Flip	Record
Edit (Window)	Scrub
Name/Value	User A
SMPTE/Beats	User B
F1	
F2	
F3	
F4	
F5	
F6	
F7	
F8	
Fader Bank 1	
Fader Bank 2	
Fader Bank 3	
Fader Bank 4	
Fader Bank 5	
Fader Bank 6	
Fader Bank 7	
Fader Bank 8	
Undo	
Redo	
Save	
Revert	
Read	
Write	
Project	
Mixer	
Sends (FX IFX 1st Insert)	
Instruments (VSTs)	
Master (Insert)	
Motors	
Solo Defeat	
Shift	
Left	
Right	
Cycle	
Punch	
Previous	

Ableton Live with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Live profile on LAYER 1 of UF8. If you wish to configure Live on a different layer, please refer to the **DAW Communication** section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Ableton Live** using the drop-down list. If Live is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

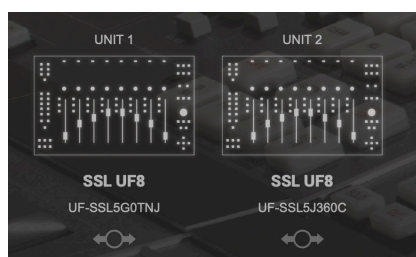

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

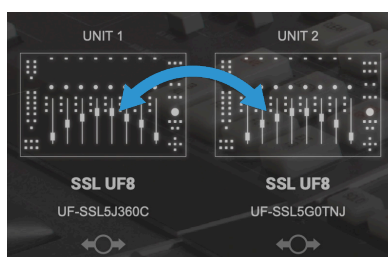


STEP 2 : Click and drag to re-order
units if necessary.

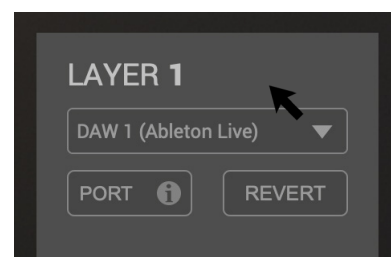


STEP 3 : Select the default Ableton
Live DAW profile from the UF8 page.

Live Setup


4. Open Live. Go to **Preferences > Link MIDI...**
5. From the **Control Surface** drop-down list select **MackieControl**. Set the **Input** to **SSL V-MIDI Port 1 Source** and set **Output** to **SSL V-MIDI Port 1 Destination**.
6. If you have multiple UF8s, use drop-down lists 2-4 to add subsequent **MackieControl XT**s, incrementing the SSL V-MIDI Port number for the **Input** and **Output** each time - e.g. the second UF8 would be set to **SSL V-MIDI Port 2**.

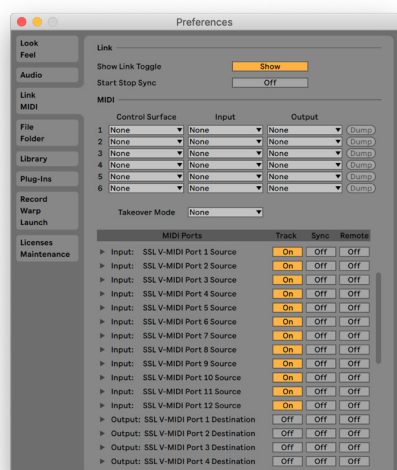

STEP 4 : Go the Preferences menu
and click on the Link MIDI tab.

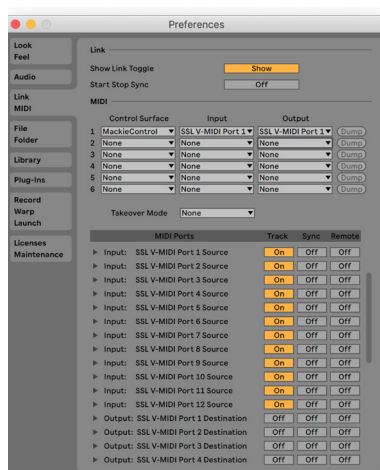


STEP 5 : Add a MackieControl and
configure for SSL V-MIDI Port 1 on
Input and Output

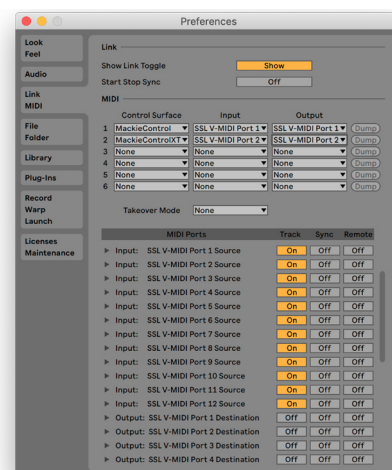

STEP 6 : If you have multiple UF8s,
add MackieControl XT units and
increment SSL V-MIDI Port number
each time.

LCD Layout

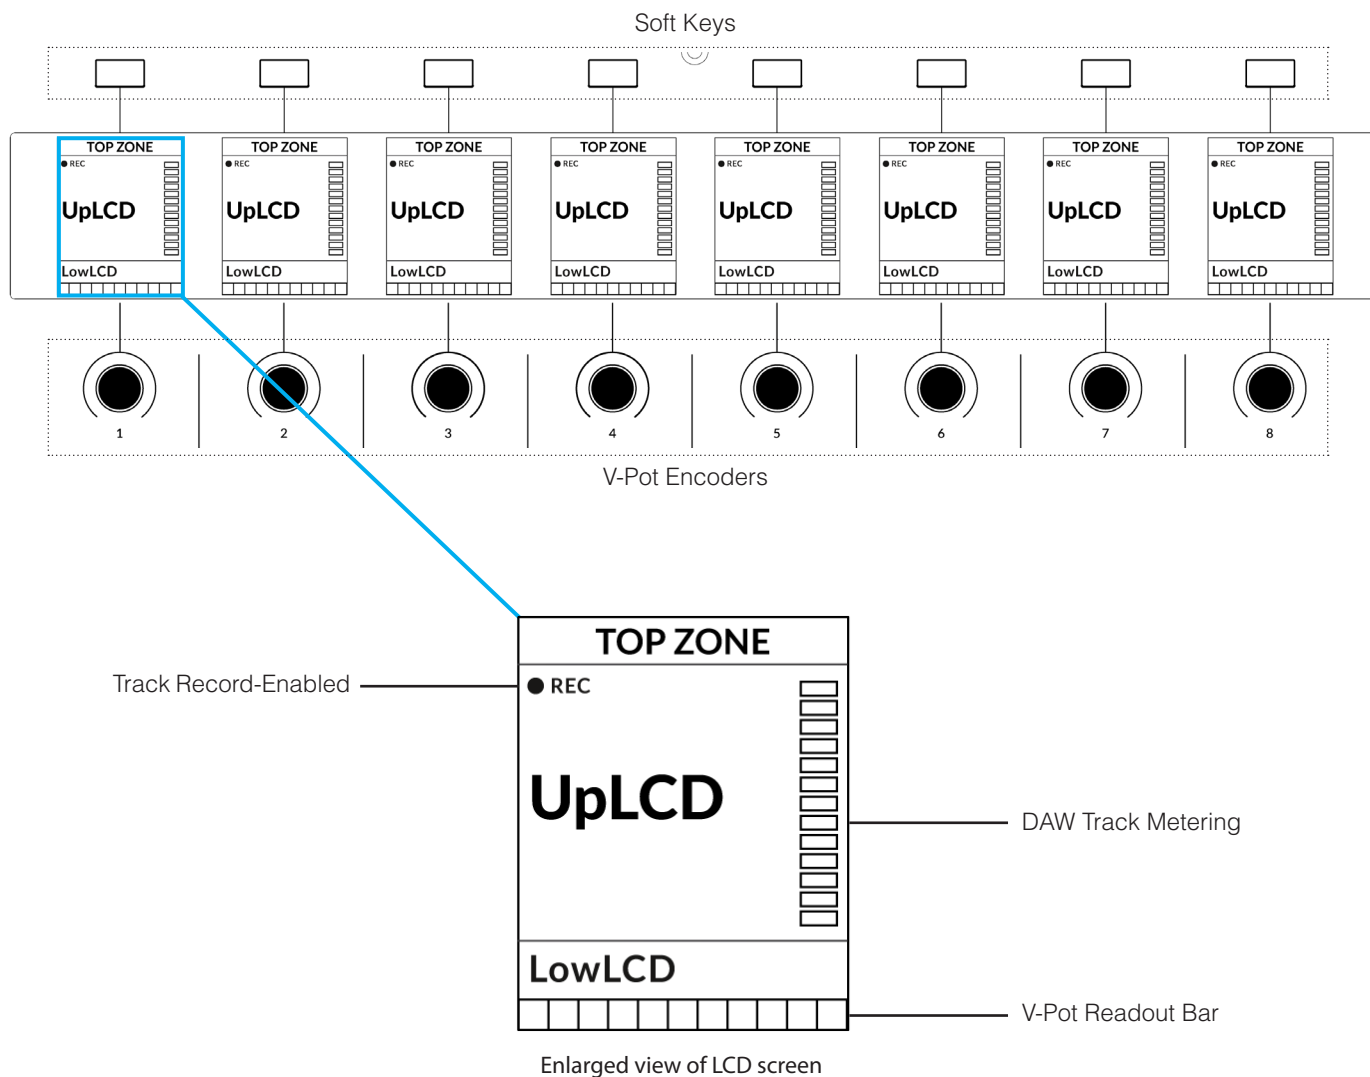

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In Live, the **REC** text appears when a track is record-enabled.

UpLCD - Normally displays the 6-character track name or parameter being controlled by the V-Pot, depending on the current mode. When a fader is moved the word 'Volume' appears here.

LowLCD - Displays a label or value readout for the parameter currently assigned to the V-Pot, unless a fader is moved, in which case the fader dB value is shown.

DAW Track Metering - 12-segment track metering + clip


V-POT readout bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial

This section guides you through using UF8 with Live.

V-Pot


At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active (Pan, Send etc) but is typically used for tasks such as controlling Pan position, Send levels, Plug-in parameters or scrolling through parameter options/lists.

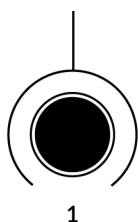

The V-Pot has a push function, which is typically used for defaulting the position of the parameter being controlled.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Live tracks and are great for balancing mix levels and writing automation.

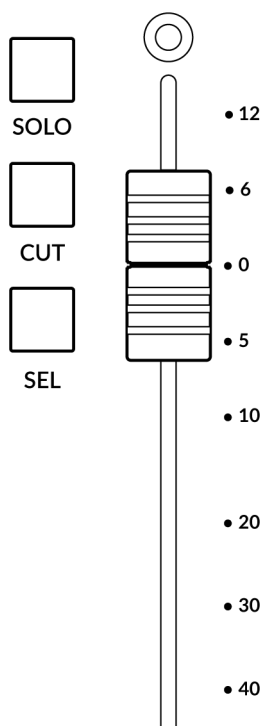

Touching a single fader will cause the LowLCD area to display a fader dB readout, instead of the V-Pot parameter readout.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Live.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.

NORM - The **SEL** keys select a track in Live.

REC - The **SEL** keys act as record-arm keys.

AUTO - Disabled. This key only applies for Pro Tools profiles.


The secondary labels **CLEAR**, **ALL** and **ZERO** do not apply for Live's UF8 integration.

SELECTION MODE



Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

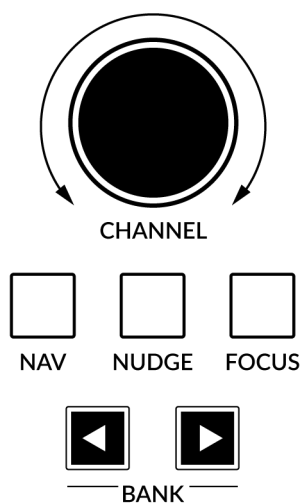

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Live, allowing you to navigate through your session.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.


*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK** < > keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Cursor Keys and Mode Key (Launching Clips and Zooming)

In the lower-right corner of UF8 are the Cursor keys with the Mode key in the centre. The function of these keys depends on the current view in Live.

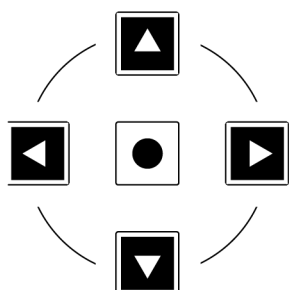

Session View

When working in Session View, the cursor keys allow you to navigate up, down, left and right to highlight the clip you want to launch and the Mode key in the middle allows you to launch clips.

Arrangement View

When the Mode key is lit the left and right cursor keys perform horizontal zooming in/out and the up and down cursor keys increase/decrease the track height of the currently selected track.

Pressing the Mode key again, the up and down cursor keys change the selected track and the left and right cursor keys move the cursor left/right.

Launch Scenes (Use the FINE / SHIFT key)



The key labelled **FINE / SHIFT** is programmed to execute the Launch Scene function in Live. Simply use the cursor keys to navigate to the scene you want and press the **FINE / SHIFT** key to launch the scene.


Cursory Keys - Transport Mode

As of SSL 360° v1.3, the cursory keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursory keys to their normal operation, press and hold the **CHANNEL** encoder again.

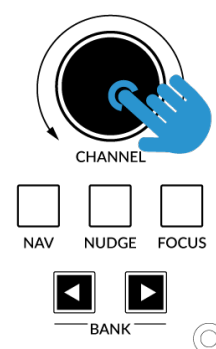

Press and hold the CHANNEL encoder to enter/exit Transport Mode

Assignment of Transport Commands


Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

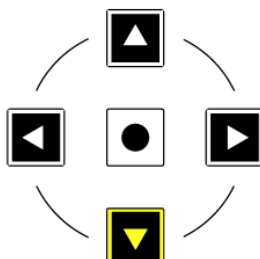

Launch Scenes (Use the FINE / SHIFT key)



The key labelled **FINE / SHIFT** is programmed to execute the Launch Scene function in Live. Simply use the cursor keys to navigate to the scene you want and press the **FINE / SHIFT** key to launch the scene.

Automation

The **AUTOMATION** keys in the bottom-left of UF8 do not apply for Live and are therefore disabled.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - BTA - Back to Arrangement
- 2 - Session/Arrangement Window Toggle
- 3 - Return Tracks - Toggles UF8 faders between controlling standard Audio/MIDI tracks or the Return Tracks.

QUICK



Page Keys

The **PAGE < >** keys allow you to move through the various parameter pages when controlling Devices (Plug-ins) within Live.



Flip

Pressing the **FLIP** key switches the functions of the V-Pots and faders. This is useful for various reasons, including tasks such as controlling Send Levels or Plug-in parameters on the faders instead of the V-Pots.



Send / Plugin 1-8 Keys

The **SEND / PLUGIN 1-8** keys are disabled by default but can be assigned to your favourite DAW commands or keyboard shortcuts using SSL 360.

Channel Key

Disabled by default but can be assigned to your favourite DAW commands or keyboard shortcuts using SSL 360.

The diagram illustrates the front panel of the Solid State Logic 8000 Series console, showing the layout of controls for 8 channels and various system functions. The console is divided into several main sections:

- Top Section:** Features 8 channels, each with a fader and a send/plugin section. The channels are labeled: Kick, Snare, Hats, Bass, Gtrs, Vox, BVs, and FX. Each channel has a fader with a scale from 0 to 100 and a send/plugin section with a fader and a plug-in button.
- Left Section:** Includes a 360° knob, a layer/quick button, and a send/plugin section with a fader and a plug-in button.
- Right Section:** Includes a selection mode section with buttons for NORM, REC, and AUTO, and a large channel knob with navigation buttons (NAV, NUDGE, FOCUS, BANK).
- Bottom Section:** Includes an automation section with buttons for OFF, READ, WRITE, TRIM, LATCH, and TOUCH.

The diagram is annotated with red circles and numbers 1 through 4, corresponding to the numbered callouts in the text:

1. Points to the PAN and FINE/O buttons in the Selection Mode section.
2. Points to the top layer/quick buttons.
3. Points to the top layer/quick buttons.
4. Points to the PLUGIN button in the Send/Plugin section.

Assigns the Pan controls to the V-Pots on UF8. Pushing a V-Pot will default it to the centre position.

Assigns the Send controls for the currently selected track to the V-Pots on UF8. Pushing a V-Pot will default the Send to off.

Allows you to set the I/O settings for each track on the V-Pots. Pressing the **I/O** key repeatedly will cycle through the following options: Input Type, Input Source, Output Type and Output Destination.

Live's own instruments and also third party audio plug-ins can be controlled directly from UF8. Once you have pressed the **PLUGIN** key to enter this mode, do the following:


- SSL UF8 User Guide

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys 1-5 in the **SOFT KEYS** section.


SOFT KEYS

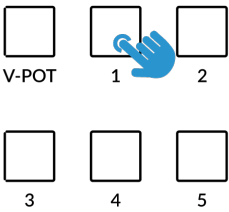


User Bank 1

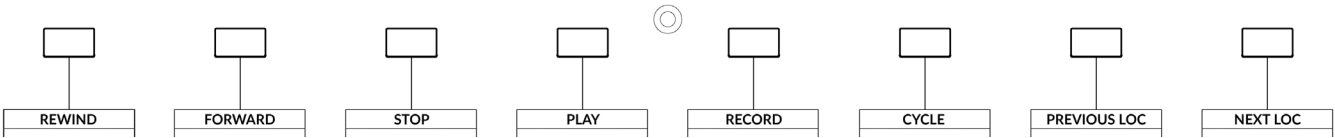

User Bank 2

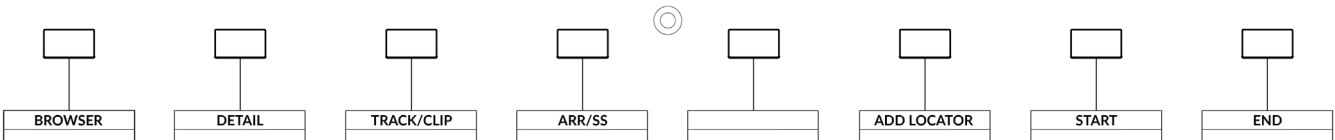

User Bank 3

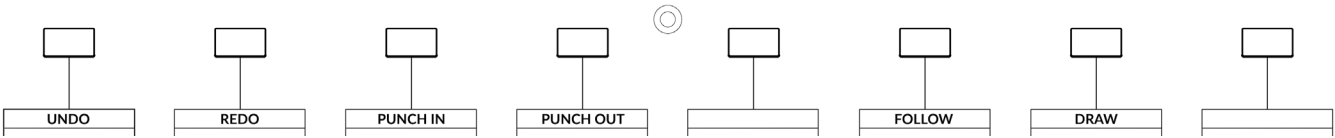

User Bank 4

Unassigned

User Bank 5

Unassigned

Assignable DAW Commands List - Live

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys.


I/O
Pan
Page Left
Send
Device
Page Right
Flip
Return Tracks
Shift
Option
Control
Alt
Arr/SS (Arrangement/Session View Toggle)
Track/Clip
Browser
Detail
Undo
BTA (Back To Arrangement)
Draw
Redo
Add Locator
Follow
Previous Loc (Locator)
Next Loc (Locator)
Cycle
Punch In
Punch Out
Start
End
Rewind
Forward
Stop
Play
Record
Launch Clip
Launch Scene

Studio Pro/One with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Studio Pro/One profile on LAYER 1 of UF8. If you wish to configure Studio Pro/One on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Studio Pro/One** using the drop-down list. If Studio Pro/One is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

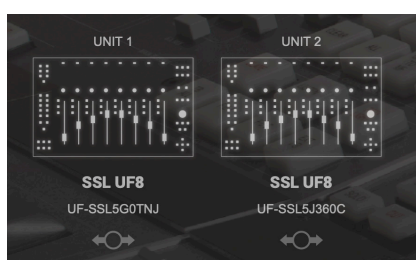

STEP 1 : Open SSL 360° application. Connected UF8s appear on-screen.

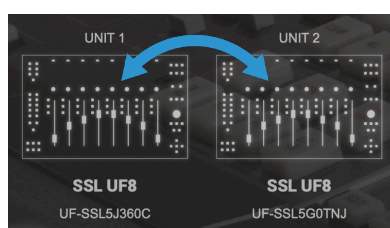


STEP 2 : Click and drag to re-order units if necessary.

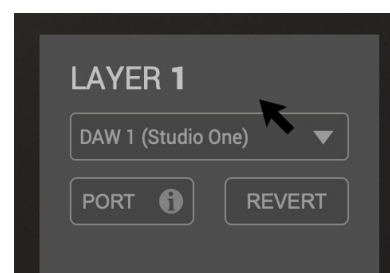


STEP 3 : Select the default Studio Pro/One DAW profile from the UF8 page.

Studio Pro/One Setup


4. Open Studio Pro/One. Go to **Preferences > External Devices** and click on the **Add...** button.
5. In the **Add Device** window, select **Mackie Control** and set **Receive From** to **SSL V-MIDI Port 1 Source** and set **Send To** to **SSL V-MIDI Port 1 Destination**. Click OK.
6. If you have multiple UF8s, go back to the **Add Device** window and select **Mackie Control Extender** for subsequent UF8s, incrementing the **SSL V-MIDI Port** each time - e.g. the second UF8 would be set to **SSL V-MIDI Port 2** for **Receive From** and **Send To**.

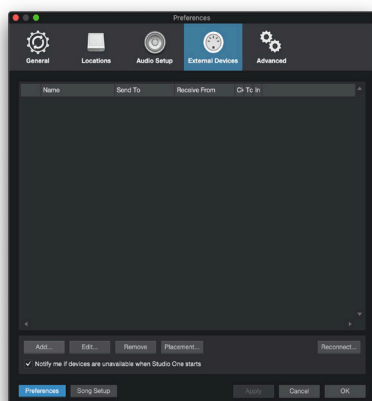

STEP 4 : Go the Preferences menu and click on the External Devices tab.

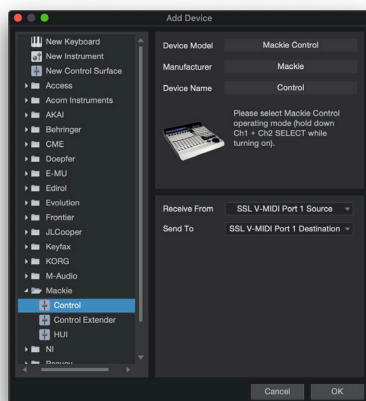


STEP 5 : Add a Mackie Control and configure for SSL V-MIDI Port 1 on Receive From and Send To.

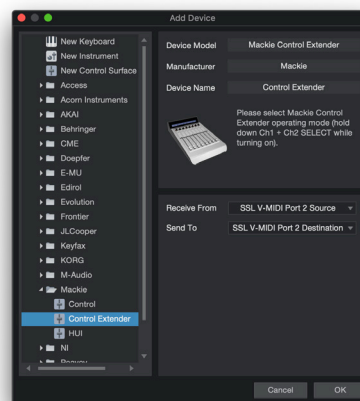


STEP 6 : If you have multiple UF8s, add Mackie Control Extender units and increment SSL V-MIDI Port number each time.

7. As the final step when setting up multiple UF8s, you need to move the Mackie Control and Mackie Control Extender you have configured into what Studio Pro/One refers to as a **Control Surface Group**. To do this, click on the **Placement...** button in the **Preferences > External Devices** window and click and drag the Mackie Control and Mackie Control Extender images into **Group 1**.

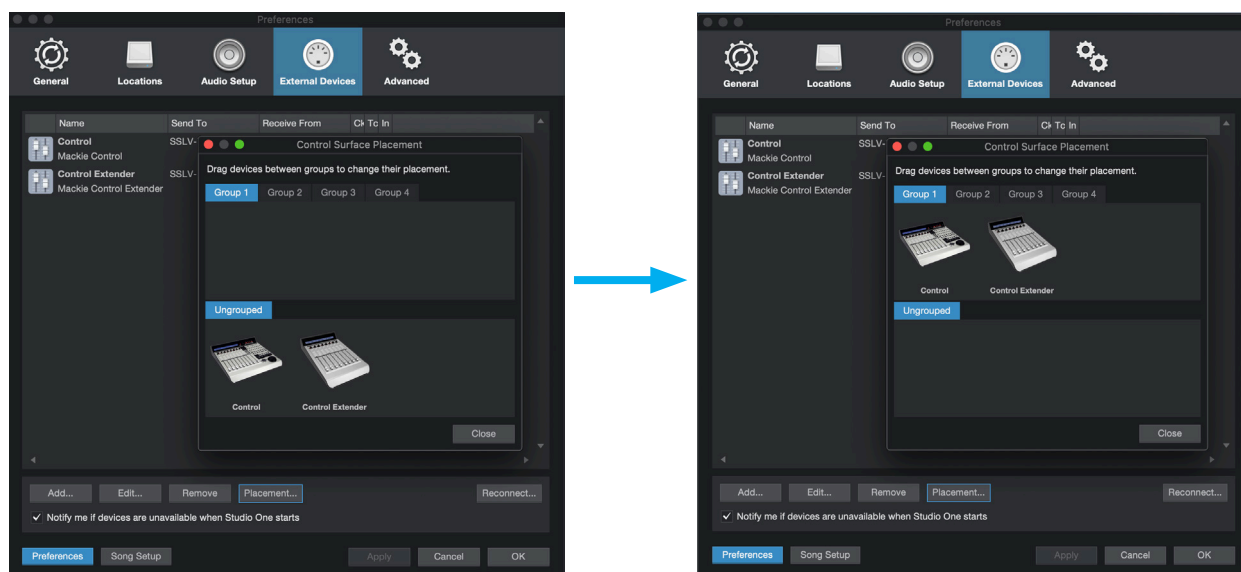

STEP 7 : Go to Control Surface Placement setup and click and drag the Mackie Control and Mackie Control Extender(s) and move them up into Group 1.

LCD Layout

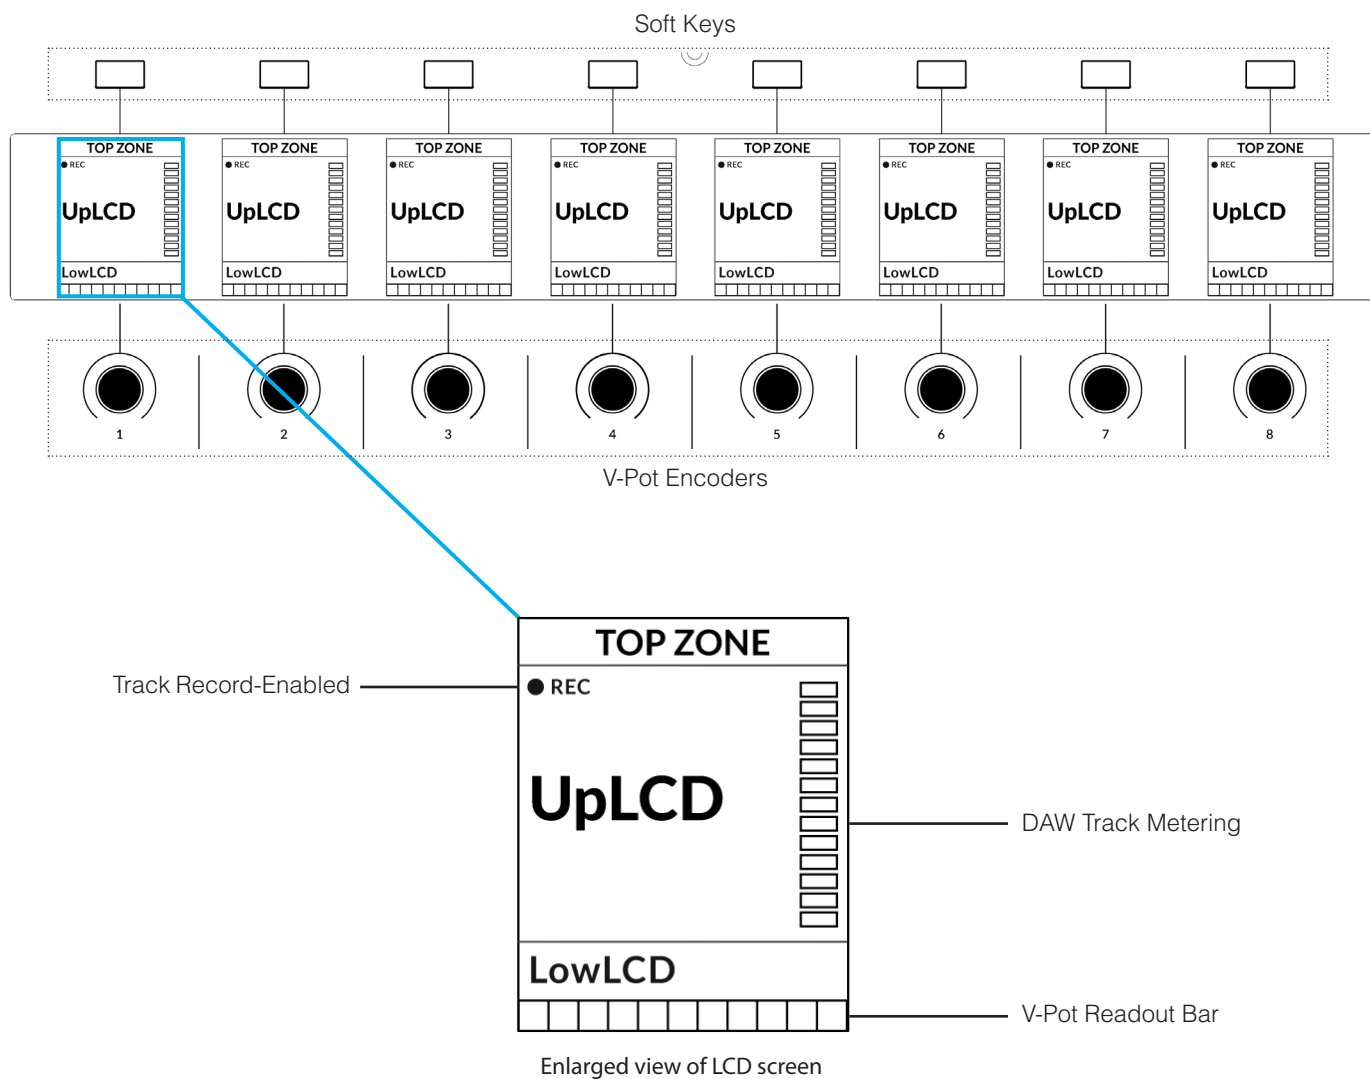

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In Studio Pro/One, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 6-character track name or parameter being controlled by the V-Pot, depending on the current mode.

LowLCD - Displays a fader value or value readout for the parameter currently assigned to the V-Pot, depending on the current mode.

DAW Track Metering - 12-segment track metering + clip.

V-POT Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.


Tutorial

This section guides you through using UF8 with Studio Pro/One.

Before You Start...

The information in this Studio Pro/One Tutorial sets out the key features of using UF8 with Studio Pro/One.

Any aspect not covered in this guide can be found in the "**Studio Pro/One - Mackie Control Support**" document, available from the Presonus website.

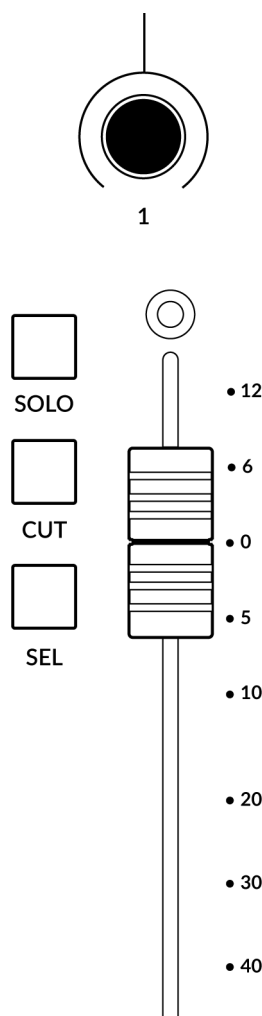

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active and is typically used for tasks such as controlling Pan position, Pend levels and Plug-in parameters

The V-Pot has a push function, which is typically used for defaulting the position of the parameter being controlled.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Studio Pro/One tracks and are great for balancing mix levels and writing automation.

When the V-Pots are controlling Pans, the LowLCD section displays a fader dB readout.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Studio Pro/One.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.


NORM - The **SEL** keys select a track in Studio Pro/One.

REC - The **SEL** keys act as record-arm keys.

AUTO - Disabled. This key only applies for Pro Tools profiles.


The secondary labels **CLEAR**, **ALL** and **ZERO** do not apply for Studio Pro/One's UF8 integration.

SELECTION MODE

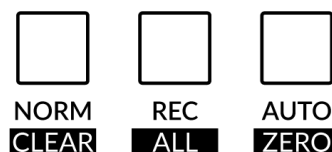

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

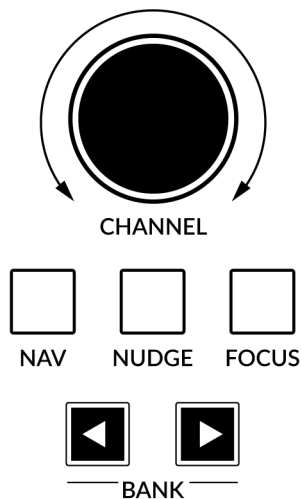

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Studio Pro/One, allowing you to navigate through your session.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.


*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK** < > keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Cursor Keys and Mode Key

In the lower-right corner of UF8 are the Cursor keys with the Zoom key in the centre.

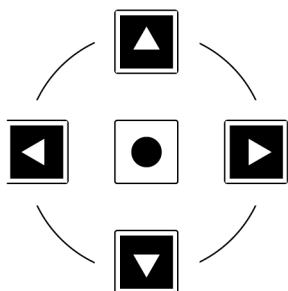

When the Zoom key is lit the left and right cursor keys perform horizontal and vertical track zooming.

Pressing the Zoom key again, the up and down cursor keys change the selected track and the left and right cursor keys change the selected audio clip in the Arrangement View.

Cursory Keys - Transport Mode

As of SSL 360° v1.3, the cursory keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursory keys to their normal operation, press and hold the **CHANNEL** encoder again.

Assignment of Transport Commands



Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

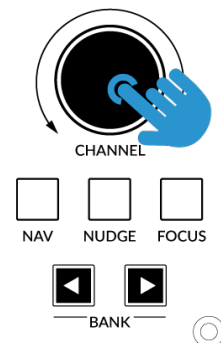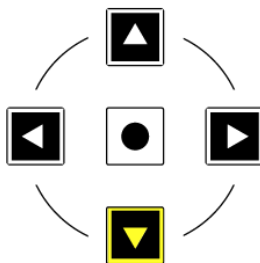

Press and hold the **CHANNEL** encoder to enter/exit Transport Mode


Solo Clear (Use the FINE / SHIFT key)



The key on UF8 labelled **FINE / SHIFT** is programmed to execute the Solo Clear function in Studio Pro/One.


Automation

You can select the automation mode for each track directly from UF8. To do this, select a track you want to change the automation mode of using a **SEL** key. Then, press the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8. The **TRIM** key does not apply for Studio Pro/One and is therefore disabled.

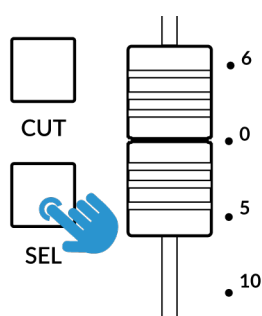

STEP 1: Select a track using SEL key

AUTOMATION

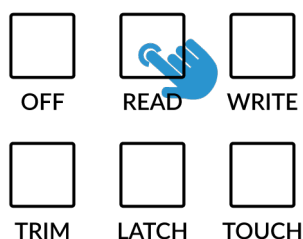

STEP 2: Select the desired automation state.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Toggles the Console Window on/off
- 2 - Toggles the Inputs View on/off within the Console Window.
- 3 - Open/Closes the Channel Editor Window - used for plug-ins.

QUICK



Page Keys

The **PAGE < >** keys select the previous and next device in an open plug-in editor (Channel Editor Window).




Flip

Pressing the **FLIP** key swaps the functions of the V-Pots and faders. This is useful for various reasons, including tasks such as controlling Send levels or Plug-in parameters on the faders instead of the V-Pots.



V-Pot Assignment Modes

UF8 offers direct access to Studio Pro/One's five main Mackie Control V-Pot assignment modes. These V-Pot assignment modes are accessed via the keys labelled below: 1. **PAN**, 2. **SEND**, 3. **INSERT BYPASS**, 4. **TRACK** and 5. **PLUGIN**.

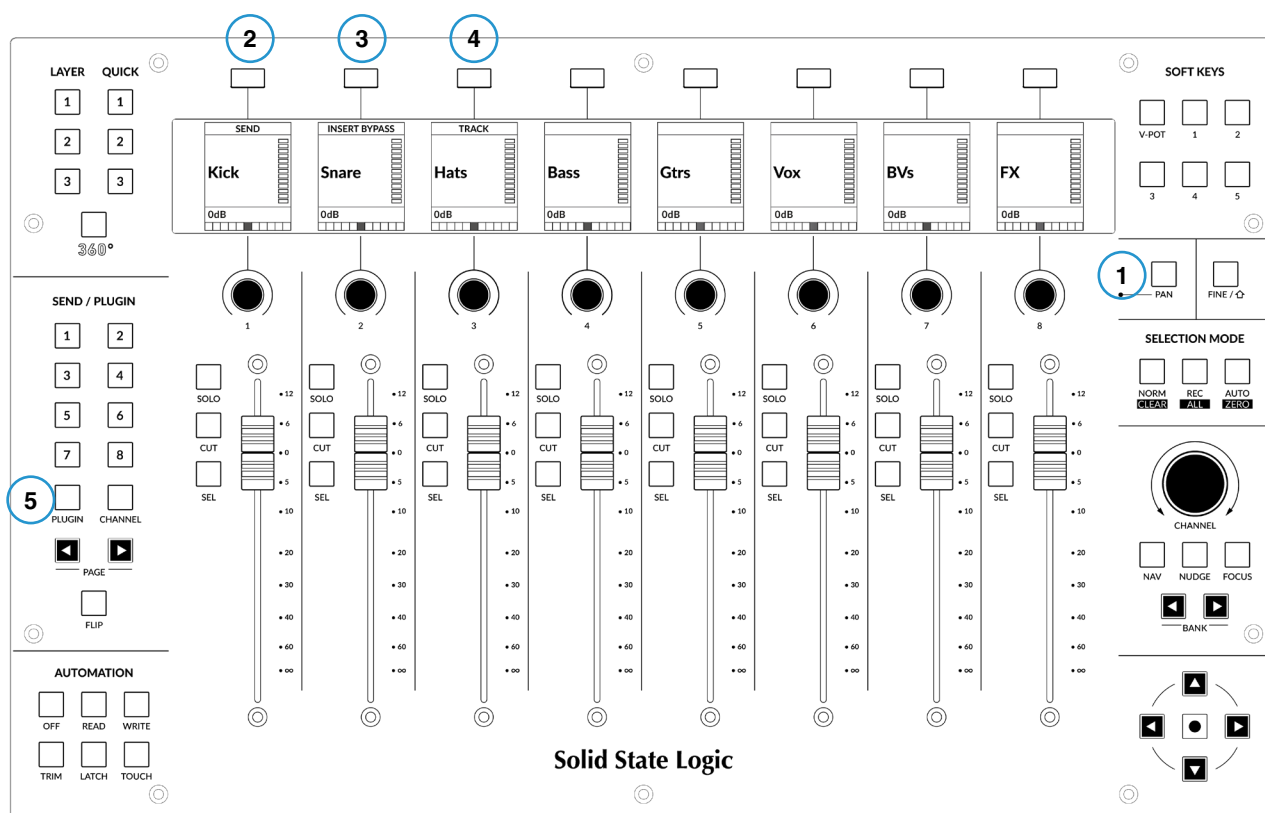


1 - PAN

Assigns the Pan controls to the V-Pots on UF8. Pushing a V-Pot will default the Pan position to centre.


2 - SEND

Assigns the Send controls to the V-Pots. Pushing the V-Pot defaults the Send to 0 dB.

The first press of the **SEND** key will place the Sends of the selected track across the V-Pots and their values will be displayed in the LowLCD zone. The **CHANNEL** key on UF8 will also light.

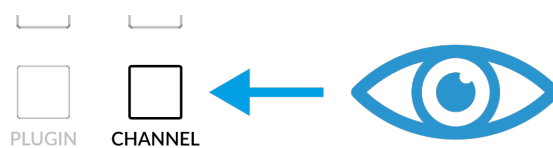


The **CHANNEL** key lights to let you know the V-Pots are controlling the Sends on the selected track.

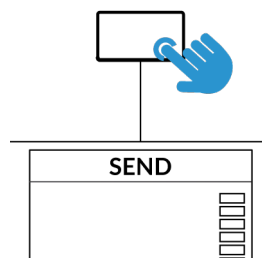

Repeatedly pressing the **SEND** key will cycle the V-Pots through controlling a specific Send 'slot' across all tracks at once. The particular send slot being controlled is reflected by the lighting of the **SEND / PLUGIN** Number Keys 1-8 on the left-hand side.

Repeatedly press the **SEND** key to cycle the V-Pots into controlling a particular Send slot across all tracks.

As you repeatedly press the SEND key the number of the Send 'slot' the V-Pots are controlling is reflected by UF8 lighting the corresponding number key.

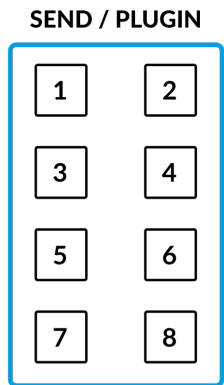

3 - INSERT BYPASS

The V-Pots allow you to Bypass FX Insert Slots for the selected track.

4 - TRACK

The V-Pots allow you to control a number of functions of the selected track:

- V-Pot 1 - Bypass All FX Insert Slots
- V-Pot 2 - Monitor on/off
- V-Pot 3 - Input Source
- V-Pot 4 - Output Source
- V-Pot 5 - Send Slot 1 Bypass
- V-Pot 6 - Send Slot 2 Bypass
- V-Pot 7 - Send Slot 3 Bypass
- V-Pot 8 - Send Slot 4 Bypass

5 - PLUGIN

Sets the V-Pots to 'Control Link' Mode.

In Studio Pro/One, you customise which plug-in parameters are controlled on the V-Pots of UF8 for each and every plug-in you want to control. When you press the **PLUGIN** key for the first time, no plug-in parameters will be available because you need to configure whilst in 'Control Link' Mode.


We'll walk through the process on the following pages...

Setting Up Plug-in Control

1. Open up a plug-in you want to configure to be controlled by UF8's V-Pots and click the cog near the top-right.




2. Click the small down arrow near the top-left and make sure 'Recently Touched' is ticked from the drop-down list.

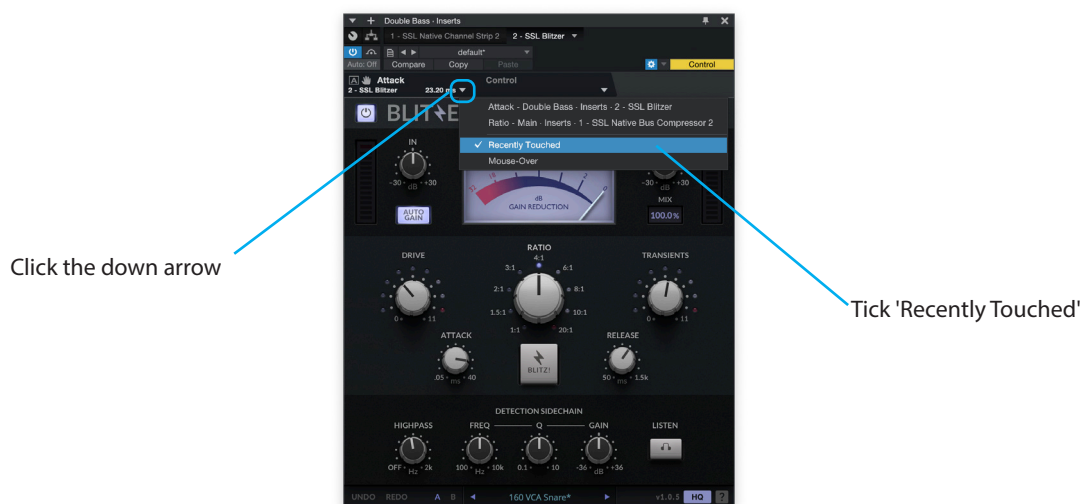


- Click the small down arrow across to the right and select 'Control' from the drop-down list.



- The External Devices Window will appear. Each blue block within the window represents a V-Pot.

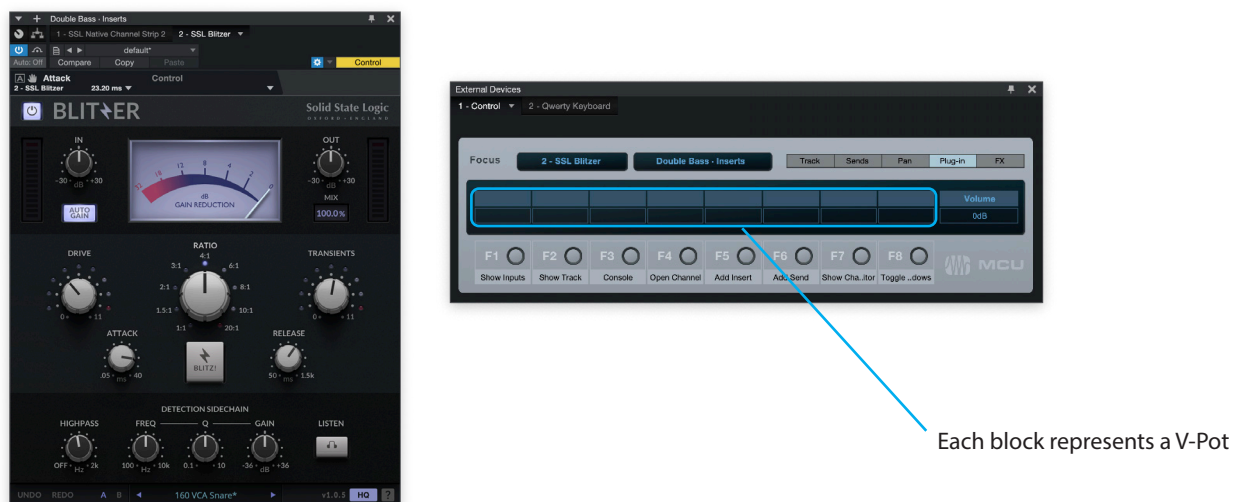

- With your mouse, adjust a plug-in parameter that you want to assign to one of the V-Pots.

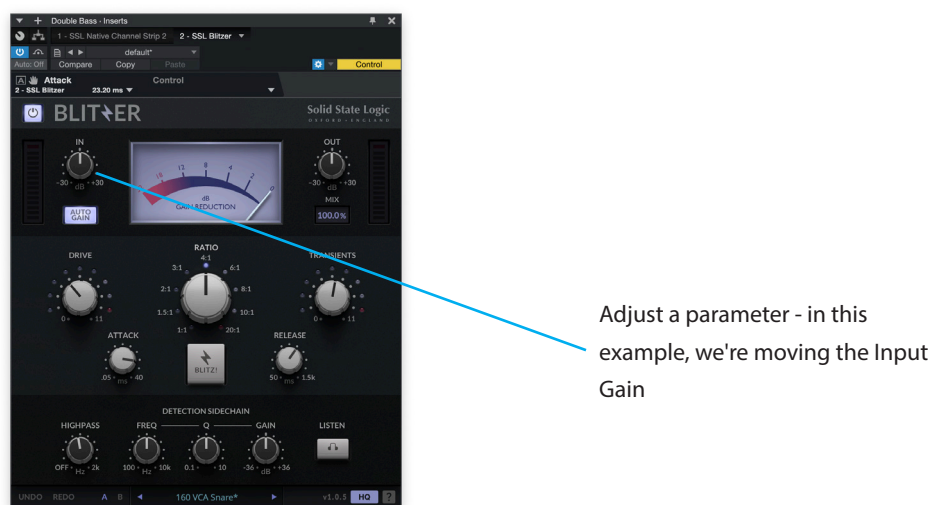

6. Click down on the small hand symbol and drag it across to one of the blocks in the External Devices window.

Click and drag
from the small
hand symbol
into the External
Devices window



7. The control has been successfully assigned to the first V-Pot. Repeat the process with other parameters and other plug-ins as you desire. Use the **5-8** key to access V-Pots 5-8.




Successfully assigned control to V-Pot 1

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

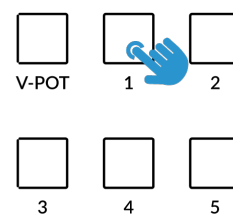


User Bank 1

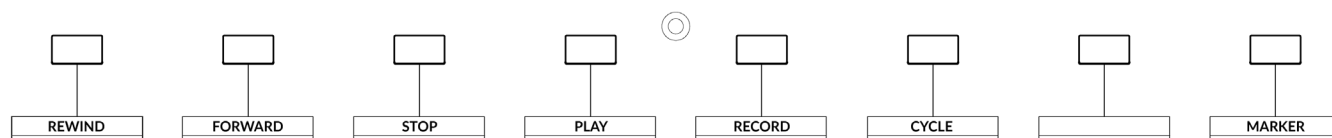


User Bank 2

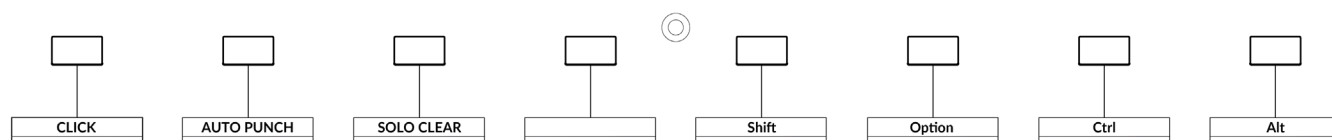


User Bank 3

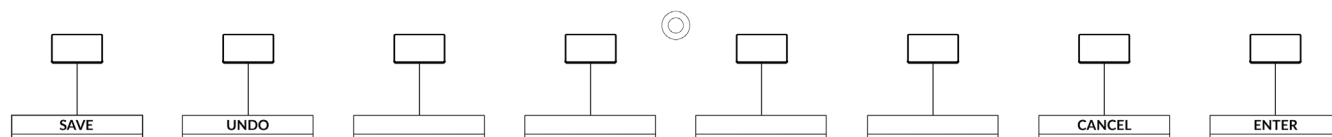

User Bank 4

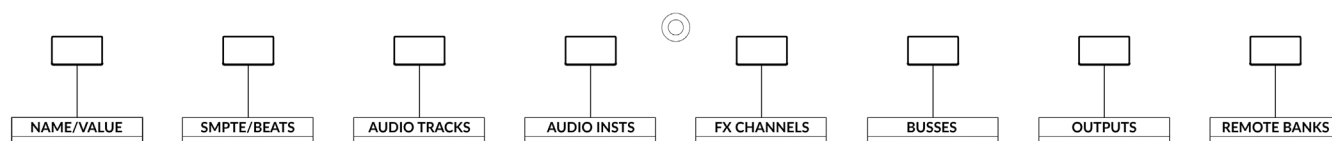


User Bank 5 (F1-F8 Function keys)

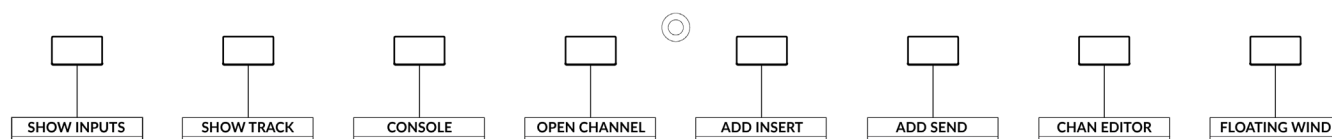

Function Select Keys 1-8 (F1 - F8)

User Bank 5 is pre-assigned to F keys 1-8. The functions of the F keys can be changed in Studio Pro/One in the External Devices window (the same window used to assign plug-in parameters to V-Pots). If you have changed an F key away from its default assignment, you can of course re-label the key in SSL 360° using the Short Label text entry box, so the correct function names show on UF8's LCDs.

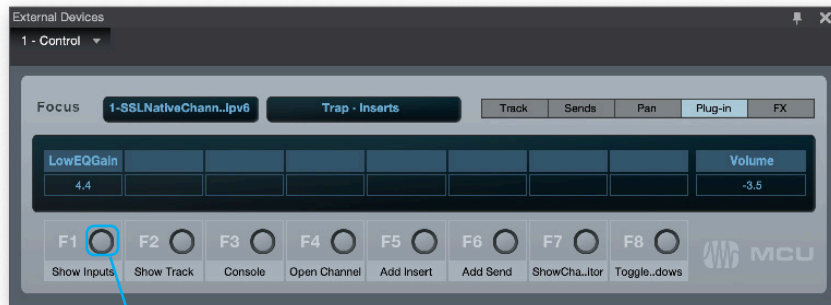

Right-click on the button and click 'Assign Command...' to change the function of any of the F keys.

Assignable DAW Commands List - Studio Pro/One

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys. Labels in brackets are added to clarify what a command does when it may not be obvious according to the original Mackie Control label.


Track	Play Foot-switch
Pan Sur	Record Foot-switch
EQ (Insert Bypass)	
Send	
Plugin	
Flip	
Global View	
Name/Value	
SMPTE/Beats	
F1 (Show Inputs)	
F2 (Show Track)	
F3 (Console)	
F4 (Open Channel)	
F5 (Add Insert)	
F6 (Add Send)	
F7 (Show Channel Editor)	
F8 (Toggle Floating Window)	
Audio Tracks	
Audio Instruments	
Aux (FX Channels)	
Busses	
Outputs	
User (Remote Banks)	
Shift	
Option	
Control	
Alt	
Read/Off	
Write	
Touch	
Latch	
Save	
Undo	
Cancel	
Enter	
Marker	
Cycle	
Drop (Auto Punch)	
Click	
Solo (Clear)	
Forward	
Rewind	
Stop	
Play	
Record	

LUNA with UF8 - Tutorial


The following tutorial guides you through configuring and using the default LUNA profile on LAYER 1 of UF8. If you wish to configure LUNA on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **LUNA** using the drop-down list. If LUNA is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

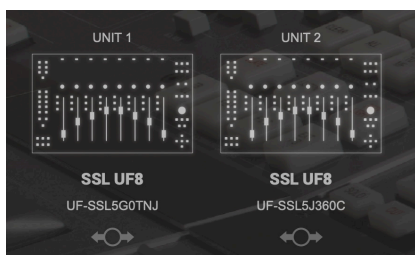

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

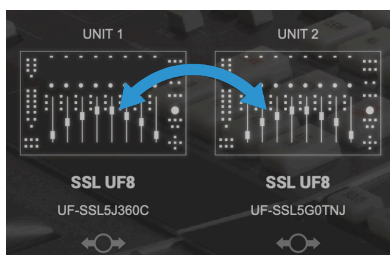


STEP 2 : Click and drag to re-order
units if necessary.

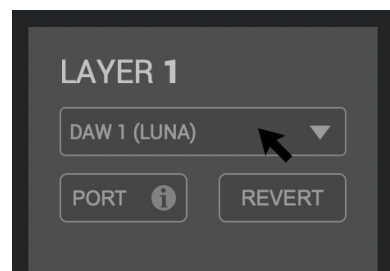


STEP 3 : Select the default LUNA
DAW profile from the UF8 page.

LUNA Setup

4. Open the LUNA sidebar by clicking the UA diamond logo on the left of the screen, and clicking **Settings**, or choose **LUNA > Preferences** from the app menu. **Click Controllers**.
5. In one of the MIDI Control Surface rows, click under **Input Device** and select **SSL V-MIDI Port 1 Source** and under **Output Device** select **SSL V-MIDI Port 1 Destination**.
6. Select the box in the **ON** column to enable the control surface.
7. If you have multiple UF8s, repeat the process on the next row down, incrementing the **SSL V-MIDI Port** each time - e.g. the second UF8 would be set to **SSL V-MIDI Port 2**. Also ensure that you select the box in the **EXTENDER** column.
8. Make sure **BANK TO SELECTED TRACK** is set to **ON**.

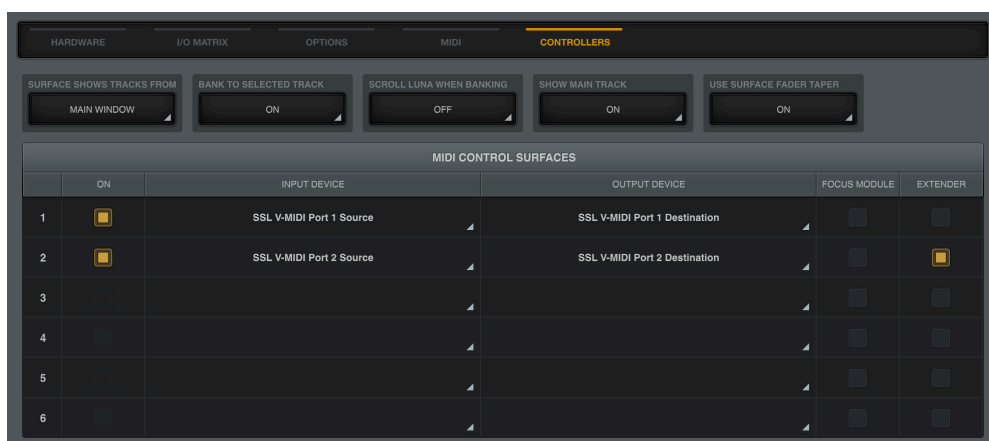

LCD Layout

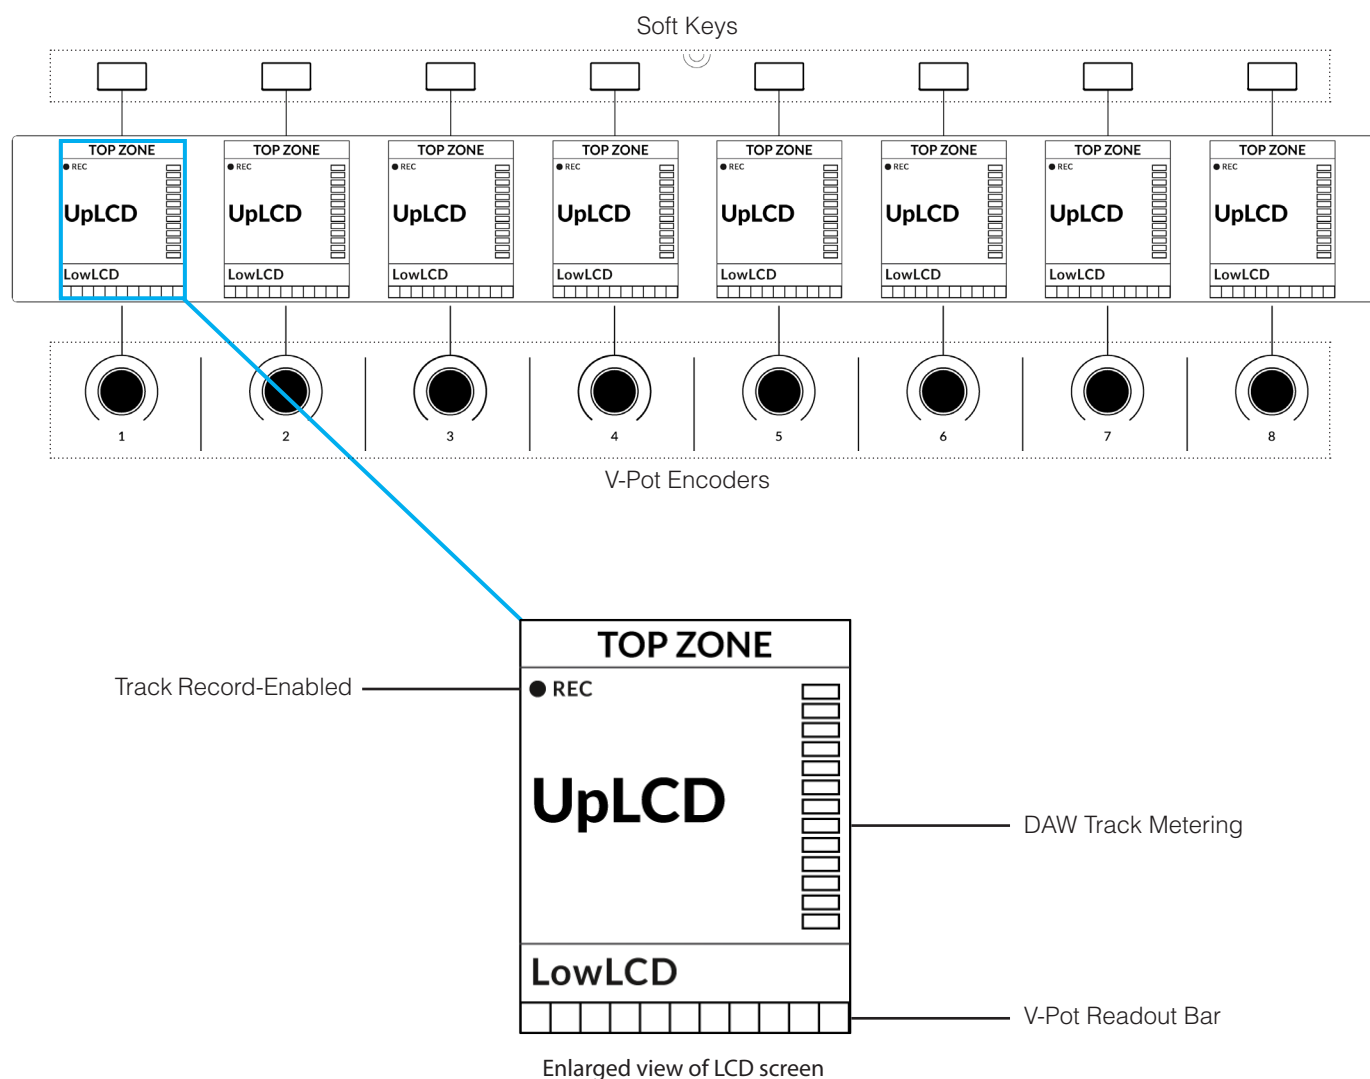

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In LUNA, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 6-character track name or parameter being controlled by the V-Pot, depending on the current mode.

LowLCD - Displays a fader value or value readout for the parameter currently assigned to the V-Pot, depending on the current mode.

DAW Track Metering - 12-segment track metering + clip.

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial


This section guides you through using UF8 with LUNA.

Before You Start...

The information in this LUNA Tutorial sets out the key features of using UF8 with LUNA.

Any aspect not covered in this guide can be found on Universal Audio's website

<https://help.uaudio.com/hc/en-us/articles/4406777753236-LUNA-Control-Surface-Compatibility-Setup>

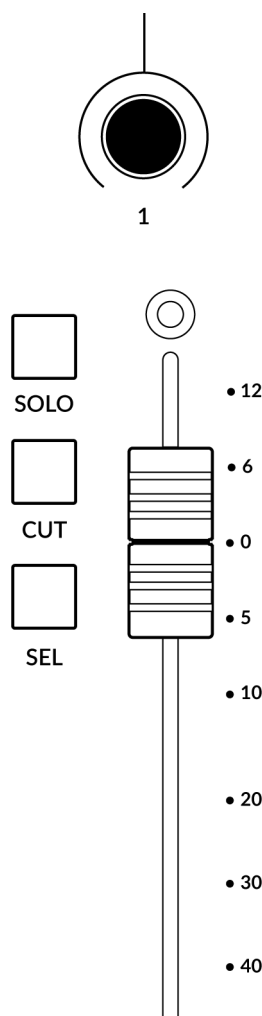

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active and is typically used for tasks such as controlling Pan position, Sends Levels etc.

The V-Pot has a push function, which is typically used for defaulting the position of the parameter being controlled.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your LUNA tracks and are great for balancing mix levels and writing automation.

When a fader is moved, the LowLCD section displays a fader dB readout.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in LUNA.

Selection Mode


The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.

NORM - The **SEL** keys select a track.

REC - The **SEL** keys act as record-arm keys. Or, if the track is a Bus or Main Track, the **SEL** keys act as a SPILL function.

AUTO - Disabled. This key only applies for Pro Tools profiles.


SELECTION MODE

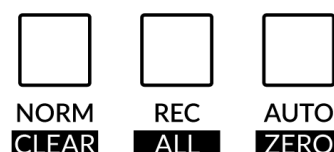

The secondary labels **CLEAR**, **ALL** and **ZERO** do not apply for LUNA.

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

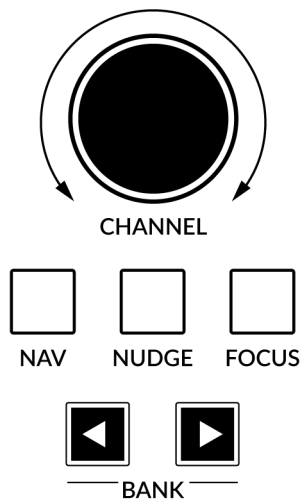

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in LUNA, allowing you to navigate through your session.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.


*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK** < > keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Cursor Keys and Mode Key

In the lower-right corner of UF8 are the Cursor keys with the Zoom key in the centre.

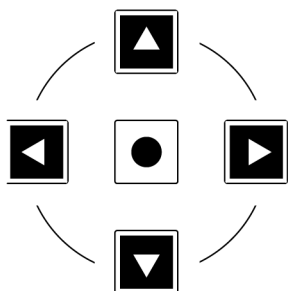

When the Zoom key is lit the left and right cursor keys zoom out and in respectively. The up and down cursor keys increase and decrease all track heights respectively.

Pressing the Zoom key again, the up and down cursor keys change the selected track and the left and right cursor keys move you between markers.

Cursor Keys - Transport Mode

In SSL 360° v1.3 and above, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

Assignment of Transport Commands



Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

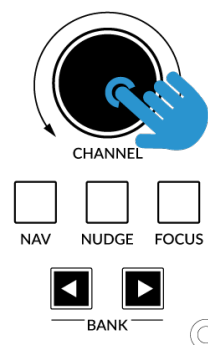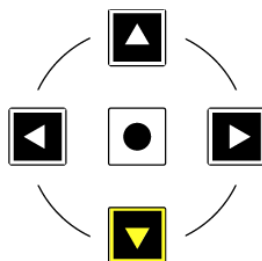


Press and hold the **CHANNEL** encoder to enter/exit Transport Mode

Sends and Cues

In the **V-POT SOFT KEY** bank, you'll find access to the **SENDS** and **CUES** commands on the first two keys. These assign the V-Pots to LUNA's Sends and Cues.


You can cycle through the various modes for controlling sends by repeatedly pressing each button. Or you can push and hold either key and whilst keeping the key held, push the relevant V-Pot to control a particular send slot.

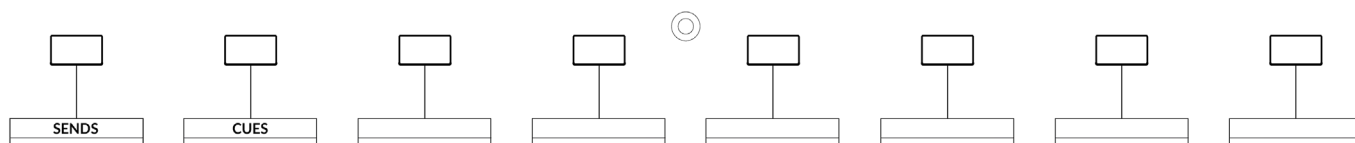

Plug-ins

You can control Tape, Console and Insert plug-ins in LUNA:

- Select the track you want to affect using the **SEL** key on UF8.
- Press the **PLUGIN** key on UF8.
- Choose **Tape/Console/Inserts** by pushing V-Pot 1/2/3.
- For Tape or Console, the parameters will be assigned across the V-Pots. Use the left and right cursor keys to navigate through pages of parameters. Use the **FLIP** key to control the parameters on the faders.
- For Inserts, you will be taken into a further sub-menu, where each plug-in slot is laid across the V-Pots. Push the V-Pot for the plug-in you wish to control and its parameters will be assigned to the V-Pots. Use the left and right cursor keys to navigate through pages of parameters. Use the **FLIP** key to control the parameters on the faders.
- Press the **PLUGIN** key repeatedly to come back up through each sub menu and control a different insert slot.

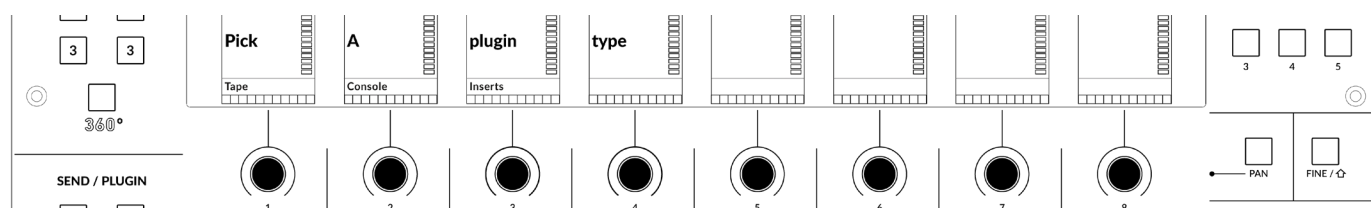


FINE/SHIFT KEY



The key on UF8 labelled **FINE / SHIFT** is programmed to execute the the Shift command in LUNA (ignore the FINE part of the label).


Automation

You can select the automation mode for each track directly from UF8. To do this, select a track you want to change the automation mode of using a **SEL** key. Then, press the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8. The **WRITE** key does not apply for LUNA and is therefore disabled.

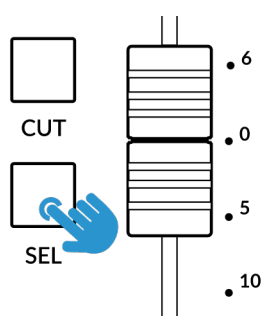

STEP 1: Select a track using SEL key

AUTOMATION

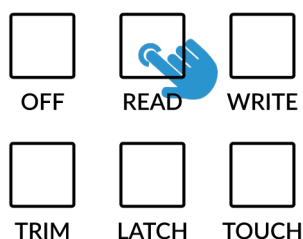

STEP 2: Select the desired automation state.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Toggles between timeline and mixer views
- 2 - Spills the Main Bus
- 3 - Solo Clear - clears all Solos

QUICK



Send 1-8 and Channel Button

The **SEND 1-8** and **CHANNEL** buttons are disabled by default but you can assign them to your favourite DAW commands or keyboard shortcuts using SSL 360.

Page Keys

The **PAGE < >** keys have no function in LUNA and are therefore disabled.

Flip

Pressing the **FLIP** key swaps the functions of the V-Pots and faders. This is useful for various reasons, including tasks such as controlling Send levels and plug-in parameters.




User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

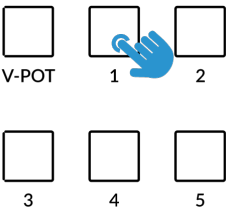

User Bank 1

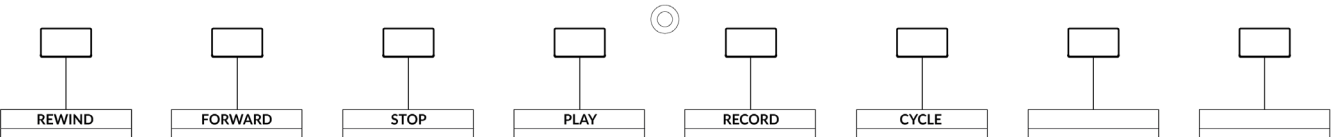


User Bank 2

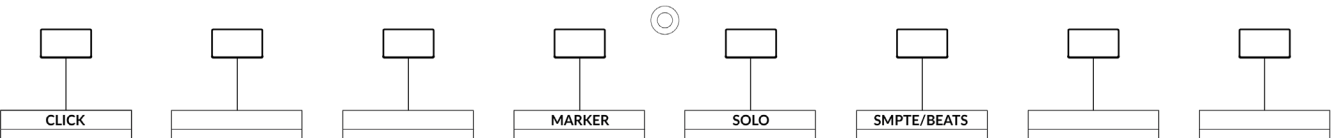

User Bank 3 & 4

Unassigned

User Bank 5

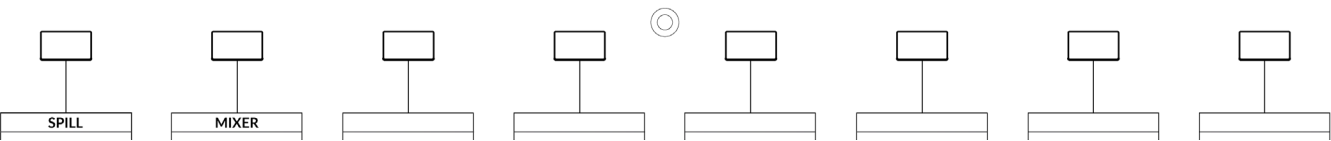

Assignable DAW Commands List - LUNA

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys. "Has no function" has been appended for MCU commands that are not implemented in LUNA's MCU control implementation.


Track - Has no function	Stop
Pan/Surround (Left-right Pan)	Play
Cues	Record
Sends	Play Foot-switch - Has no function
Plugin - Has no function	Record Foot-switch - Has no function
Flip	
Global View - Has no function	
Name/Value - Has no function	
SMPTE/Beats	
F1 (Mixer View)	
F2 (Spill Main Bus)	
F3- Has no function	
F4 - Has no function	
F5 - Has no function	
F6 - Has no function	
F7 - Has no function	
F8 - Has no function	
MIDI Tracks - Has no function	
Inputs - Has no function	
Audio Tracks - Has no function	
Audio Instruments - Has no function	
Aux - Has no function	
Busses - Has no function	
Outputs - Has no function	
User - Has no function	
Shift	
Option	
Control	
Alt	
Read	
Write	
Touch	
Latch	
Trim	
Save - Has no function	
Undo	
Cancel - Has no function	
Enter - Has no function	
Marker	
Cycle	
Drop (Auto Punch) - Has no function	
Click	
Solo (Clear)	
Forward	
Rewind	

Pyramix with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Pyramix profile on LAYER 1 of UF8. If you wish to configure Pyramix on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Pyramix** using the drop-down list. If Pyramix is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

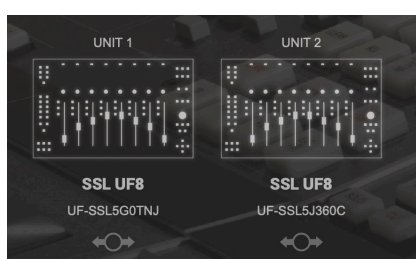

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

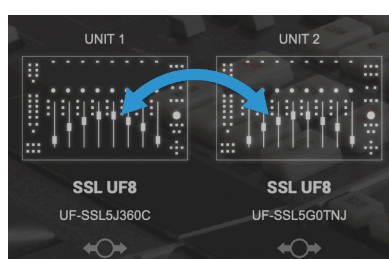


STEP 2 : Click and drag to re-order
units if necessary.

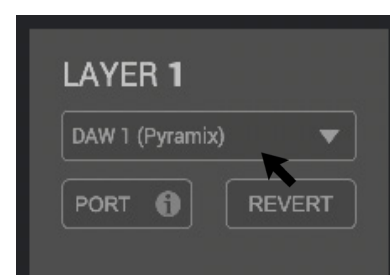


STEP 3 : Select the default Pyramix
DAW profile from the UF8 page.

Pyramix Setup


4. Open Pyramix and access the **Settings > All Settings** menu. Go to **Remote Control > Controller** and click on **Add**.
5. Enter a name for the controller and set the Driver to **OASIS**.
6. Click on the Properties button.
7. In the **OASIS** Configuration window, set the Transport to **EMC**.
8. Click on the Properties button.
9. Set **SSL V-MIDI Port 1** for both **Midi In** and **Midi Out ports**. In this list, ensure that any SSL V-MIDI Ports you need are assigned e.g. If you have 1 UF8, set SSL V-MIDI Port 1 input and output. If you have 2 UF8s, set the second port (second UF8) to SSL V-MIDI Port 2 input and output.
10. In the Controller drop-down menu, please select **SSL UF8 MackieCtrl**. Press OK to close the different windows.

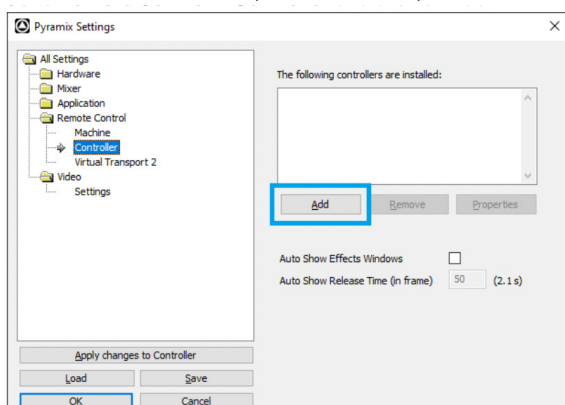


STEP 4 : Access the Settings > All Settings menu.
Go to Remote Control > Controller, click on Add.

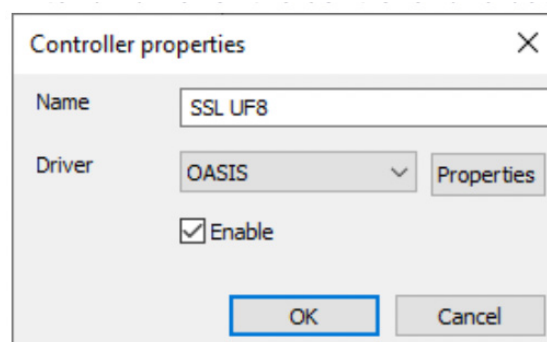

STEP 5 : Enter a name for the controller and set the
Driver to OASIS.

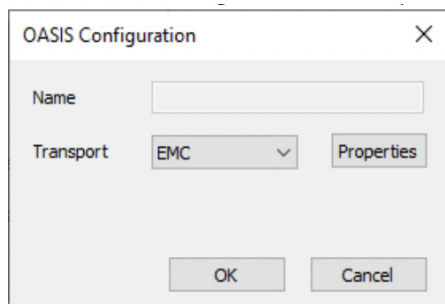


STEP 7 : Click on the Properties button.
In the OASIS Configuration window, set
the Transport to EMC.

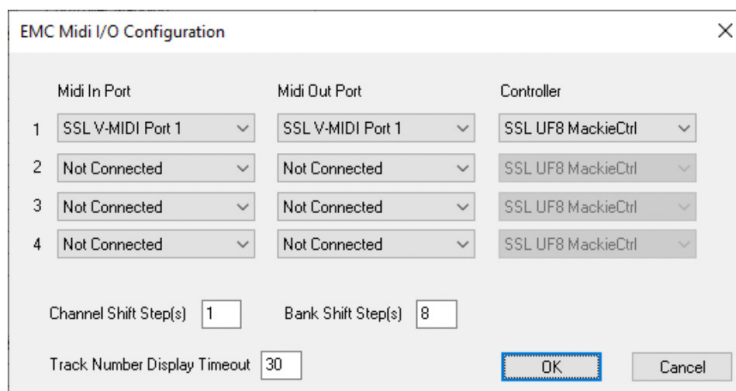

STEPS 8, 9, 10 : Click on the Properties button. Set SSL V-MIDI Port
1 for both Midi In and Midi Out ports. If you have 2 UF8s, set the
second port (second UF8) to SSL V-MIDI Port 2 input and output.
In the Controller drop-down menu, select SSL UF8 MackieCtrl. Press
OK to close the different windows.

LCD Layout

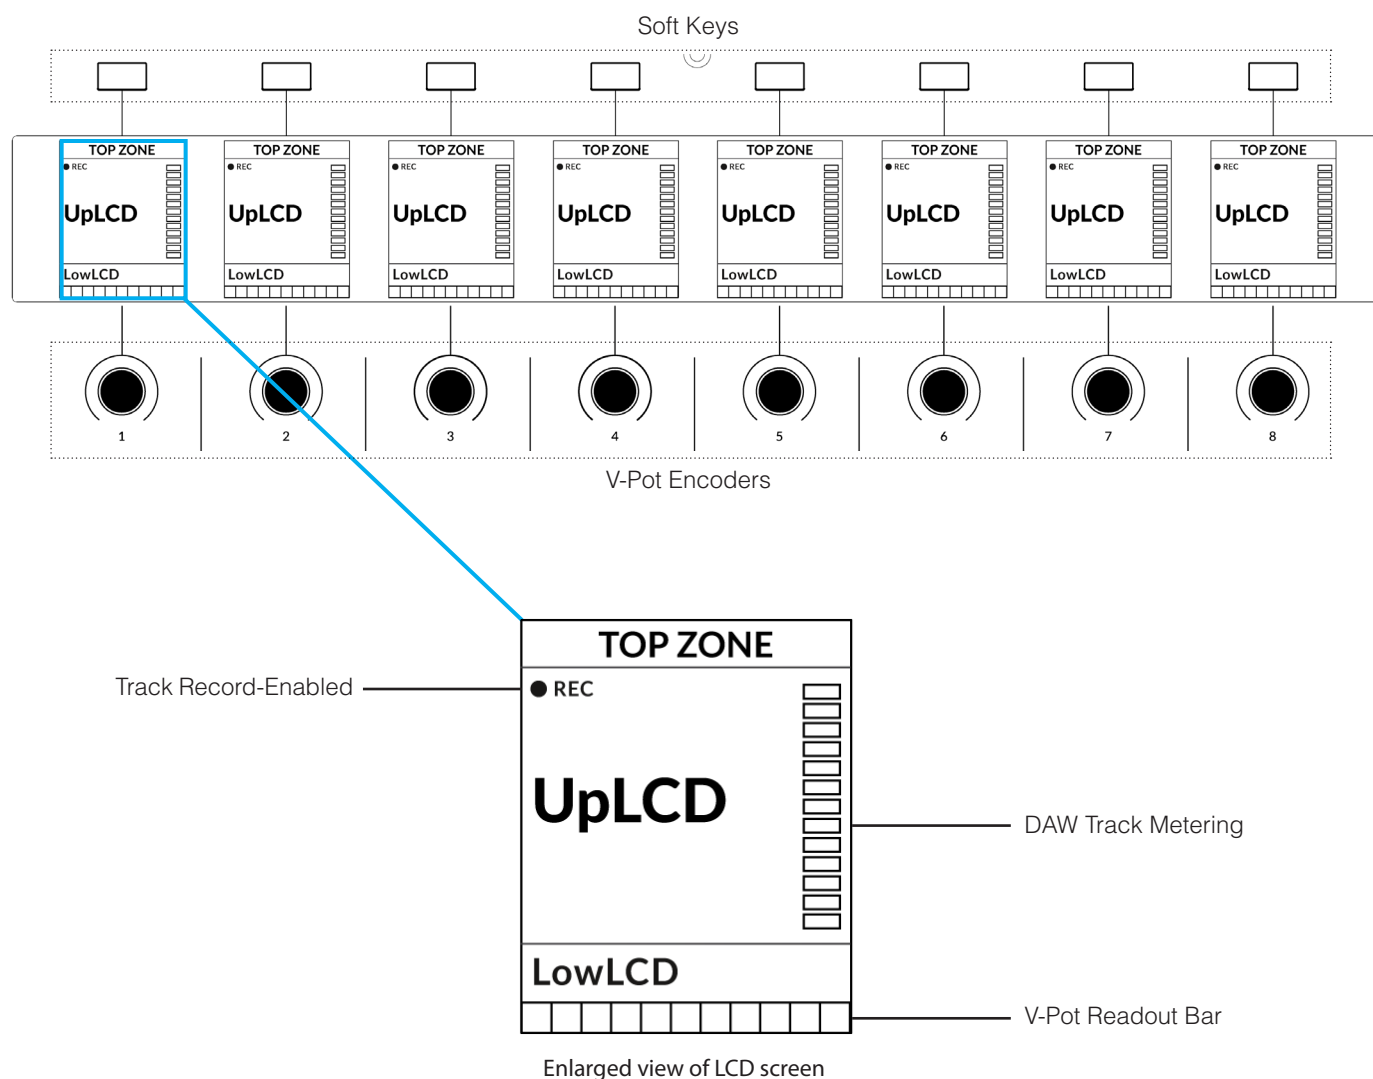

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In Pyramix, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 6-character track name or parameter being controlled by the V-Pot, depending on the current mode.

LowLCD - Displays a fader value or value readout for the parameter currently assigned to the V-Pot, depending on the current mode.

DAW Track Metering - 12-segment track metering + clip.


V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial

This section guides you through using UF8 with Pyramix.

Before You Start...

SSL UF8 MackieCtrl implementation has been available since Pyramix 14.0.4 Hotfix but please ensure that you are running the latest version of Pyramix, as it may have addressed any MCU bugs present in the 14.0.4 Hotfix version.

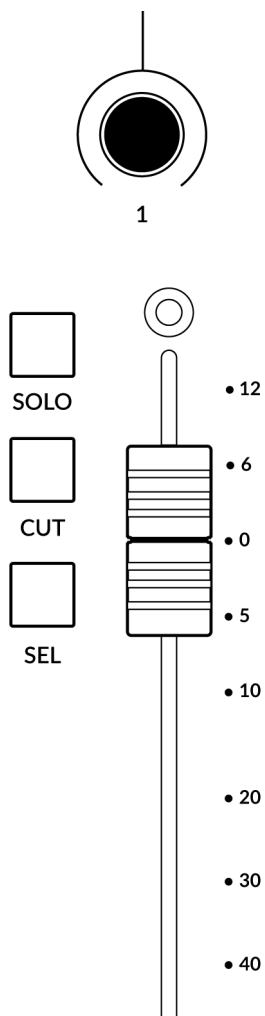

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active and is typically used for tasks such as controlling Pan position, Sends Levels etc.

The V-Pot has a push function, which is typically used to inform the automation engine that the parameter being controlled is released.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Pyramix strips. The surface silkscreen matches the Pyramix fader scale.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each strip in Pyramix. Only one strip can be selected using the **SEL** key at a time.

Selection Mode


The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.

NORM - The **SEL** keys behave as the standard strip/track selection function of Pyramix.

REC - The **SEL** keys become track record-arm buttons. **Shift+SEL** keys become input-repro track monitor option.


AUTO - Disabled. This key only applies for Pro Tools profiles.

SELECTION MODE

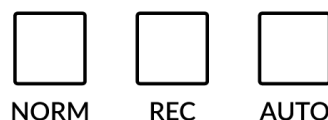

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

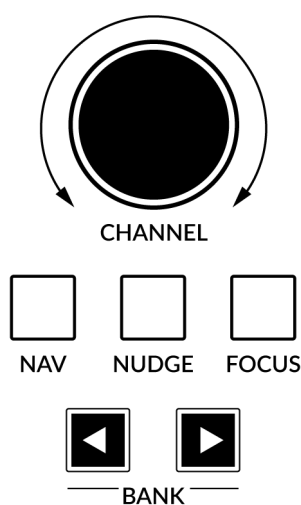

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Pyramix, allowing you to navigate through your session. Note that in Pyramix, **Auto Jog on move** has to be enabled in **All Settings > Jog/Chase > Jog Wheel Settings**.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus


Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.

*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK < >** keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected. e.g. 8 for one UF8, 16 for 2 UF8s etc.

Cursor Keys and Mode Key

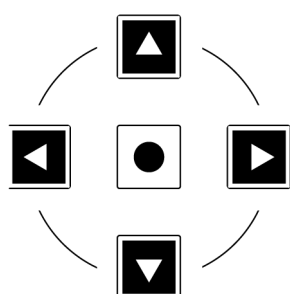

In the lower-right corner of UF8 are the Cursor keys.

Left / Right : Cursor to next/previous clip of the selected track.

Shift + Left / Right : Nudge +/- 1frame (user define in All Settings > Application > Editing > Nudge settings)

Up / Down : Zoom In/Out

Shift + Up / Down : Fit in window / Previous zoom

Cursor Keys - Transport Mode

In SSL 360° v1.3 and above, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

Assignment of Transport Commands



Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

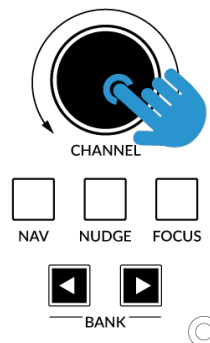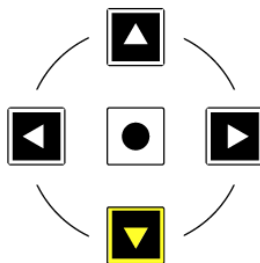

Press and hold the CHANNEL encoder to enter/exit Transport Mode

FINE/SHIFT KEY



The key on UF8 labelled **FINE / SHIFT** is programmed to execute the the **Cmd/Alt** modifier in Pyramix (ignore the FINE part of the label), allowing you to access secondary functions on many Mackie Control commands.


Reading through this Pyramix Tutorial, you will see that many 'secondary' Pyramix MCU functions require the **Shift** key to be held whilst pressing another MCU command.

Automation

You can select the automation mode of the whole mixer directly from UF8 by pressing the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8.

Shift + OFF, READ, WRITE, TRIM sets the Global Pyramix Automation mode.

AUTOMATION

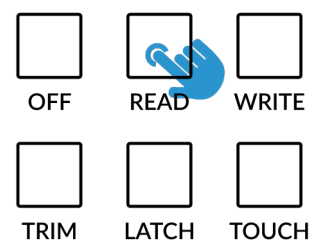

Set the automation mode for whole mixer using the AUTOMATION keys.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Mixer
- 2 - Fade Editor
- 3 - Undo/Redo

QUICK



Send/Plugin

The **SEND/PLUGIN 1-8** keys are disabled by default but can be assigned to your favourite commands or keyboard shortcuts using SSL 360.

Plugin key

The **PLUGIN** key has no function is disabled by default but can be assigned to your favourite commands or keyboard shortcuts using SSL 360.

Channel Key

The **CHANNEL** key is disabled by default but can be assigned to your favourite commands or keyboard shortcuts using SSL 360.

Flip

The **FLIP** key is disabled by default but can be assigned to your favourite commands or keyboard shortcuts using SSL 360.


V-Pot Assignment Modes

UF8 offers direct access to the Mackie Control V-Pot assignment modes implemented by Pyramix. These V-Pot assignment modes are accessed via the keys labelled below: Multiple presses of a V-Pot assignment mode button changes the function. E.g 1st **PAN** press : L/R, 2nd **PAN** press : F/R, 3rd **PAN** press : B/T...

*Note: when the label has a Slash "/", the secondary function is accessible via the **FINE/SHIFT** key (the **MCU Cmd/Alt** modifier).*

PAN

Assigns the V-Pots to control Pans.

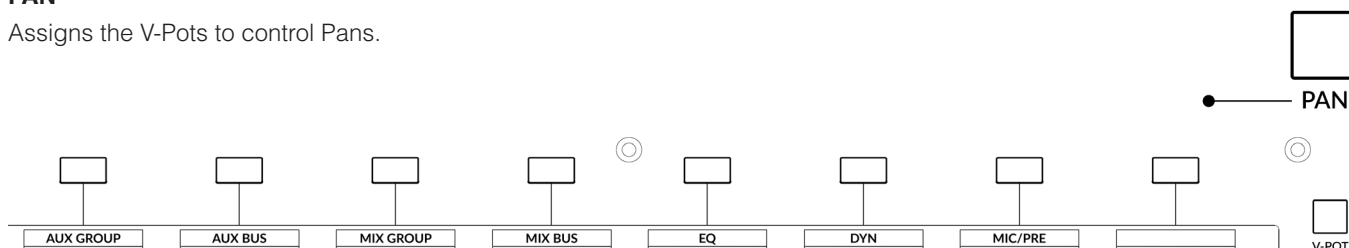


V-Pot Bank

SOFT KEYS




SOFT KEYS

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

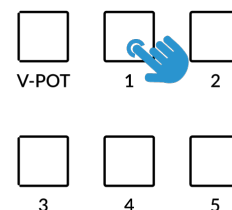


Select User Banks using Keys **1-5** in the **SOFT KEYS** section.

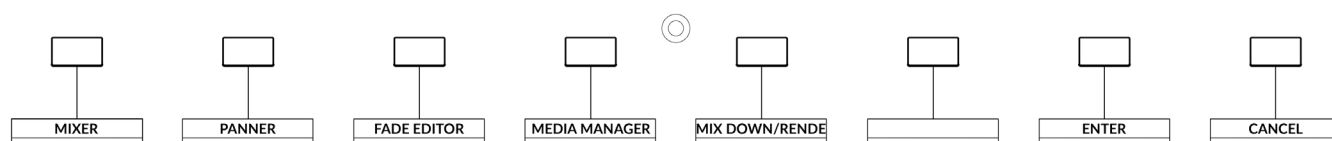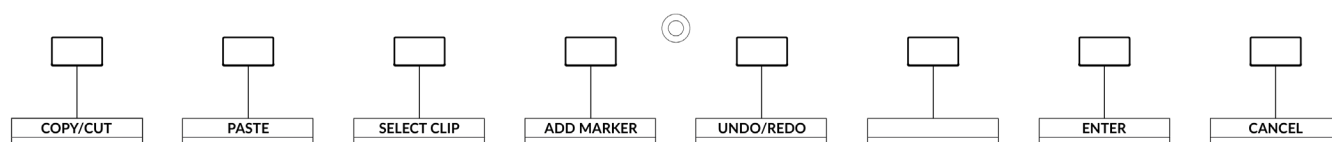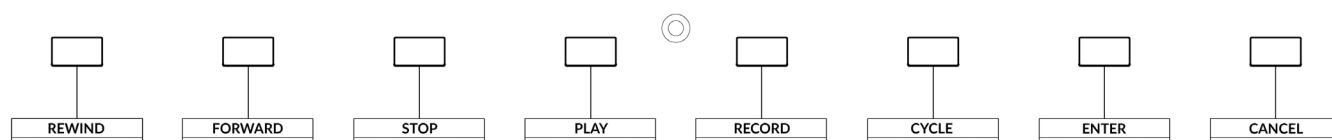


User Bank 4

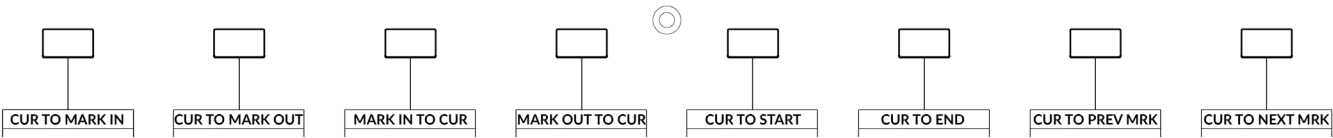

User Bank 5

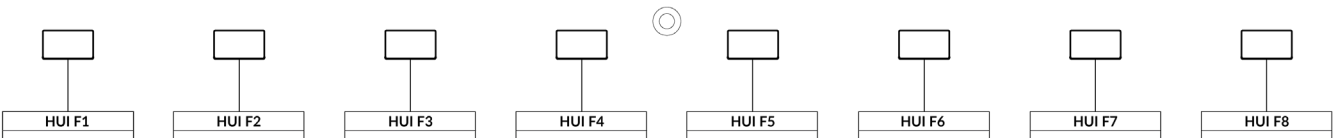

HUI F1 to F8 can be assigned via the keyboard shortcuts window of Pyramix.

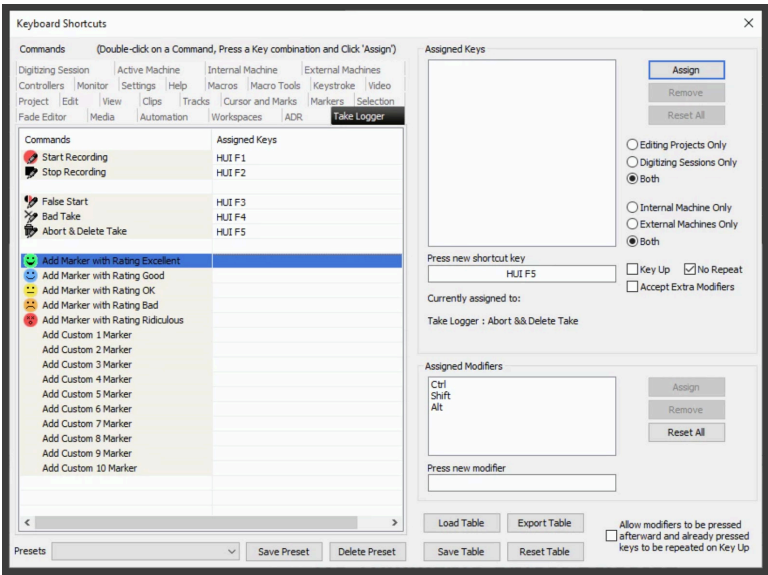

Duplicate (not usable): Alt, Group, Marker, Nudge, Track, Send

Assignable DAW Commands List - Pyramix

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys. When the label has a Slash "/", the secondary function is accessible via the **FINE/SHIFT** key (the MCU Cmd/Alt modifier).


Aux Group	Cancel
Aux Bus	Enter
Mix Group	Paste
Mix Bus	Select Clip
EQ	Copy / Cut
DYN	
Mic/Pre	
Add Marker	
Solo	
Media Manager	
Fade Editor	
Mixer	
Mix Down/Render	
Panner	
Forward	
Rewind	
Stop	
Play	
Record	
Loop	
HUI F1	
HUI F2	
HUI F3	
HUI F4	
HUI F5	
HUI F6	
HUI F7	
HUI F8	
Cur to Mark in	
Cur to Mark out	
Mark in to Cur	
Mark out to Cur	
Cur to Start	
Cur to End	
Cur to Next Mark	
Cur to Prev	
Mark	
Alt	
Off	
Read	
Write	
Touch	
Latch	
Trim	
Undo / Redo	

Mixbus with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Mixbus profile on LAYER 1 of UF8. If you wish to configure Mixbus on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Mixbus** using the drop-down list. If Mixbus is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

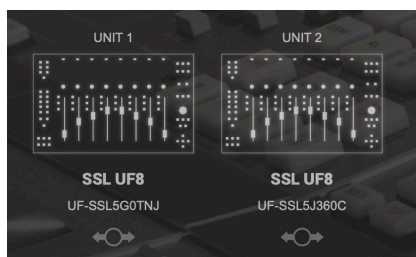

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

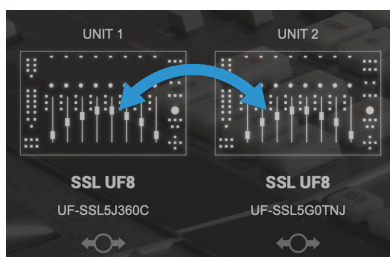


STEP 2 : Click and drag to re-order
units if necessary.

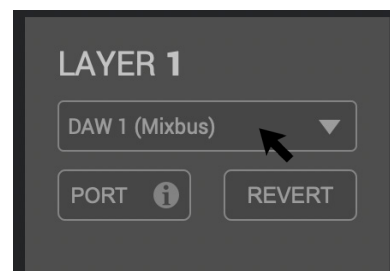


STEP 3 : Select the default Mixbus
DAW profile from the UF8 page.

Mixbus Setup

4. Open Mixbus **Preferences** and choose **Control Surfaces** from the toolbar on the left-hand side.
5. Enable the **SSL 360: UF8 UF1** Control Surface Protocol option from the list and then click **Show Protocol Settings**.
6. In the **Device Type** drop-down list, choose **UF8/UF1** and then configure 'Surface sends via' to **SSL V-MIDI Port 1 Source** and 'Surface receives via' to **SSL V-MIDI Port 1 Destination**.
7. If you have multiple UF8s, choose the appropriate option from the **Device Type** drop-down list e.g. **UF8 x 2** or **UF8 x 3** or **UF8 x 4** and configure the 'Extender at' drop-down options by incrementing the SSL V-MIDI Port number each time. e.g. For a system with 2 x UF8s, 'Extender at position 2 sends via' **SSL V-MIDI Port 2** and 'Extender at position 2' receives via **SSL V-MIDI Port 2**.

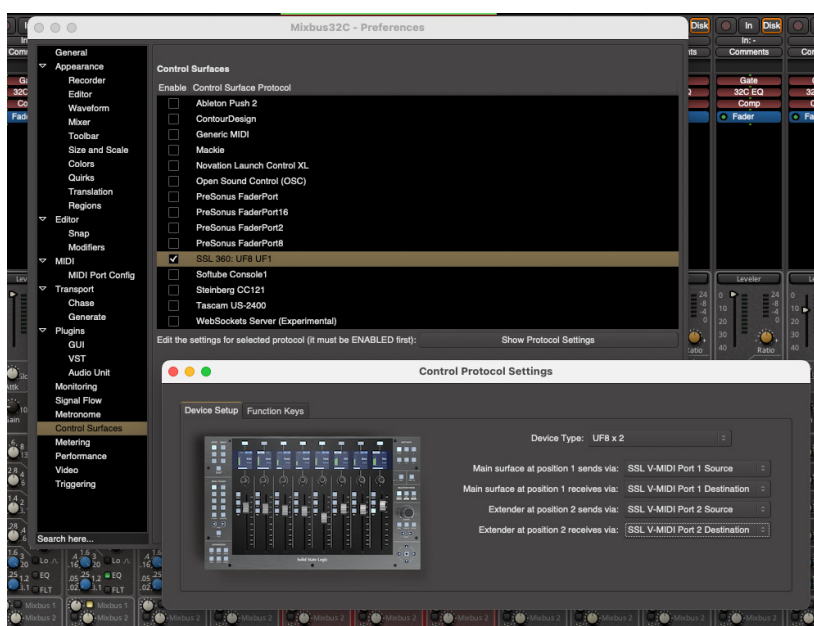

LCD Layout

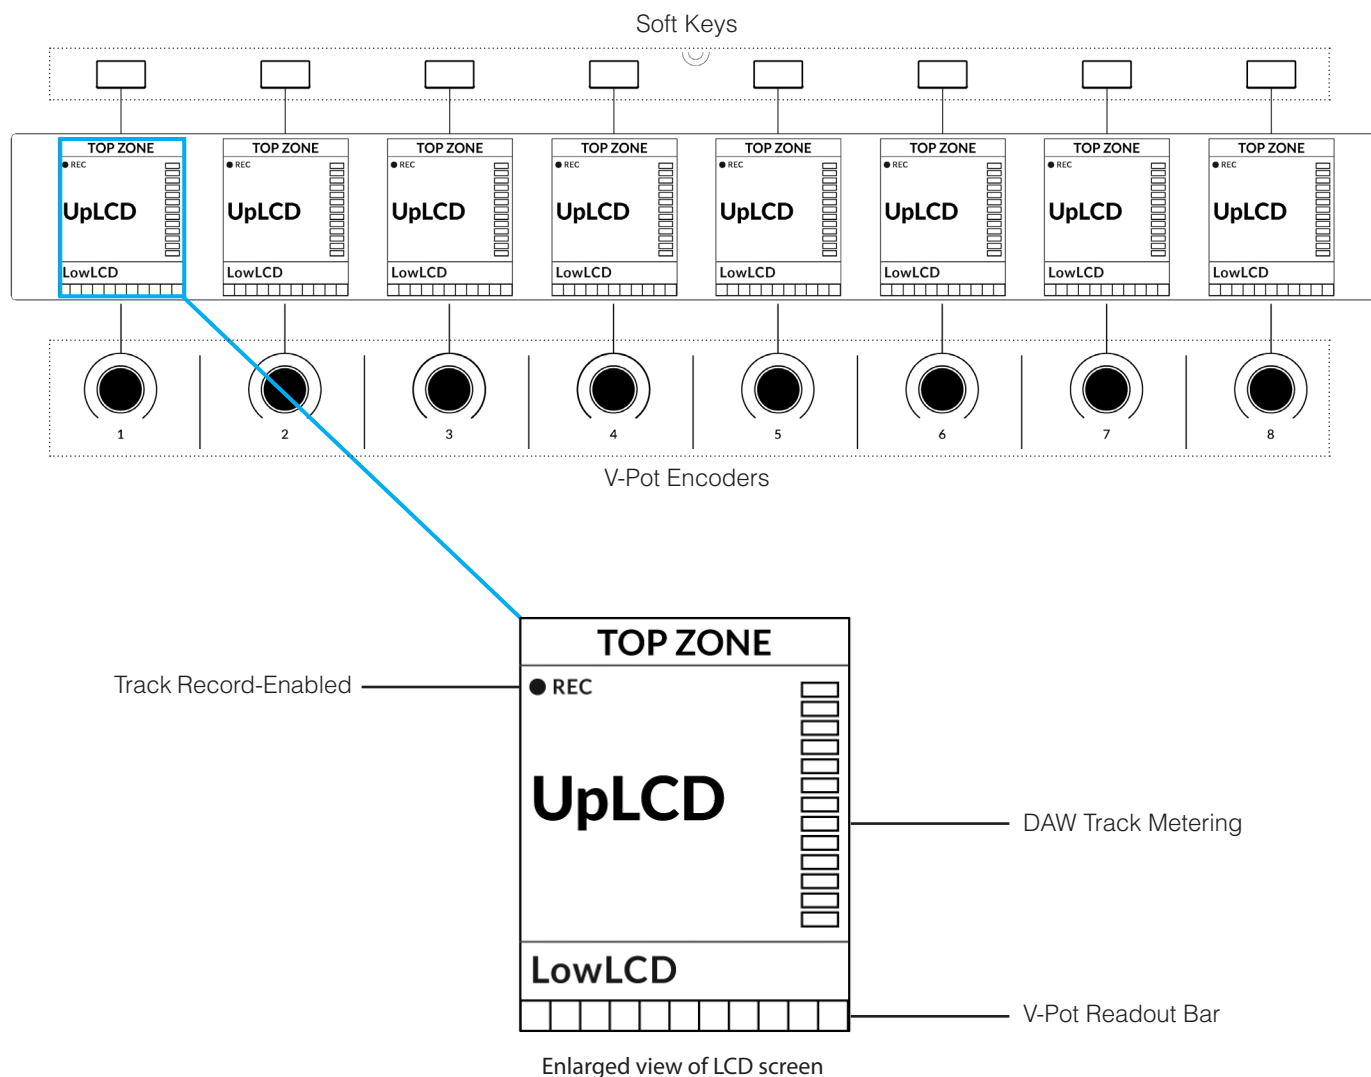

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In Mixbus, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 6-character track name or parameter being controlled by the V-Pot, depending on the current mode.


LowLCD - Displays a fader value or value readout for the parameter currently assigned to the V-Pot, depending on the current mode.

DAW Track Metering - 12-segment track metering + clip.

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial

This section guides you through using UF8 with Mixbus.

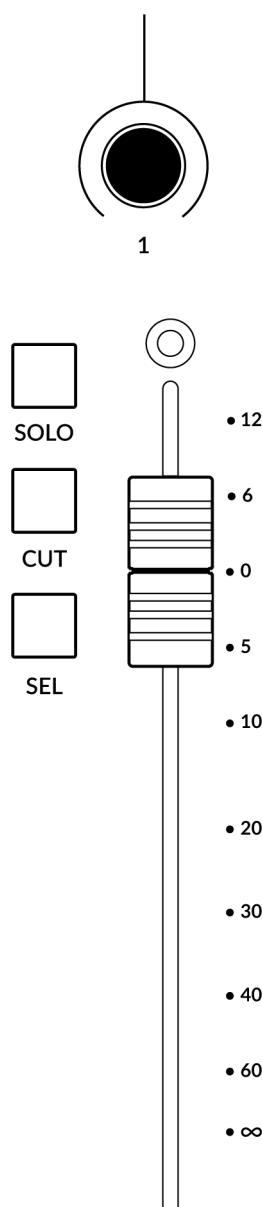

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active and is typically used for tasks such as controlling Pan position, Sends Levels etc.

The V-Pot has a push function, which in Mixbus is used to turn parameters on/off. For example, when controlling Pans, a push on the V-Pot turns the Mstr routing button on/off that channel. Or, when controlling Sends, a push on the V-Pot turns the corresponding Mixbus send control on/off.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Mixbus tracks and are great for balancing mix levels and writing automation.

When a fader is moved, the LowLCD section displays a fader dB readout.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Mixbus.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.


NORM - The **SEL** keys select a track.

REC - The **SEL** keys act as record-arm keys.

AUTO - Disabled. This key only applies for Pro Tools profiles.


The secondary labels **CLEAR**, **ALL** and **ZERO** do not apply for Mixbus.

SELECTION MODE

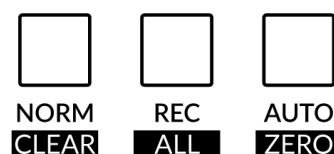

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

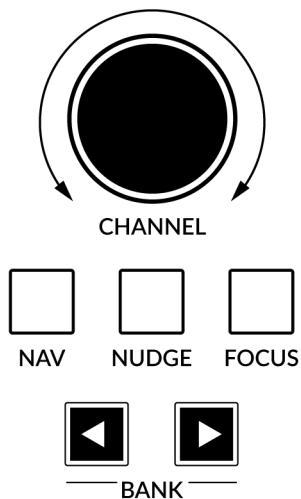

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Mixbus, allowing you to navigate through your session.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.


*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK** < > keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Cursor Keys and Mode Key

In the lower-right corner of UF8 are the Cursor keys with the Zoom key in the centre.

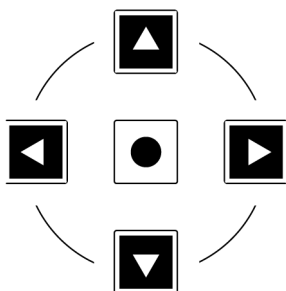

When the Zoom key is lit the left and right cursor keys zoom out and in respectively. The up and down cursor keys increase and decrease all track heights respectively.

Pressing the Zoom key again, the up and down cursor keys change the selected track and the left and right cursor keys move you left and right across the session timeline.


Cursor Keys - Transport Mode

In SSL 360° v1.3 and above, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

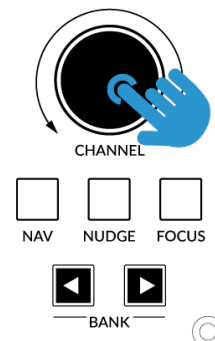

Press and hold the CHANNEL encoder to enter/exit Transport Mode

Assignment of Transport Commands


Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

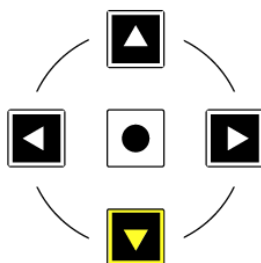


FINE/SHIFT KEY



The key on UF8 labelled **FINE / SHIFT** is programmed to execute the Shift MCU command in Mixbus, which allows finer control of pans and sends, as well as multiple selections.


Automation

You can select the automation mode for each track directly from UF8. To do this, select a track you want to change the automation mode of using a **SEL** key. Then, press the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8. The **TRIM** key does not apply for Mixbus and is therefore disabled.

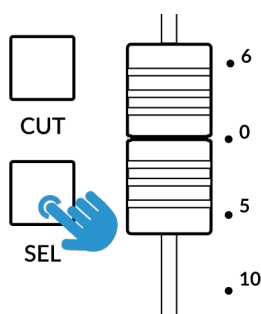

STEP 1: Select a track using SEL key

AUTOMATION

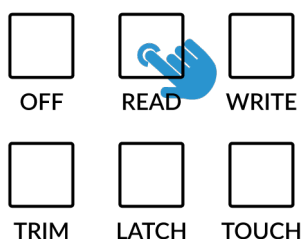

STEP 2: Select the desired automation state.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Solo Clear
- 2 - Shows Audio Busses only on the control surface (Auxes)
- 3 - Shows all tracks in the Mixer (Global)

QUICK



Send/Plug-in 1-8, Plug-in, Channel Key and Page Keys

These keys are disabled by default but can be assigned to your favourite DAW commands or keyboard shortcuts in SSL 360°.


Flip

Pressing the **FLIP** key swaps the functions of the V-Pots and faders. This is useful for various reasons, including tasks such as controlling Send levels and plug-in parameters.



V-Pot Assignment Modes

UF8 offers direct access to Mixbus' main Mackie Control V-Pot assignment modes. These V-Pot assignment modes are accessed via the keys labelled below: 1. **PAN**, 2. **SEND**, 3. **DYN**, 4. **EQ**, 5. **TRACK** and 6. **PLUG-IN**.

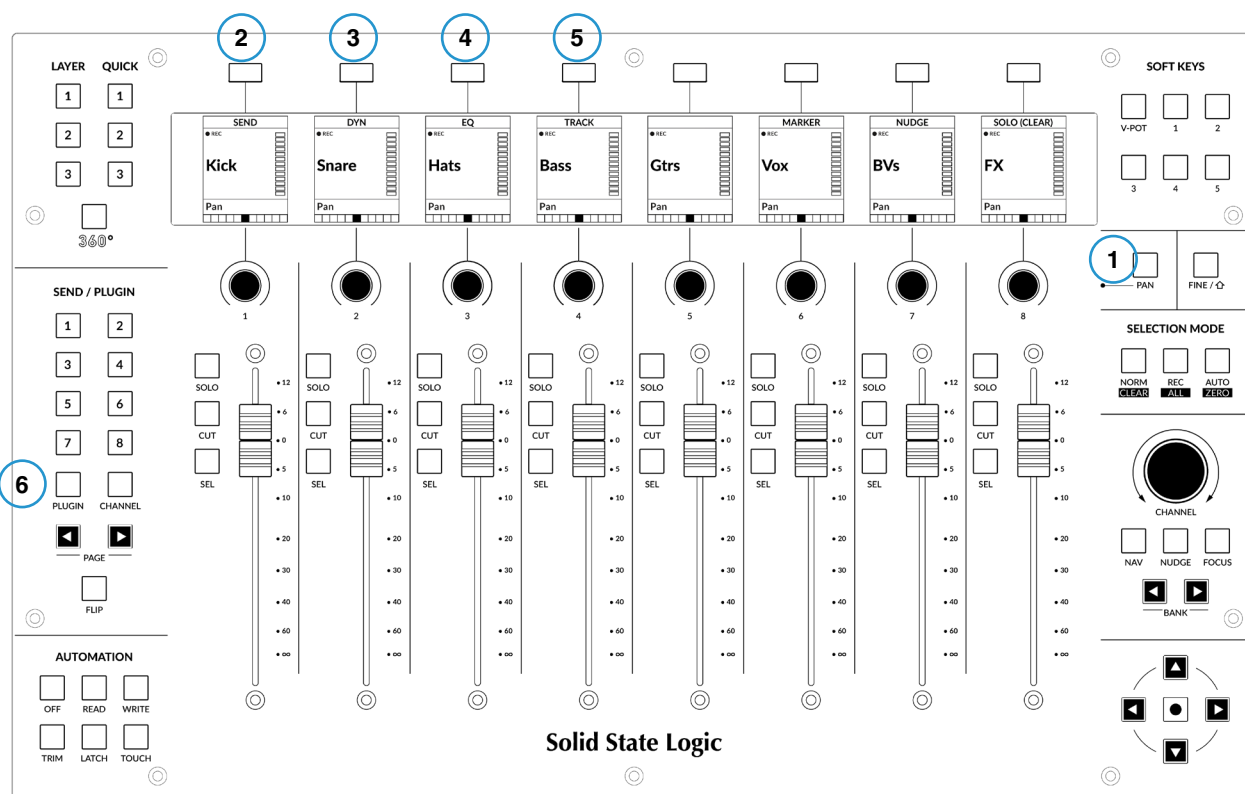

1 - PAN

Assigns the Pan controls to the V-Pots on UF8.

2 - SEND

Assigns the Send controls to the V-Pots. Pushing the V-Pot turns the send on/off. Send values will be displayed in the LowLCD zone. Please note, you must have a track selected to engage this mode.

3 - DYN

Assigns the Filters and Dynamics controls to the V-Pots. Parameter values will be displayed in the LowLCD zone. Please note, you must have a track selected to engage this mode.

4 - EQ

Assigns the EQ controls to the V-Pots. Parameter values will be displayed in the LowLCD zone. Please note, you must have a track selected to engage this mode.

5 - TRACK

Assigns various Mixbus controls to the V-Pots (Trim, Mon, S-Iso, S-Safe and Phase). Parameter values will be displayed in the LowLCD zone. Please note, you must have a track selected to engage this mode.

6 - PLUGIN

Allows you to control plug-ins via the V-Pots.


- Select a track with plug-ins on, then press the **PLUGIN** key. The plug-in names will be shown across the V-Pots.
- Push the V-Pot of the plug-in you wish to control. The plug-in's parameters will be presented across the V-Pots.
- Parameter values will be displayed in the LowLCD zone.
- Use the left and right cursor keys in the lower-right of UF8 to access all of the plug-in's parameters.
- Press **PLUGIN** again to 'come back up a level' and see the plug-ins inserted on the selected track.

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

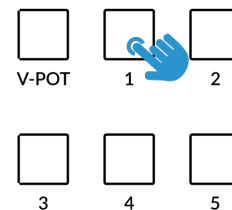


User Bank 1

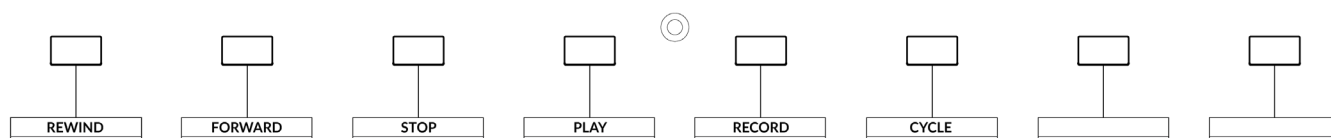


User Bank 2

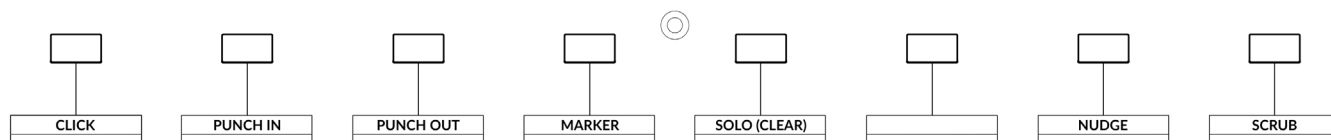


User Bank 3

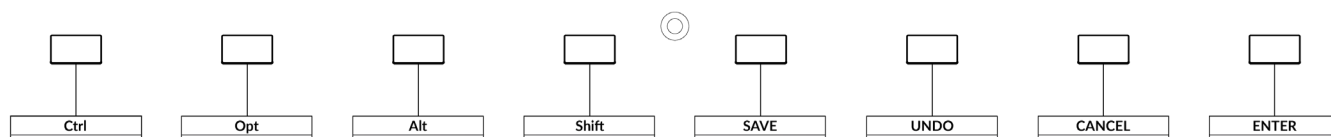

User Bank 4

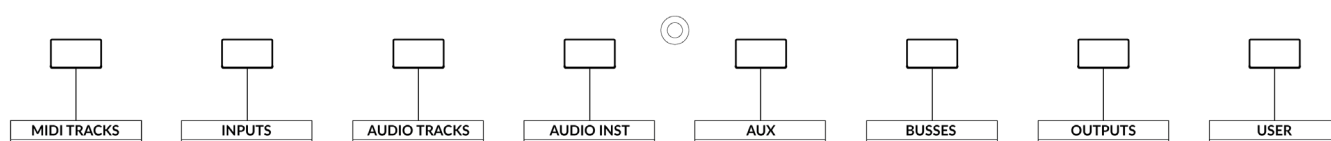

User Bank 5

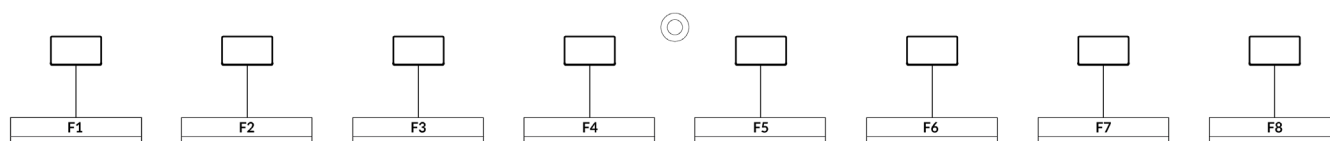

Assignable DAW Commands List - Mixbus

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys.


Track	Read
Pan	Write
EQ	Touch
Send	Latch
Plugin	Off
Flip	Save
Global (all Mixer tracks)	Undo
SMPTE/Beats	Cancel
F1	Enter
F2	Marker
F3	Nudge
F4	Cycle
F5	Click
F6	Solo (Clear)
F7	Punch In
F8	Punch Out
MIDI Tracks	Forward
Inputs	Rewind
Audio Tracks	Stop
Audio Instruments	Play
Aux	Record
Busses	Scrub
Outputs	Play Footswitch
User (selected tracks)	Record Footswitch
Shift	
Option	
Control	
Alt	

REAPER with UF8 - Tutorial


The following tutorial guides you through configuring and using the default REAPER profile on LAYER 1 of UF8. If you wish to configure REAPER on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **REAPER** using the drop-down list. If REAPER is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

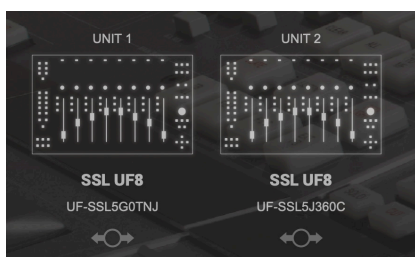

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

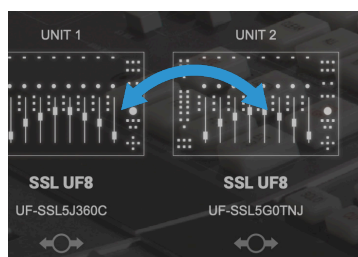


STEP 2 : Click and drag to re-order
units if necessary.

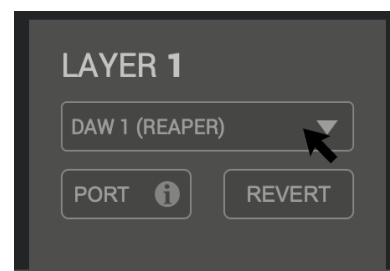


STEP 3 : Select the default REAPER
DAW profile from the UF8 page.

REAPER Setup

4. Open REAPER **Preferences** and choose **Control/OSC/web** from the toolbar on the left-hand side.
5. Click the **Add** button and choose **Mackie Control Universal** for the **Control Surface Mode**.
6. Set the **MIDI input** to **SSL V-MIDI Port 1 Source** and **MIDI output** to **SSL V-MIDI Port 1 Destination**.
7. If you have multiple UF8s, repeat steps 5 and 6 but choose **Mackie Control Extender** and configure the MIDI input and Output to **SSL V-MIDI Port 2**. Also, set **Surface offset (tracks)** to '8' for the Extender.

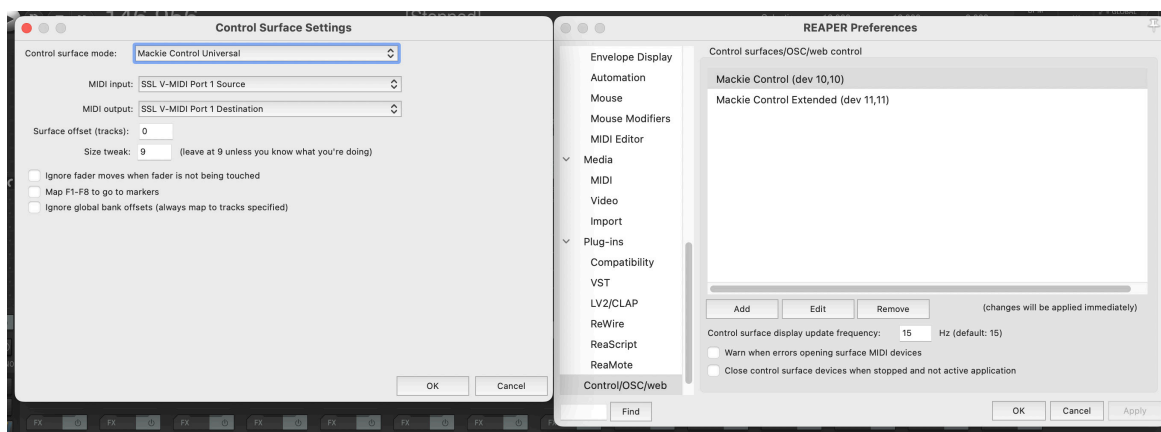

LCD Layout

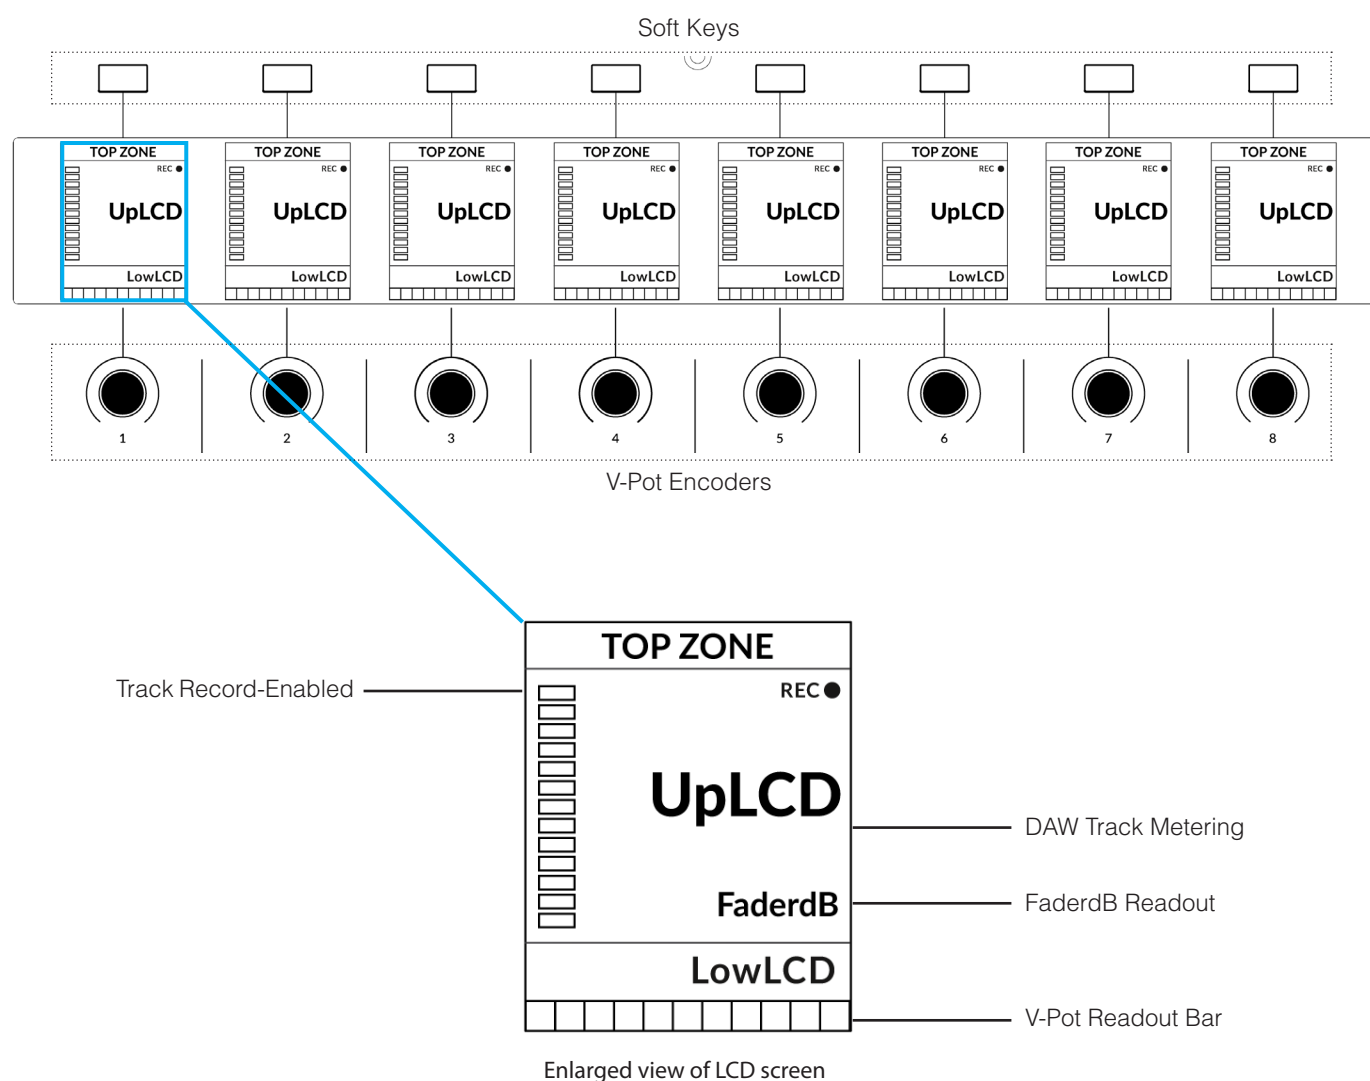

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In Mixbus, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 6-character track name.

FaderdB Readout - Fader dB readout of the DAW track level.


LowLCD - Using REAPER's standard MCU control, this area of the display is blank. 3rd party REAPER MCU scripts may write to this area.

DAW Track Metering - 12-segment track metering + clip.

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial

This section guides you through using UF8 with REAPER.

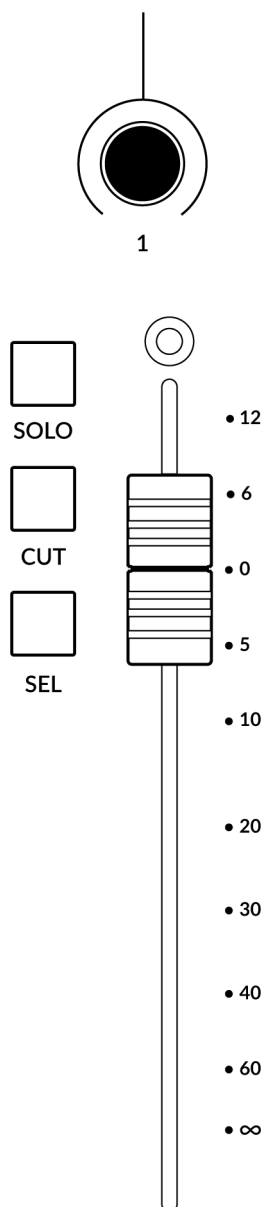

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active. With REAPER's standard MCU implementation, the V-Pots control Pan.

The V-Pot has a push function, which centres the Pan in REAPER.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Mixbus tracks and are great for balancing mix levels and writing automation.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Mixbus.

*You must double-press the **SEL** keys to individually select tracks in REAPER. If you press once, the selections add together.*

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.


NORM - The **SEL** keys select a track.

REC - The **SEL** keys act as record-arm keys.

AUTO - Disabled. This key only applies for Pro Tools profiles.


The secondary labels **CLEAR**, **ALL** and **ZERO** do not apply for REAPER.

SELECTION MODE

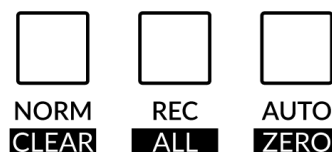

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

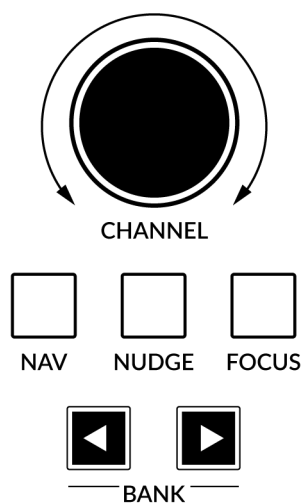

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Mixbus, allowing you to navigate through your session.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.


*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK < >** keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Cursor Keys and Mode Key

In the lower-right corner of UF8 are the Cursor keys with the Zoom key in the centre.

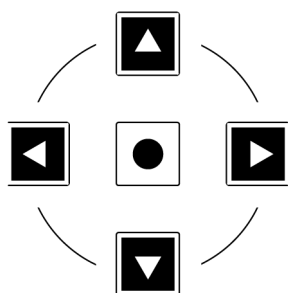

When the Zoom key is lit the left and right cursor keys zoom out and in respectively. The up and down cursor keys increase and decrease all track heights respectively.

Pressing the Zoom key again, the cursor keys move you up, down, left and right in the arrangement window of REAPER.

Cursor Keys - Transport Mode

In SSL 360° v1.3 and above, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

Assignment of Transport Commands



Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND (Start of audio)**

Right arrow is **FORWARD (End of audio)**

Circle Key is **RECORD**

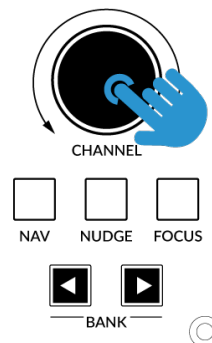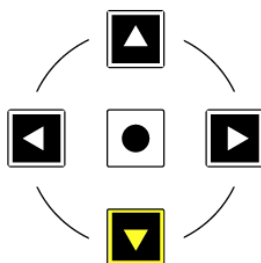

Press and hold the CHANNEL encoder to enter/exit Transport Mode


FINE/SHIFT KEY



The key on UF8 labelled **FINE / SHIFT** is programmed to execute the Shift MCU command in REAPER. There is no documentation on the Shift function in REAPER's standard MCU implementation.


Automation

You can select the automation mode for each track directly from UF8. To do this, select a track you want to change the automation mode of using a **SEL** key (double-press to select a single track). Then, press the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8. The **OFF** key does not apply for REAPER and is therefore disabled.

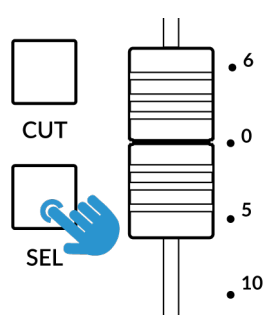

STEP 1: Select a track using SEL key

AUTOMATION

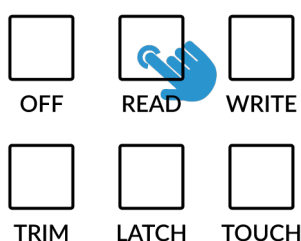

STEP 2: Select the desired automation state.


Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Solo Clear
- 2 - F1
- 3 - F2

QUICK

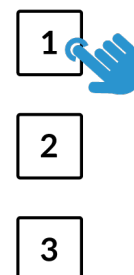

Send/Plug-in 1-8, Plug-in , Channel and Page Keys

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360°.

Flip


Pressing the **FLIP** key swaps the functions of the V-Pots and faders.



V-Pot Assignments

REAPER users should be aware that the built-in (stock installation) MCU functionality offers control of essential parameters only such as faders, solos, mutes, pan, transport and automation.

Pan is the only V-Pot mode that is functional with the stock installation, therefore the V-Pot Bank on UF8 is unassigned.

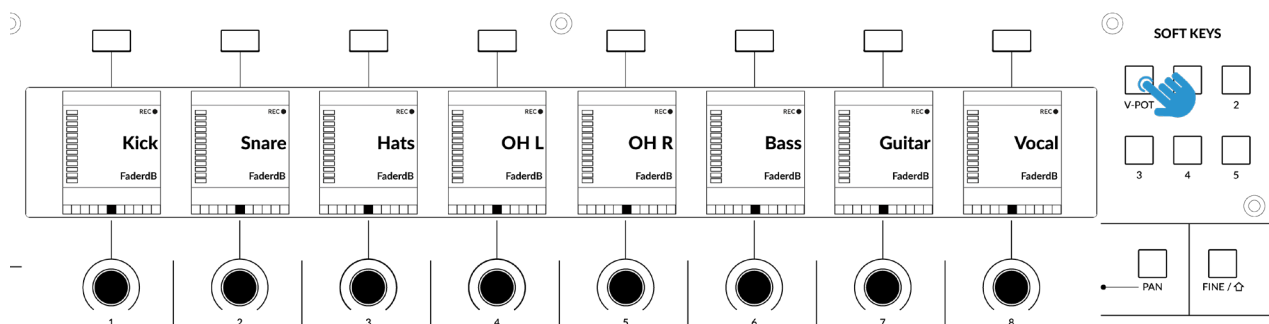

3rd Party Control Scripts

REAPER users wishing for deeper control might want to explore the various 3rd party scripts/user plug-ins. These 3rd party scripts install extensions or 'user plug-ins', many of which allow deeper MCU integration and access to more V-Pot assignment modes. For this reason, all the traditional V-Pot assignment mode functions such as **Send**, **Plugin** etc are available as DAW commands in 360° and can be assigned to Soft Keys.

MCU Extensions for REAPER, available on the internet:

- CSI
- ReLearn
- CSurf_Klinke_MCU
- DrivenByMoss


Please note, SSL are unable to provide support for users installing these scripts and how they may interact with the UF8 REAPER profile.

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.

SOFT KEYS

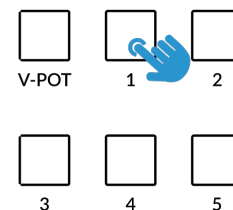


User Bank 1

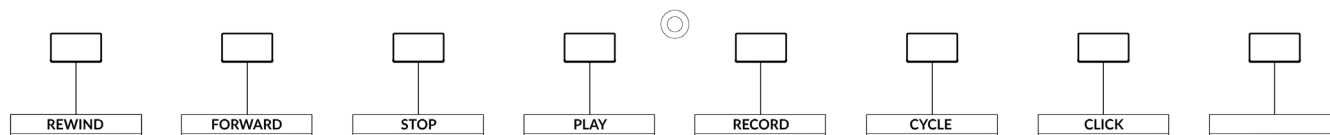

User Bank 2

Unassigned


User Bank 3

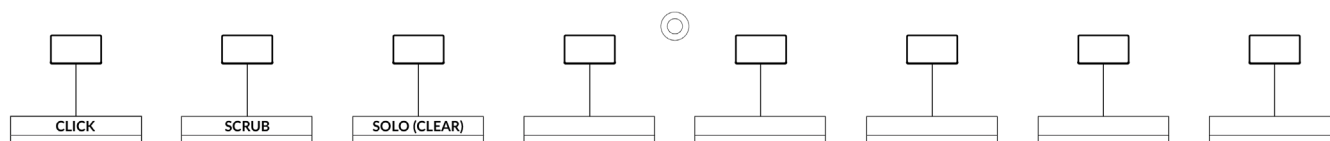

User Bank 4

Unassigned

User Bank 5

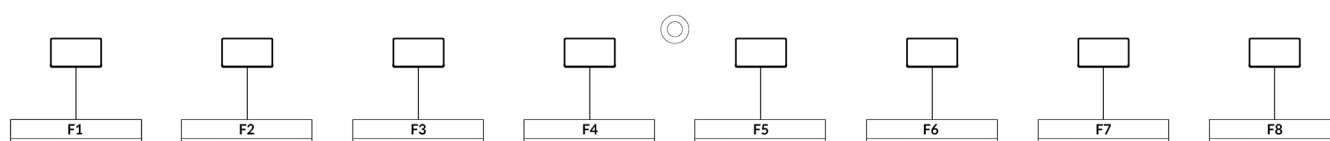

Assignable DAW Commands List - REAPER

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys.

Please note that * indicates the main V-Pot modes that have no function in REAPER's default MCU implementation. These have been left in the assignable functions list for users exploring 3rd party scripts that may respond to these functions. Also note that many other commands in this list may have no function.


Track*	Save
Pan	Undo
EQ*	Group
Send*	Cancel
Plugin*	Enter
Instrument*	Marker
Flip	Nudge
Global	Cycle
Name/Value	Drop
SMPTE/Beats	Replace
F1	Click
F2	Solo (Clear)
F3	Forward
F4	Rewind
F5	Stop
F6	Play
F7	Record
F8	Scrub
MIDI Tracks	Play Footswitch
Inputs	Record Footswitch
Audio Tracks	Rec/Rdy
Audio Instruments	
Aux	
Busses	
Outputs	
User	
Shift	
Option	
Control	
Alt	
Read	
Write	
Touch	
Latch	
Trim	

Bitwig Studio with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Bitwig profile on LAYER 1 of UF8. If you wish to configure Bitwig on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Bitwig** using the drop-down list. If Bitwig is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

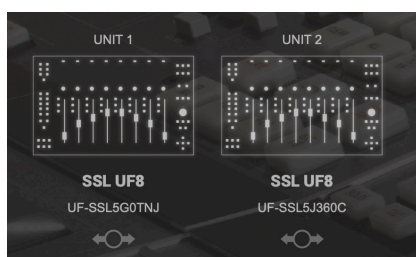

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

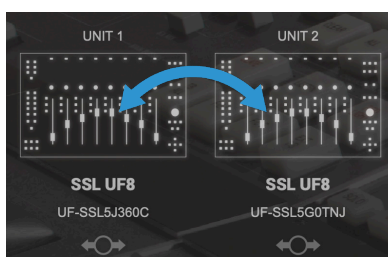


STEP 2 : Click and drag to re-order
units if necessary.

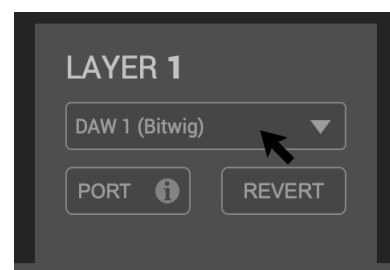


STEP 3 : Select the default Bitwig
DAW profile from the UF8 page.

Bitwig Setup

4. Open the Bitwig Studio **Dashboard**, select **Settings** and then choose **Controllers** from the left-hand side menu.
5. Click **+Add Controller** and choose **Solid State Logic** from the **Hardware Vendor** drop-down list.
6. Choose **SSL UF8/UF1 by Bitwig**. Set the **MIDI Input** to **SSL V-MIDI Port 1 Source** and set the **MIDI Output** to **SSL V-MIDI Port 1 Destination**.
7. If you have multiple UF8s, choose the appropriate option from the drop-down list: **SSL UF8/UF1 + 1 EXTENDER** if you have 2 units, **SSL UF8/UF1 + 2 EXTENDER** if you have 3 units, **SSL UF8/UF1 + 3 EXTENDER** if you have 4 units. Ensure the V-MIDI port numbers are incremented e.g. 1, 2, 3, 4 as shown in the image below. If working on Layer 1, Bitwig does this for you.

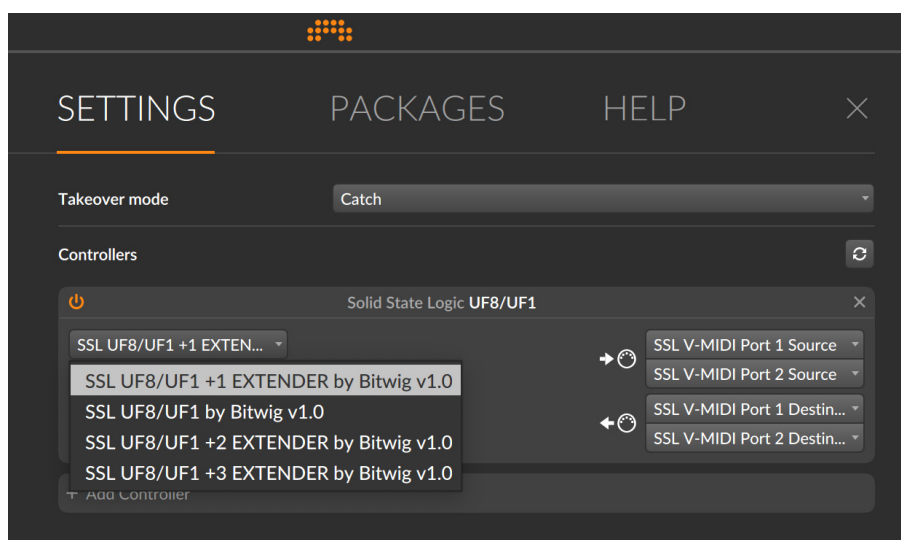

LCD Layout

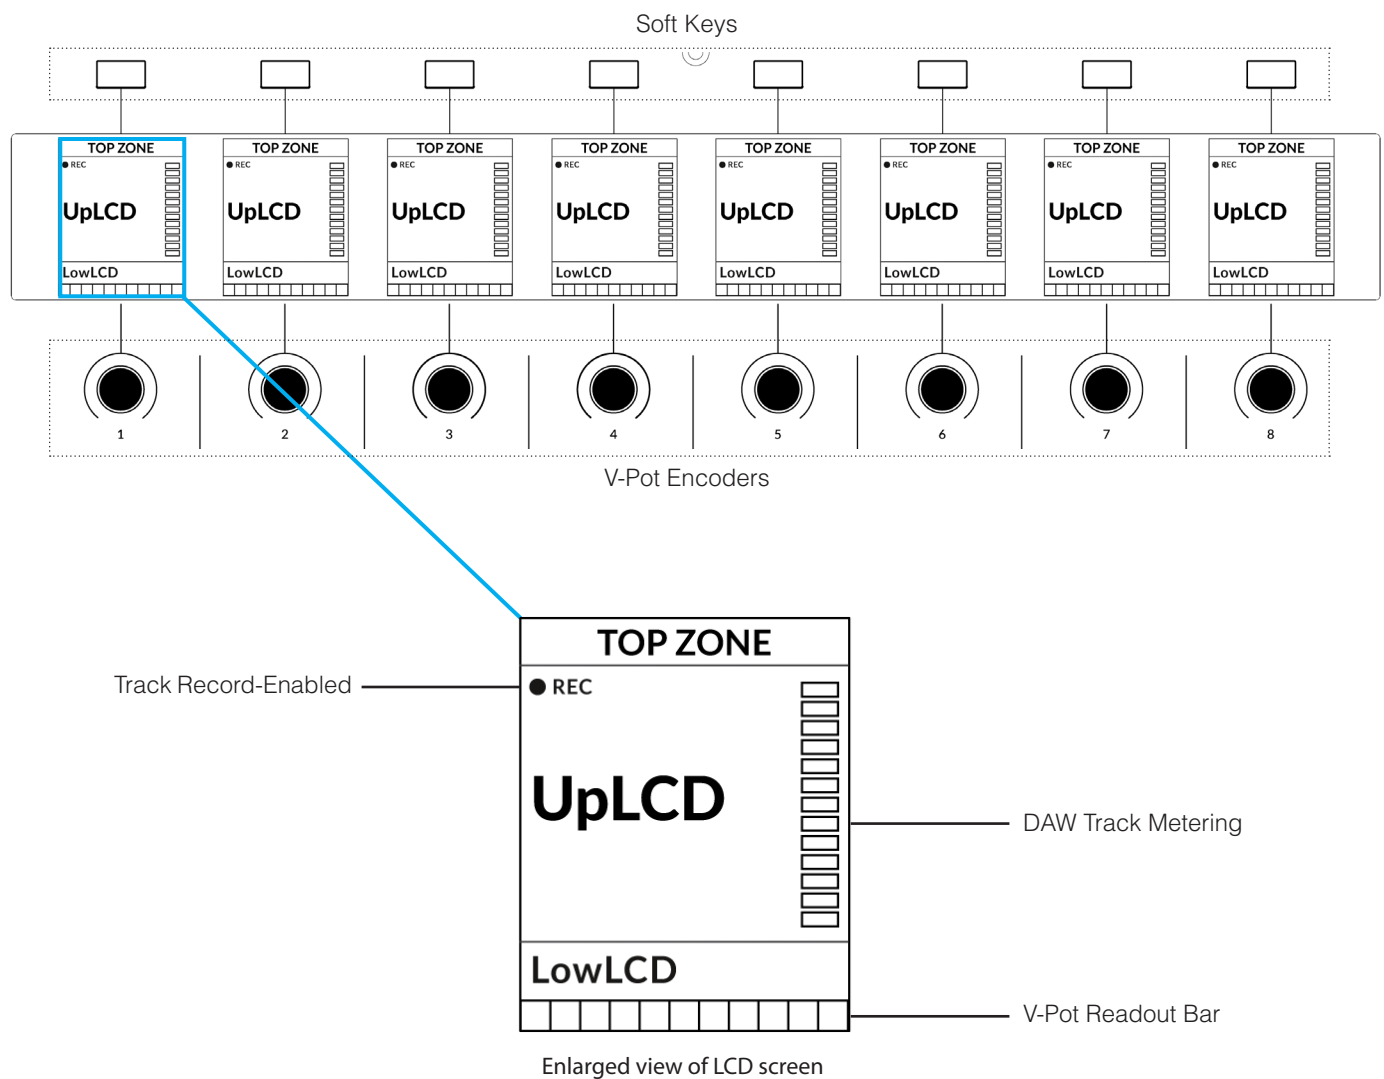

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In Bitwig, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 6-character track name or parameter being controlled by the V-Pot, depending on the current mode.


LowLCD - Displays a fader value or value readout for the parameter currently assigned to the V-Pot, depending on the current mode.

DAW Track Metering - 12-segment track metering + clip.

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial

This section guides you through using UF8 with Bitwig.

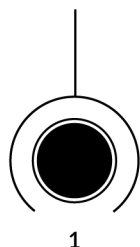

V-Pot


At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active and is typically used for tasks such as controlling Pan position, Sends Levels etc.

The V-Pot has a push function, which can be used to default the currently assigned parameter.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Bitwig tracks and are great for balancing mix levels and writing automation.

When a fader is moved, the LowLCD section displays a fader dB readout.

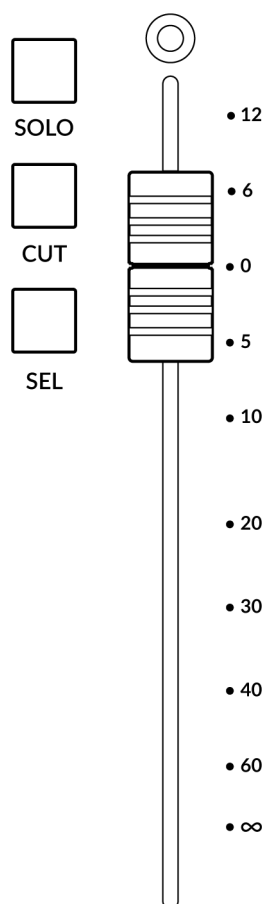

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Bitwig.

Please note, if you wish to solo more than one track at a time, keep a solo button pressed and held whilst pressing others. Alternatively, press and hold the **FINE/SHIFT** key whilst solo'ing.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.


NORM - The **SEL** keys select a track.

REC - The **SEL** keys act as record-arm keys.

AUTO - No function assigned.


The secondary labels **CLEAR**, **ALL** and **ZERO** do not apply for Bitwig.

SELECTION MODE

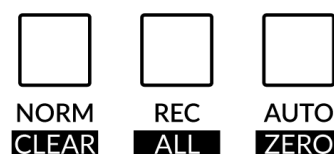

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

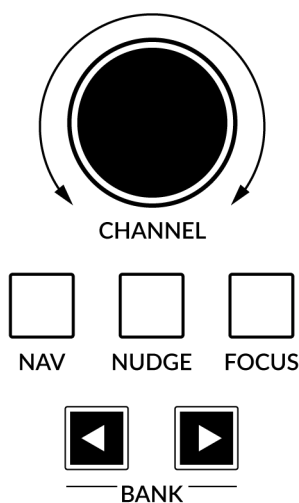

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Bitwig, allowing you to navigate through your session. Hold **FINE/SHIFT** while turning the encoder to move the playhead in smaller increments.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.


*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK** < > keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Cursor Keys and Mode Key

In the lower-right corner of UF8 are the Cursor keys with the Zoom key in the centre.

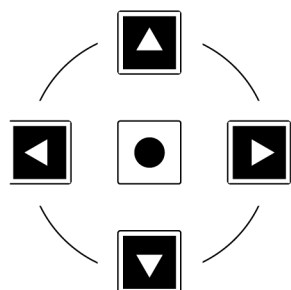

Press DOWN or RIGHT to select the next track, press UP or LEFT to select the previous track. This may vary, depending on the currently selected mode.

Press the ZOOM button in the center to toggle the zoom function of the cursor keys.

When controlling Sends, with ZOOM not engaged, the UP and DOWN arrows can be used to change the row of sends being controlled by the V-Pots.

When controlling plug-ins, with ZOOM not engaged, the UP and DOWN arrows can be used to move between various plug-in parameter pages and the LEFT and RIGHT arrows can be used to control a different plug-in on the selected track.


Cursor Keys - Transport Mode

In SSL 360° v1.3 and above, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

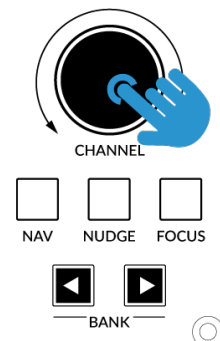

Press and hold the CHANNEL encoder to enter/exit Transport Mode

Assignment of Transport Commands


Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

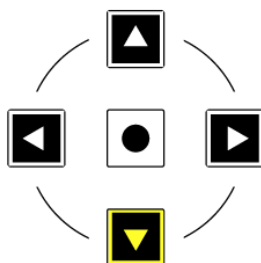


FINE/SHIFT KEY - Show/Hide Tracks within a Group



Whilst holding the **FINE / SHIFT** key, press the **SEL** key on a group track to show/hide a group. Holding **FINE / SHIFT** also allows you to solo multiple tracks with the **SOLO** keys.


Automation

You can select the automation mode for each track directly from UF8. To do this, select a track you want to change the automation mode of using a **SEL** key. Then, press the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8. The **TRIM** key does not apply for Bitwig and is therefore disabled. Press **OFF** to restore automation data (if you have manually overwritten automation parameters).

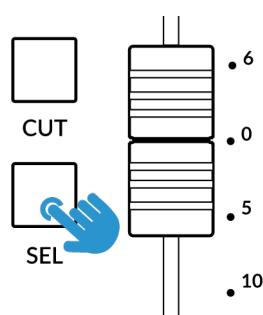

STEP 1: Select a track using SEL key

AUTOMATION

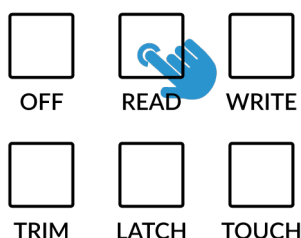

STEP 2: Select the desired automation state.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Toggle Arranger/Mix panel layout
- 2 - Toggle Global View (show/hide effect tracks)
- 3 - Insert SSL Plug-in. Select a track, press and hold Quick Key 3 and then press the corresponding V-Pot to insert a 360°-enabled plug-in from the options presented across the UF8 screens.

QUICK



Page Keys

The **PAGE < >** keys native through pages of various parameter modes e.g. between send slots, plug-in parameter pages, EQ+ parameter pages etc. If **PAN** mode is selected, they select previous and next tracks.




Flip

Pressing the **FLIP** key swaps the functions of the V-Pots and faders. This is useful for various reasons, including tasks such as controlling Send levels and plug-in parameters.



V-Pot Assignment Modes

UF8 offers direct access to Bitwig's main V-Pot assignment modes. These V-Pot assignment modes are accessed via the keys labelled below: 1. **PAN**, 2. **SEND**, 3. **PLUGIN**, 4. **EQ+**, 5. **TRACK REMOTES**, 6. **PROJECT REMOTES** and 7. **CLIP LAUNCHER**.

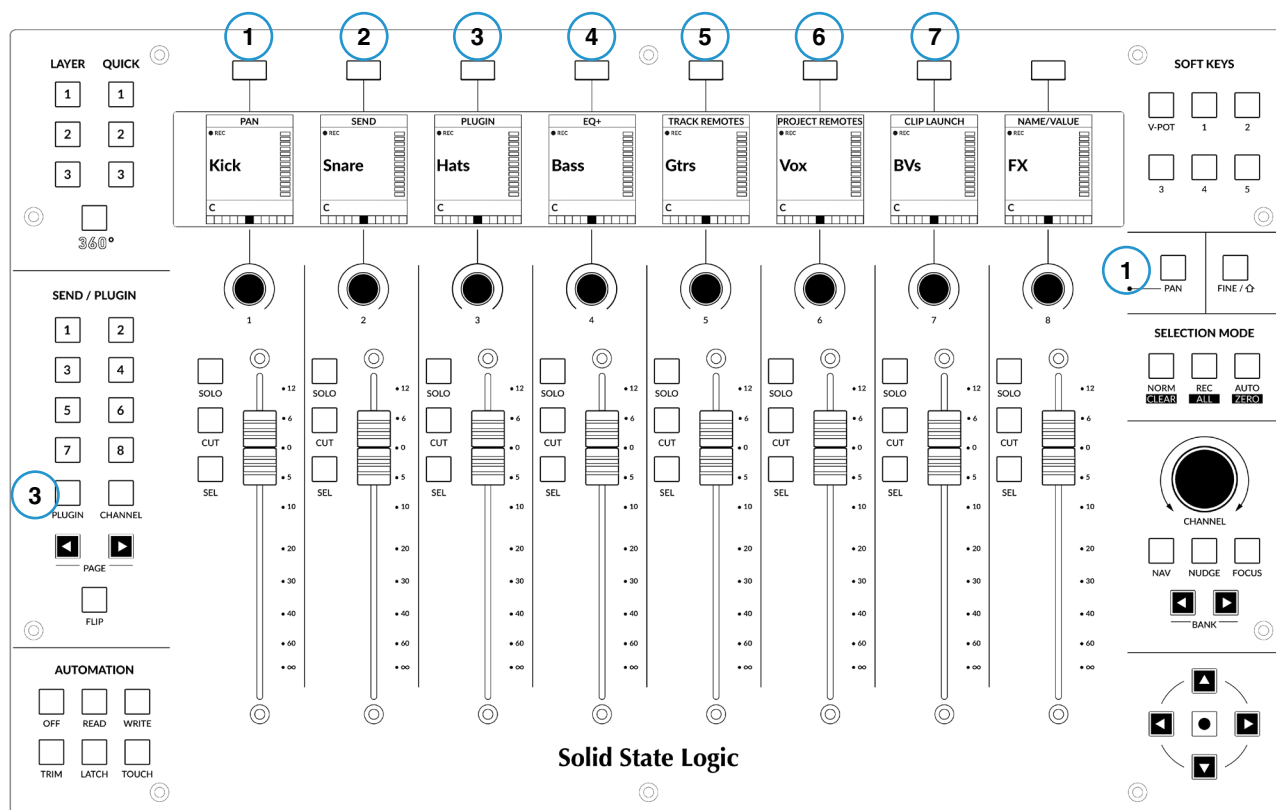

1 - PAN

Assigns the Pan controls to the V-Pots on UF8. Press the V-Pot to centre the Pan.

Whilst in **PAN** mode, **SEND / PLUG-IN 1- 8** have no function in their factory mode.

2 - SEND


Assigns the Send controls to the V-Pots. Pushing the V-Pot sets the send to -infinity. Send values will be displayed in the LowLCD zone.

Press and hold the **SEND** key and press a V-Pot to toggle a send between Auto, Pre, or Post.

Whilst in **SEND** mode, use **SEND / PLUG-IN 1- 8** keys to directly select the send you want to control with the V-Pots. Alternatively, you can use the **Page < >** keys or cursor up and down keys to change the send being controlled.

Whilst in **SEND** mode, press the **CHANNEL** key to control all sends on the selected track, instead of controlling a particular send across multiple tracks.

SEND / PLUGIN

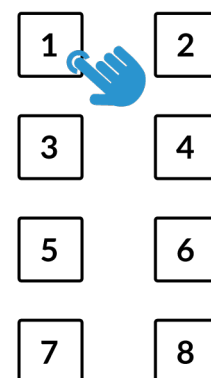

3 - PLUGIN

Allows you to control plug-ins via the V-Pots.

Use the V-Pots to control eight plug-in parameters of the currently selected plug-in and remote controls page.

Whilst in **PLUGIN** mode, use **SEND / PLUGIN 1- 8** keys to directly select the plug-in you want to control with the V-Pots. Or you can select a different plug-in slot by using the left and right cursor keys.

Important information regarding plug-in control - *Before plug-ins can be controlled, they must be configured via the Bitwig Remote Controls Editor. This powerful Bitwig feature allows you to determine how each plug-in maps across the control surface. For more information, please consult the Bitwig User Guide. Native Bitwig plug-ins come pre-mapped, ready to be controlled.*

Press **PAGE <** or **PAGE >** to select the previous or next remote controls page of a plug-in. Alternatively, you can use the up and down cursor keys to do this.

Press and hold the **PLUGIN** key to open the plug-in sub menu

Whilst in this sub menu, press the V-Pots to bypass, pin or remove a device, to move a device within a chain, or to open the expanded device view.

4 - EQ+

Assigns the V-Pots to control Bitwig's EQ+ device.

Press EQ+ again to add EQ+ on a selected track which does not contain an EQ+ device.

Press button **SEND / PLUG-IN 1-5** keys to directly select the EQ+ parameters page you want to control with the V-Pots.

Press **PAGE <** or **PAGE >** to select the previous or next EQ+ parameters page. Alternatively, you can use the up and down cursor keys to do this.

5 & 6 - TRACK AND PROJECT REMOTES

Assigns the V-Pots to Track or Project Remotes.

Use the V-Pots to control eight parameters of the currently selected Track/Project Remote controls page.


Press button **SEND / PLUG-IN 1-8** keys to directly select a Track/Project Remote controls page.

Press **PAGE <** or **PAGE >** to select the previous or next Track/Project remote controls page. Alternatively, you can use the up and down cursor keys to do this.


7 - CLIP LAUNCHER

Enters Clip Launcher Mode


Move Clip Launcher Area - Turn the **CHANNEL** encoder (in its default mode) to move the focused area left or right.

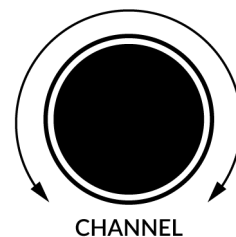

Move Clip Launcher Area/Track Select - Press the up or down cursor keys to move the focused area up or down. Press the left or right cursor keys to select the previous or next track.

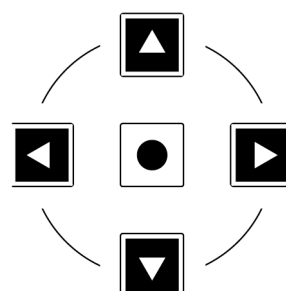

Clip Control - The **SOLO** and **CUT** buttons form the 2 x 8 clip matrix, indicated by a coloured frame in the Clip Launcher. Press a button to trigger a clip.

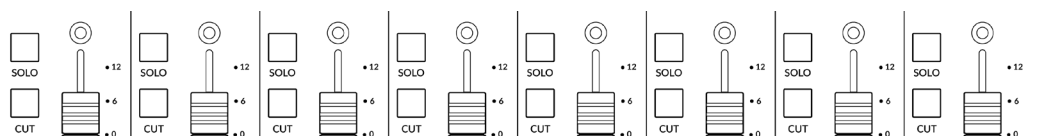

The button LEDs show the current status of the clips:


- Unlit: Empty slot
- Lit: Clip is stopped
- Blinking (slow): Clip is playing
- Blinking (fast): Clip will be played next

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

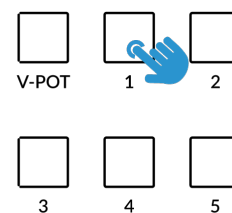

User Bank 1

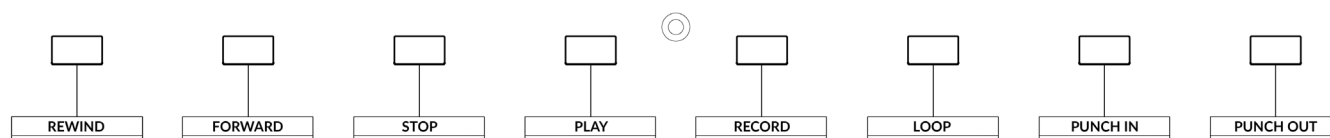

User Bank 2

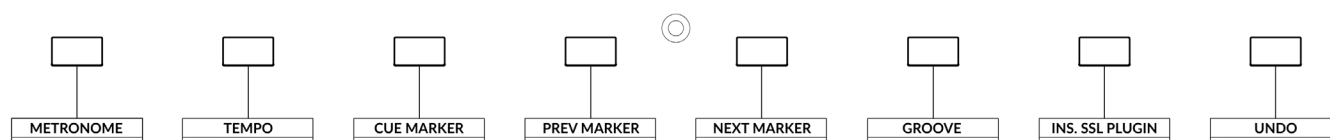

User Banks 3-5

Unassigned

Sub Menu Functions

The following DAW commands contain additional parameters within them.

Press and hold the command to access these parameters. The parameters will spill across the various V-Pots.

To change their value turn or press the encoder. The spilled parameters are shown below in brackets.

- **LOOP** (Loop Start and Length)
- **METRONOME** (Pre-Roll, Volume and Ticks)
- **TEMPO** (BPM and Tap Tempo)
- **CUE MARKER** (Cue Markers 1-8)
- **GROOVE** (Shuffle Rate, Amount, Accent Rate, Amount, Phase and Fill)
- **EDITOR PANEL / ZOOM/VIEW** (Arranger, Detail Editor, Track Height All, Track Height Selected Track, Toggle Clip Launcher, Toggle FX Tracks, Toggle Arranger)
- **INS. SSL PLUG-IN** (SSL Meter, 4K B, 4K E, 4K G, Channel Strip 2, Bus Compressor 2, 360 Link)

Assignable DAW Commands List - Bitwig

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys.


Channel	Record Automation
Pan	Write
EQ+	Touch
Send	Latch
Plugin	Project Remotes
Track Remotes	Undo
Flip	Clip Launch
Global View	Cancel
SMPTE/Beats	Enter
F1	Cue Marker
F2	Nudge (Zoom In)
F3	Loop
F4	Punch In
F5	Punch Out
F6	Metronome
F7	Restore Automation
F8	Forward
MIDI Tracks - <i>no associated function</i>	Rewind
Arr/Mix - <i>no associated function</i>	Stop
Tempo	Play
Editor Panel (Zoom/View)	Record
Groove	Play Footswitch
Ins. SSL Plugin	Record Footswitch
Prev Page	Rec/Rdy
Next Page	Previous Marker
Shift	Next Marker
Option	
Control	
Alt	

Digital Performer with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Digital Performer profile on LAYER 1 of UF8. If you wish to configure Digital Performer on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Digital P** using the drop-down list. If Digital Performer is not available from the drop-down list it is because you have not configured it as DAW 1 on the [CONTROL SETUP](#) page - ensure you do this first.

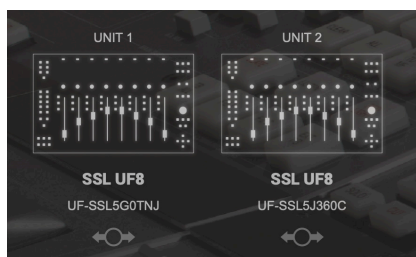

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

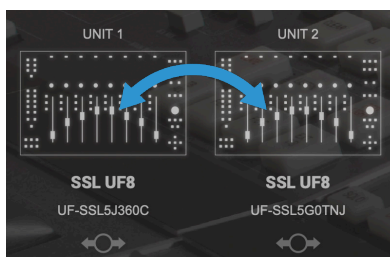


STEP 2 : Click and drag to re-order
units if necessary.

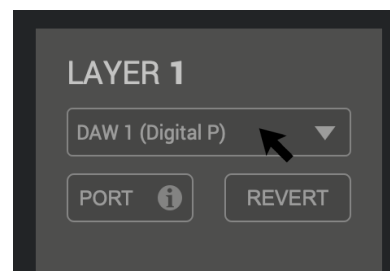


STEP 3 : Select the default Digital
Performer DAW profile from the UF8

Digital Performer Setup

4. In Digital Performer, go to the **Setup** menu and choose **Control Surface Setup...**
5. Click the **+** button and choose **SSL 360 Control** from the **Driver** drop-down box.
6. Make sure **Unit** is set to **Main Unit** and then configure the **Input Port** to **SSL V-MIDI Port 1 Source** and **Output Port** to **SSL V-MIDI Port 1 Destination**.
7. If you have additional UF8s, use the **+** button to add them as **Expander XT** units and increment the port numbers for each unit. e.g. the screenshot below shows 2 x UF8s, with the expander configured as **SSL V-MIDI Port 2 Source** and **SSL V-MIDI Port 2 Destination**.

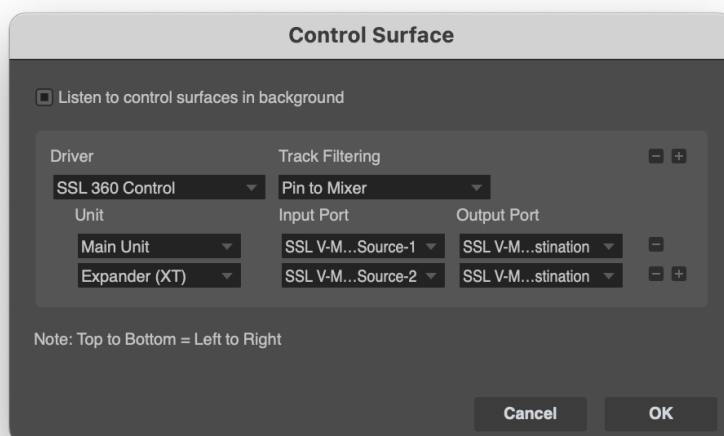

LCD Layout

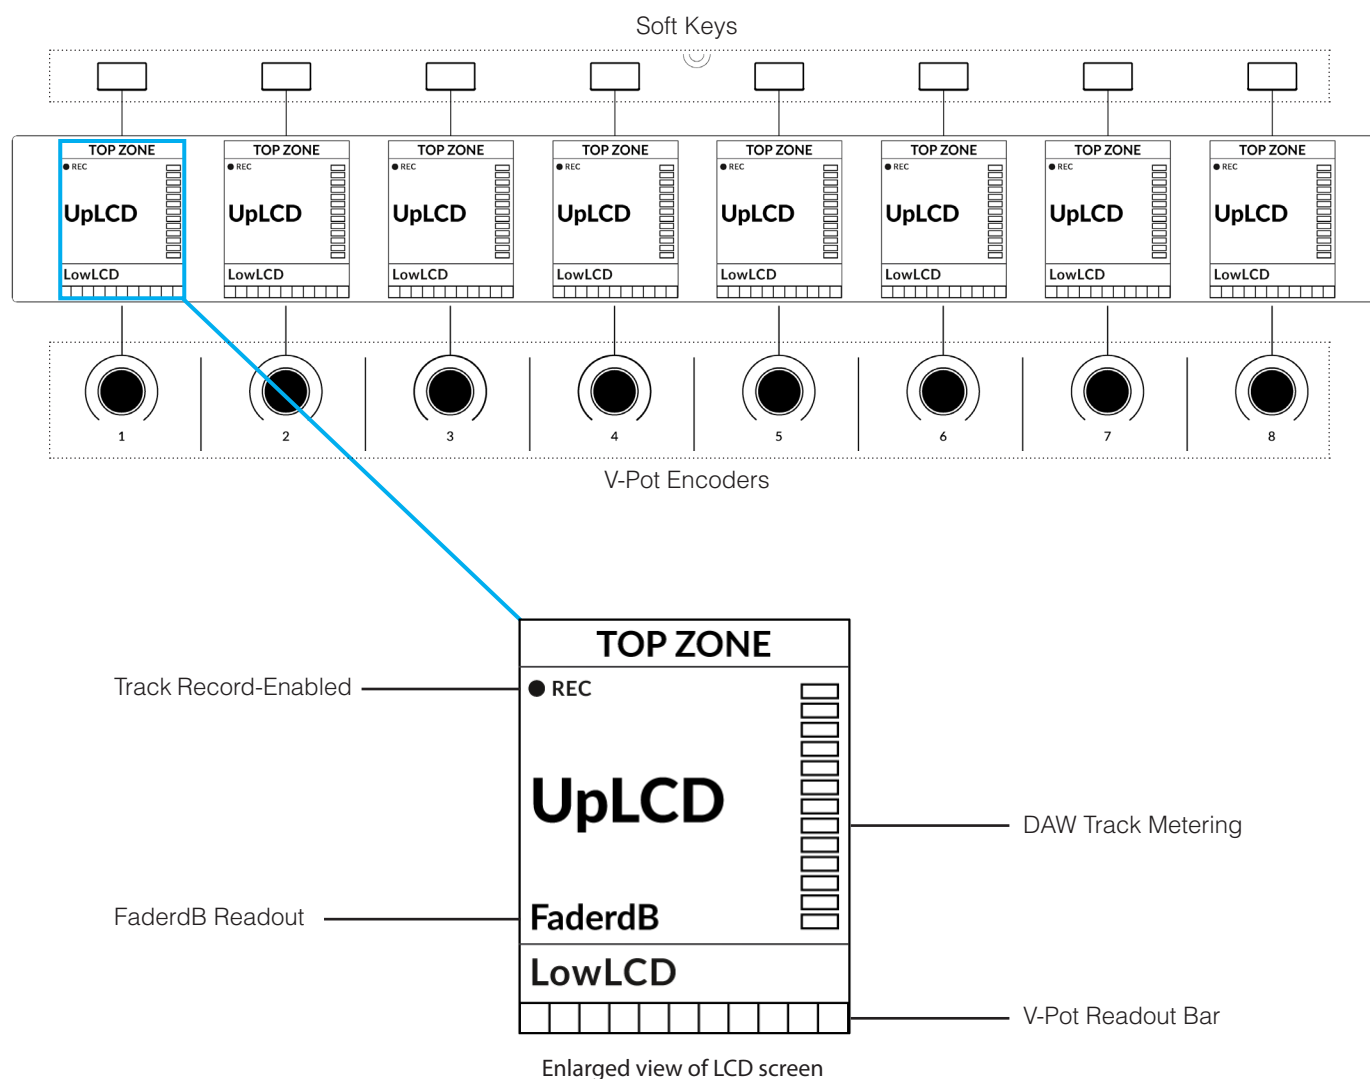

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In Digital Performer, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 7-character track name or parameter being controlled by the V-Pot, depending on the current mode.

FaderdB Readout - Fader dB readout of the DAW track level.


LowLCD - Displays a label or a value readout for the parameter currently assigned to the V-Pot, depending on the mode.

DAW Track Metering - 12-segment track metering + clip.

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial

This section guides you through using UF8 with Digital Performer.

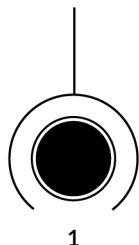


V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active and is typically used for tasks such as controlling Pan position, Sends Levels etc.

Press and hold the **DFLT/PRESET** command and whilst keeping held, press the V-Pot to default the currently assigned parameter.

100 mm Motorised Fader

Motorised, touch-sensitive faders provide physical control of your Digital Performer tracks and are great for balancing mix levels and writing automation.

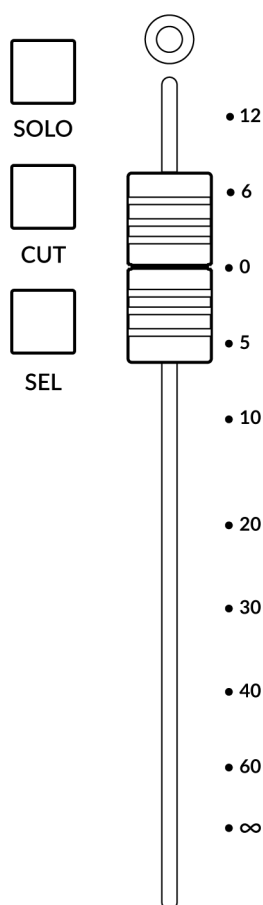

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Digital Performer.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.

NORM - The **SEL** keys select a track.

REC - The **SEL** keys act as record-arm keys.


AUTO (ZERO) - Whilst keeping this key pressed and held, press a **SEL** key to zero a fader.

SELECTION MODE



Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

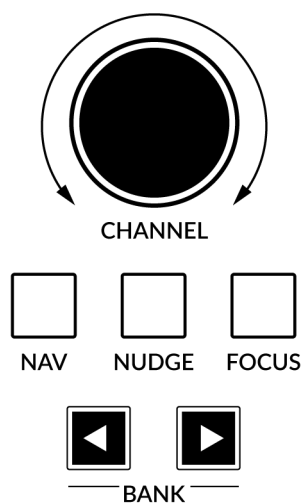

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate the playhead position in Digital Performer, allowing you to navigate through your session.

Nudge

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control.


*The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.*

Bank Keys

The **BANK < >** keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Cursor Keys and Mode Key

In the lower-right corner of UF8 are the Cursor keys with the Zoom key in the centre.

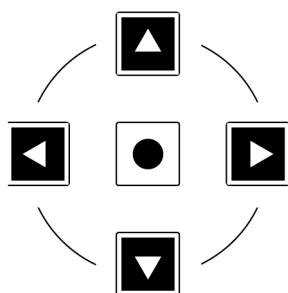

Zoom/scroll/nudge:

Provides zooming, scrolling and nudging when a graphic editor is the front-most window.

Other functions:

The up and down cursor keys are also used to change the assigned insert and sends being controlled on the V-Pots when in **SEND** and **PLUGIN** mode. Read more about this in the [V-Pot Assignment Modes](#) section.


Cursor Keys - Transport Mode

In SSL 360° v1.3 and above, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

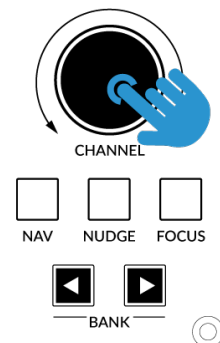

Press and hold the CHANNEL encoder to enter/exit Transport Mode

Assignment of Transport Commands


Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

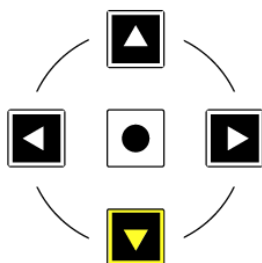

FINE/SHIFT KEY




The MCU Shift command is assigned to this key. Using this key in combination with other DAW commands to access modified functions. Refer to Digital Performer documentation for more information.


Automation

You can select the automation mode for each track directly from UF8. To do this, press and hold the desired automation mode button and whilst keeping it held, press the **SEL** key on the tracks you wish to apply it to. The **OFF** key does not apply for Digital Performer and is therefore disabled.

AUTOMATION

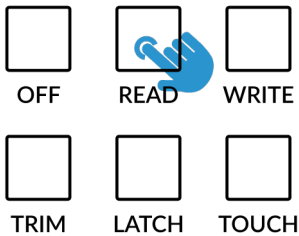

STEP 1: Press and hold the desired automation mode.

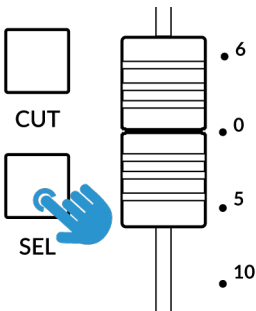

STEP 2: Press the SEL key on the tracks you wish to apply it to.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

- Default Quick Key Assignments:
- 1 - F1 (Sequence)
 - 2 - F3 (Mixing Board)
 - 3 - F2 (QuickScribe)

QUICK



Page Keys

The **PAGE** < > keys have no native function in Digital Performer but can be assigned via SSL 360.




Flip

Pressing the **FLIP** key swaps the functions of the V-Pots and faders. This is useful for various reasons, including tasks such as controlling Send levels and plug-in parameters.



V-Pot Assignment Modes

UF8 offers direct access to Digital Performer's main V-Pot assignment modes. These V-Pot assignment modes are accessed via the keys labelled below: 1. **PAN**, 2. **EDIT**, 3. **SEND**, 4. **IO**, 5. **EQ**, 6. **DFLT/PRESET** and 7. **PLUGIN**.

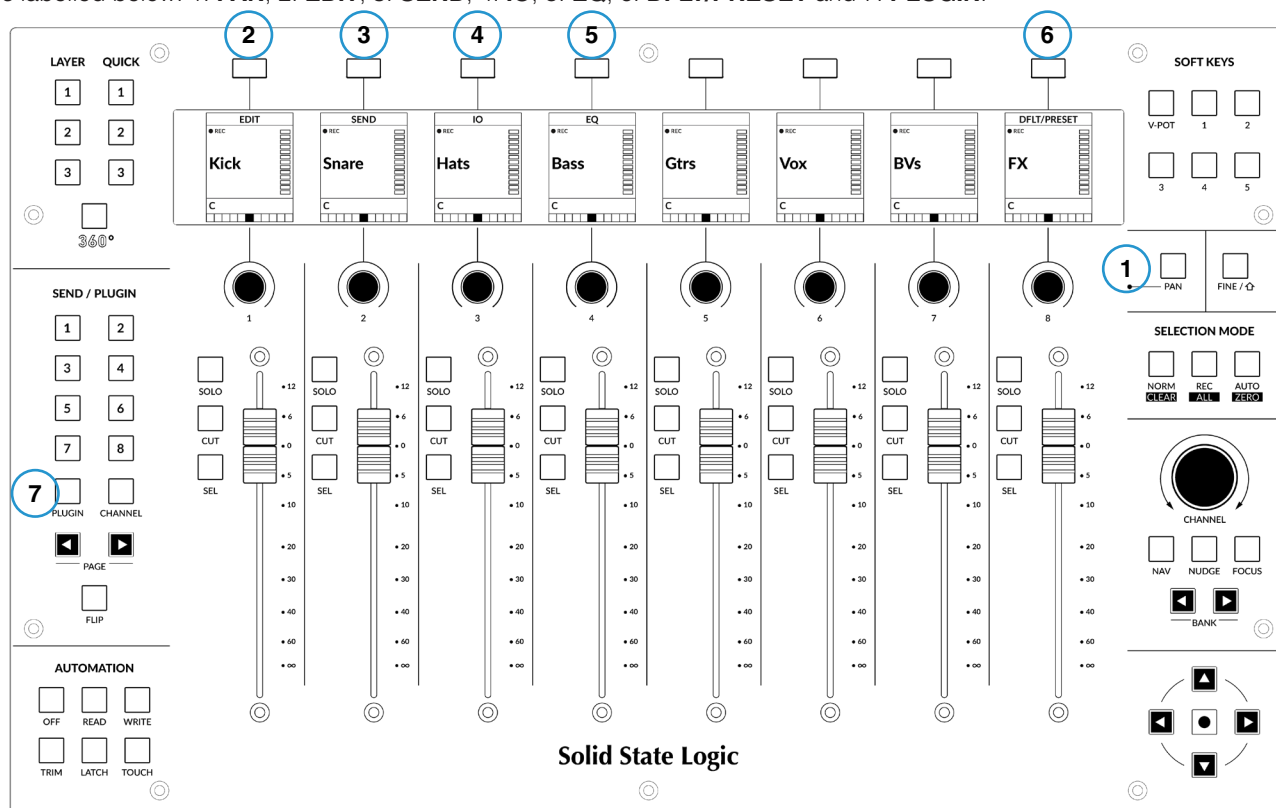

1 - PAN

Assigns the Pan controls to the V-Pots on UF8. Double-press the V-Pot to centre the Pan.

2 - EDIT

Allows access to editing sub-modes, particularly useful for controlling plug-in parameters. The key needs to be held and used in conjunction with pressing a V-Pot. Read the **PLUGIN** mode description on the next page for more information.

3 - SEND

Assigns the Send controls to the V-Pots. Push a V-Pot to toggle the send mute state.

Use the UF8's up and down cursor keys (lower-right hand area) to move to a different send number. The **SEND / PLUG-IN 1-8** number keys will light to inform you which send you are currently controlling.

Use the **FLIP** key to flip Sends to the faders.

4 - IO

IO presents a menu from which you can access the following modes by pushing on the corresponding V-Pot:

- **Pan** - V-Pots control Pan.
- **SndVal** - V-Pots control Send Levels and Send Mute.
- **SndPan** - V-Pots control Send Panning.
- **SndOut** - V-Pots select the output to which the sends are assigned.
- **Input** - V-Pots control track input.
- **Output** - V-Pots control track output.
- **Effect** - V-Pots select effects for slots in the mixing board, and choose presets.
- **Prefs** - Accesses preferences for the Mackie Control.

5 - EQ

Press and hold the **EQ** key, then press the V-Pot associated with a track to insert a ParaEQ. Please note, you must have **PLUGIN** mode engaged first for this to work.

6 - DFLT/PRESET

Used for defaulting pans and sends, or, loading plug-in presets in **PLUGIN** mode. The key needs to be held and used in conjunction with turning/pressing a V-Pot.

7 - PLUGIN

Assigns the V-Pots to **PLUGIN** mode.

TOP-LEVEL MODE

The names of the plug-ins across a given insert row are shown on the bottom of the UF8 screens. Turn the V-Pots to choose a different plug-in. It will be automatically selected.

Push the V-Pot to bypass a plug-in.

Use the UF8's up and down cursor keys to move to a different insert row. The **SEND / PLUG-IN 1-8** keys will light to indicate the insert slot row you are currently looking at.

Presets - Hold down the **DFLT/PRESET** key, then turn the V-Pot corresponding to the track you want to assign a preset to.

EDITING SUB MODE

To control a plug-in's parameters, press and hold the **EDIT** key and whilst keeping held, press the V-Pot of the plug-in you would like to control. The parameters will spill across the V-Pots.

Use the **< BANK >** keys to access additional parameter pages.

Use the **FLIP** key to control plug-in parameters on the faders.


Press the **EDIT** key again to return to the top-level mode.

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

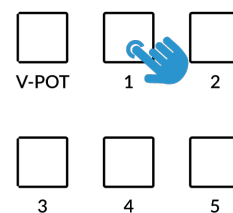


User Bank 1

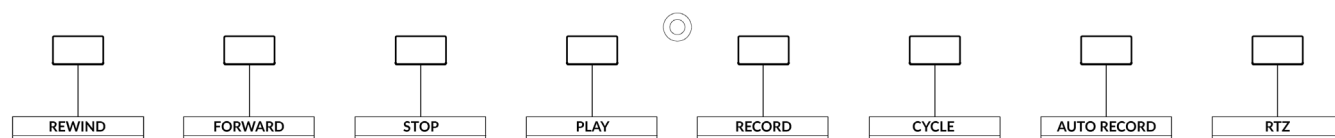


User Bank 2

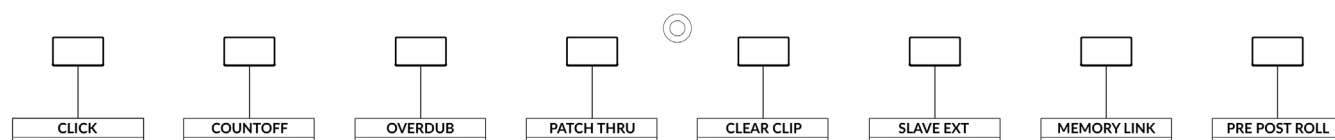


User Bank 3

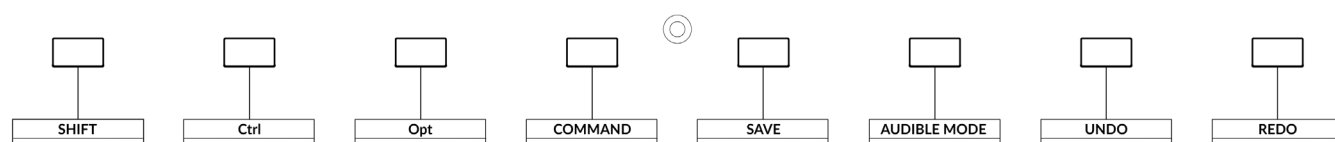

User Bank 4

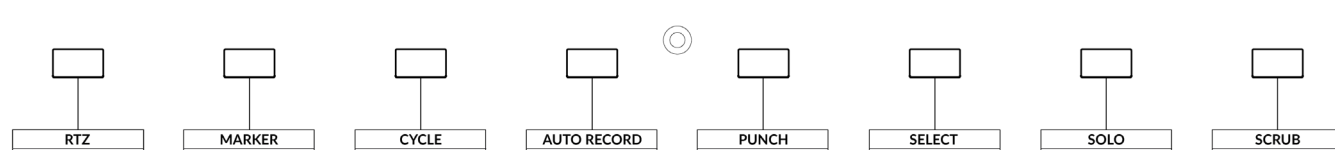

User Bank 5

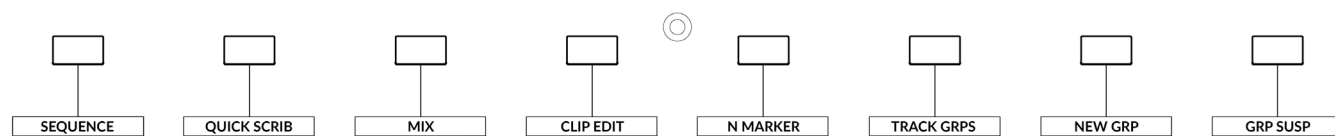

MARKER MODE

Press the **MARKER** key (pre-assigned to Soft Key Bank 4, Key 2) to activate marker mode. When active, the **REWIND** and **FAST FWD** buttons scroll to the previous and next marker respectively.

Assignable DAW Commands List - Digital Performer

The following DAW commands are available in SSL 360° to assign to any of the User or Quick Keys.


IO	Read
Pan	Write
EQ	Touch
Send	Latch
Plugin	Trim Touch
Dflt/Preset	Save
Flip	Audible Mode
Edit	Trim Latch
Level Meters	Undo
Time Format	Redo
F1 (Sequence)	Marker
F2 (QuickScribe)	RTZ
F3 (Mixing Board)	Cycle
F4 (Clip Editor)	Auto Record
F5 (New Mrker)	Punch
F6 (Track Grps)	Select
F7 (New Grp)	Solo
F8 (Grp Susp)	Forward
Click	Rewind
Countoff	Stop
Overdub	Play
Patch Thru	Record
Clear Clip	Scrub
Slave Ext	Play Footswitch
Memory Link	Record Footswitch
Pre Post Roll	Rec/Rdy
Shift	Previous Marker
Option	Next Marker
Control	
Commandt	

FL Studio with UF8 - Tutorial


The following tutorial guides you through configuring and using the default FL Studio profile on LAYER 1 of UF8. If you wish to configure FL Studio on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **FL Studio** using the drop-down list. If FL Studio is not available from the drop-down list it is because you have not configured it as DAW 1 on the **CONTROL SETUP** page - ensure you do this first.

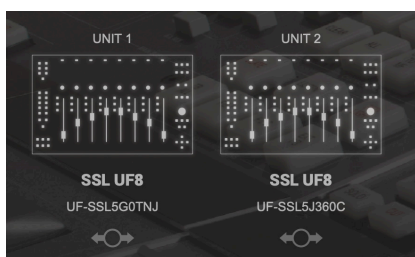

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

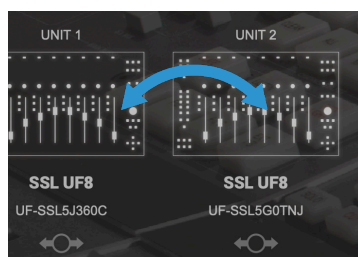


STEP 2 : Click and drag to re-order
units if necessary.

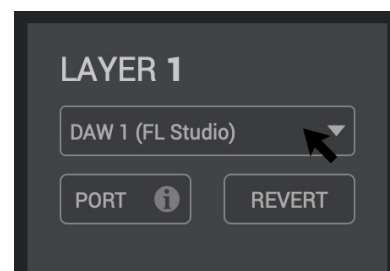


STEP 3 : Select the default REAPER
DAW profile from the UF8 page.

FL Studio Setup

4. In FL Studio, go to the **Options** menu and open **MIDI settings**.
5. In the **Controller Type** drop-down list, choose **SSL 360 UF8/UF1**.
6. Configure **SSL V-MIDI Port 1 Destination** to **Port 1** and **SSL V-MIDI Port 1 Source** to **Port 1**. Ensure **Enable** is active.
7. If you have multiple UF8s, repeat steps 5 and 6 but choose **SSL 360 UF8 Extender** and configure **SSL V-MIDI Port 2 Destination** to **Port 2** and **SSL V-MIDI Port 2 Source** to **Port 2**.

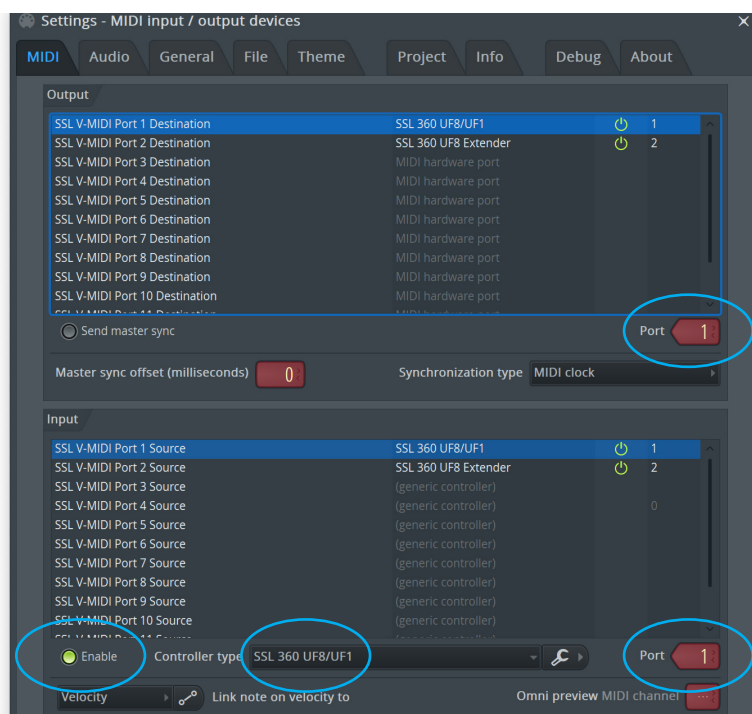

LCD Layout

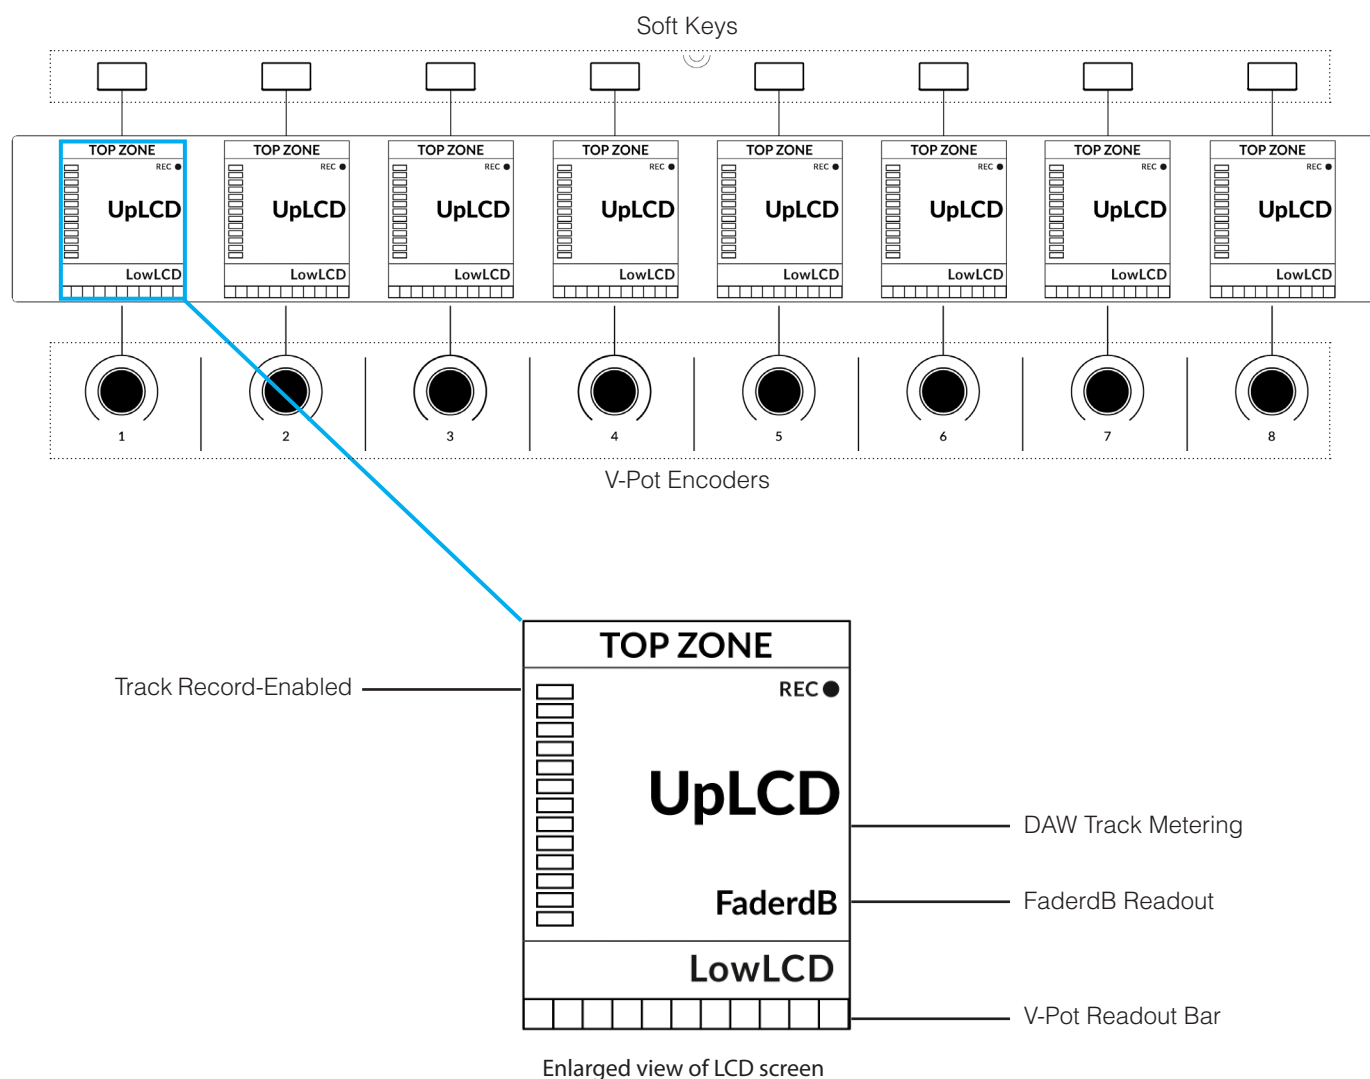

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In FL Studio, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 6-character track name or parameter being controlled by the V-Pot, depending on the current mode.

FaderdB Readout - Fader dB readout of the DAW track level.


LowLCD - Displays a label or a value readout for the parameter currently assigned to the V-Pot, depending on the mode.

DAW Track Metering - 12-segment track metering + clip.

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial


This section guides you through using UF8 with FL Studio.

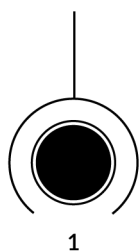

V-Pot

At the top of the strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active and is typically used for tasks such as controlling Pan position, Sends Levels etc.

The V-Pot has a push function, which varies dependent on the current mode. Whilst controlling pans, press the V-Pot to default the pan to centre. Whilst controlling sends, push the V-Pot to enable/disable the send.

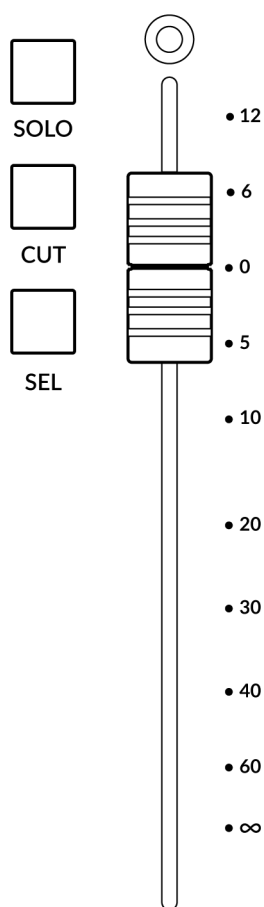

100 mm Motorised Fader

A motorised, touch-sensitive fader provides physical control of your FL Studio tracks and is great for balancing mix levels and writing automation.

Solo, Cut & Sel (Select)

The strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in FL Studio.

Flip

Pressing the **FLIP** key swaps the function of the V-Pot and fader.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.


NORM - The **SEL** keys select a track.

REC - The **SEL** keys act as record-arm keys.

AUTO - Disabled. This key only applies for Pro Tools profiles.


The secondary labels **CLEAR**, **ALL** and **ZERO** do not apply for FL Studio.

SELECTION MODE

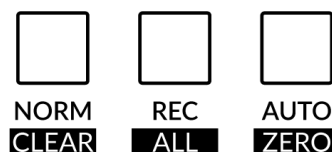

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

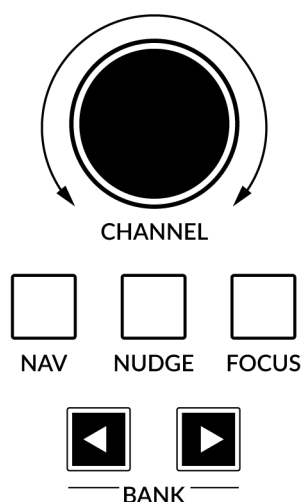

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate in **NAV** mode. The primary function of this mode depends on the focused window. e.g. if you are focused on the Playlist window, it scrolls the playhead position across the timeline. Or, if you are focused on the Mixer window, it changes the highlighted mixer track.

There are number of other functions that can be pressed and held, to temporarily override what **NAV** mode is controlling, such as **<PATTERN>**, **<TEMPO>** and more. Whilst keeping the function held, the encoder is able to adjust the function in someway - e.g. change tempo. Any command that has a label shown in angled brackets (**< >**) can work with the encoder in this way.

Nudge


When focused on the Playlist window, the **NUDGE** key puts the **CHANNEL** encoder into a mode that zooms in/out the height of the track. When focused on other windows such as the Mixer or Piano Roll, it forces the operation of the jog wheel back onto scrolling the playhead position in the Playlist timeline. Alternatively, **NUDGE** mode can also be customised in the SSL 360° UF8 page, by changing it from **Factory** to **User**. This can be useful if you want to use it for tasks such as adjusting clip gain. e.g. you could assign the DAW's keyboard shortcuts for clip gain up and down.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control. The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.

Bank Keys

The **BANK < >** keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

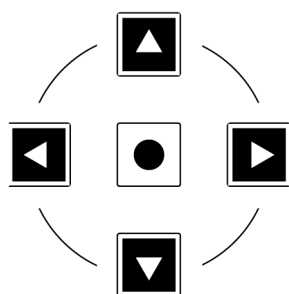

Cursor Keys and Mode Key

The cursor keys allow you to navigate around the focused window, whatever that may be. e.g. navigate the Browser/Plug-in Picker sounds, up and down the Channel Rack. The middle button has no function.

Cursor Keys - Transport Mode

In SSL 360° v1.3 and above, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

Assignment of Transport Commands



Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND (Start of audio)**

Right arrow is **FORWARD (End of audio)**

Circle Key is **RECORD**

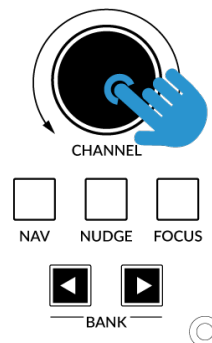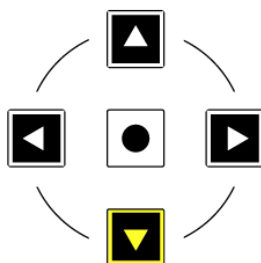

Press and hold the CHANNEL encoder to enter/exit Transport Mode

FINE/SHIFT KEY



The key on UF8 labelled **FINE / SHIFT** is programmed to execute the Shift MCU command in FL Studio. There is no documentation on the Shift function in FL Studio's control implementation.

Automation

Automation modes are not applicable to FL Studio and these buttons are therefore unassigned in the factory profile, however, you can assign any available DAW command or keyboard shortcut to these buttons via the UF8 page in SSL 360 software.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Pattern/Song Mode
- 2 - Record Mode
- 3 - Edison

QUICK



Send/Plug-in 1-8, Channel and Page Keys

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360°.


Flip

Pressing the **FLIP** key swaps the functions of the V-Pots and faders.



V-Pot Assignment Modes

UF8 offers direct access to FL Studio's main V-Pot assignment modes. These V-Pot assignment modes are accessed via the keys labelled below: 1&6 **PAN**, 2. **SEND**, 3. **FREE**, 4. **EQ**, 5. **STEREO SEP**, 7. **SMOOTH**, 8. **EFFECTS**.

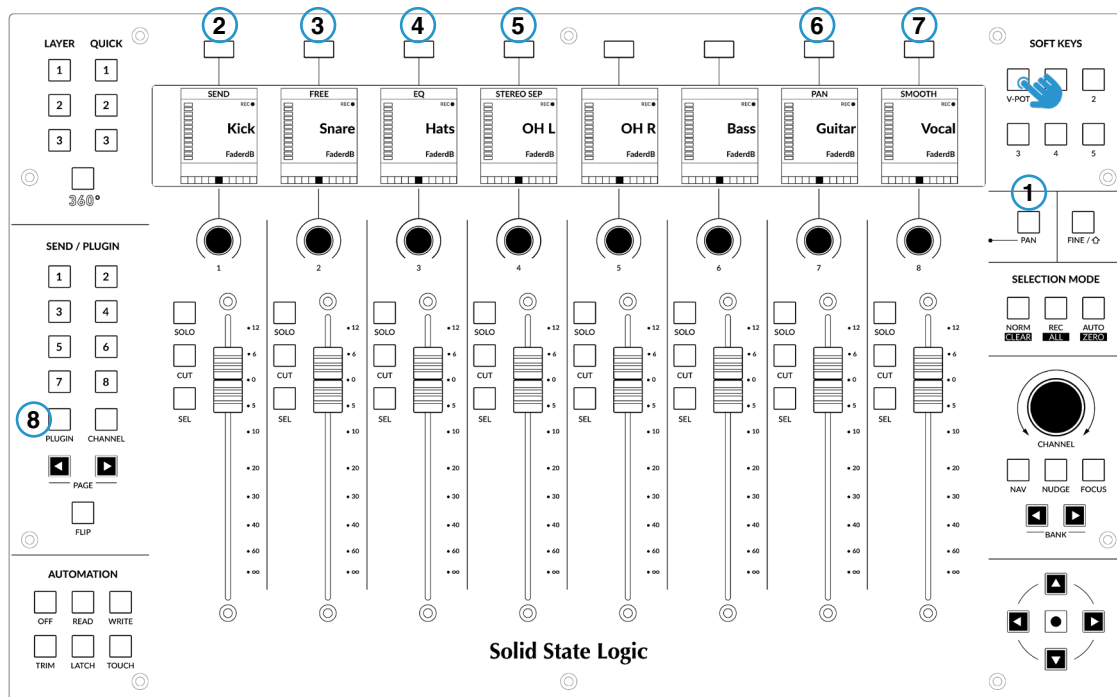

1/6 - PAN

Assigns the Pan controls to the V-Pots on UF8. Press the V-Pot to centre the Pan.

2 - SEND

Allows you to control the sends of the selected track on the V-Pots. Push V-Pot to enable/disable sends.

3 - FREE

Free assignment mode. Put the V-Pots and Faders into a free assignment mode. At the time of writing, we have experienced issues with assigning to V-Pots in this mode, but assigning the faders works well. To use this function:

- Press the **FREE** button to go into **FREE** assignment mode .
- You will notice V-Pots and Faders stop performing their normal duties, as they are free to assign to parameters such as plug-in parameters.
- Right-click on a control you wish to assign and select '**Link to controller...**'
- Move the fader you wish to assign.

4 - EQ

Assigns the the built-in EQ of the selected track to the V-Pots. The parameters are arranged as follows:

V-Pot 1 - Band 1 Gain

V-Pot 2 - Band 1 Frequency (push for Q)

V-Pot 3 - N/A

V-Pot 4 - Band 2 Gain

V-Pot 5 (Press 5-8 button to access) - Band 2 Frequency (push for Q)

V-Pot 6 - N/A

V-Pot 7 - (Press 5-8 button to access) - Band 3 Gain

V-Pot 8 - (Press 5-8 button to access) - Band 4 Frequency (push for Q).

5 - STEREO SEP(ARATION)

Assigns the Stereo Separation controls to the V-Pots on UF8. Press the V-Pot to default the Stereo Separation.

7 - SMOOTH

Toggles control smoothing on/off.

8 - EFFECTS


Allows you to control the mix of the selected track's FX (inserts) on the V-Pots. Push to enable/disable FX slot

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

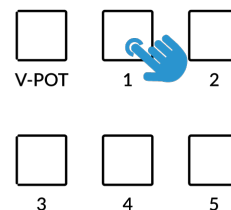


User Bank 1

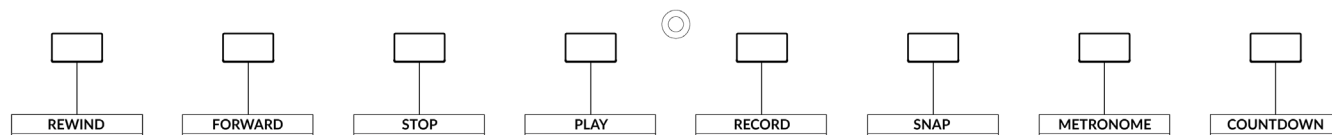


User Bank 2

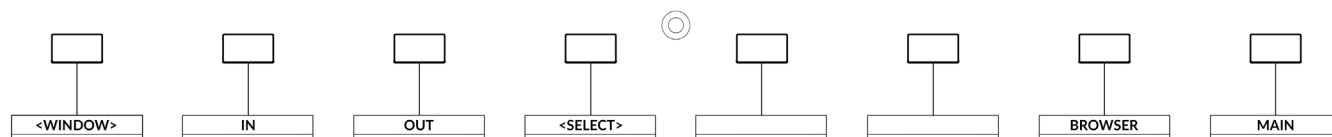


User Bank 3

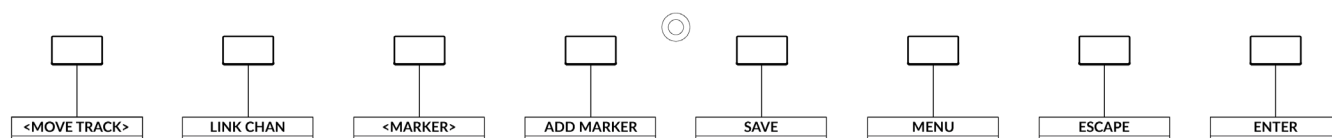

User Bank 4

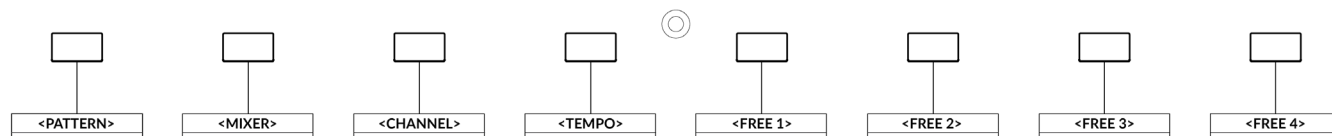

User Bank 5

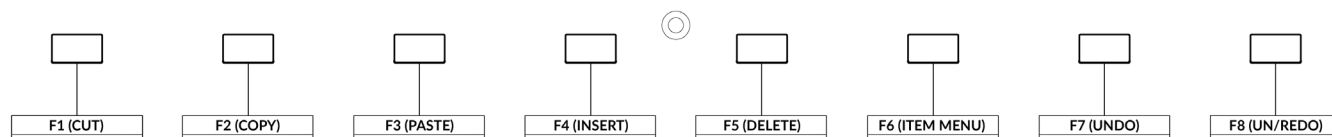

Assignable DAW Commands List - FL Studio

The following DAW commands are available in SSL 360° to assign to any of the user-assignable keys.

If the function name is inside angle brackets (< >), this indicates the function changes the operation of the **CHANNEL** encoder when in **NAV** mode.


Stereo Sep(ARATION)	Browser
Pan	Main
EQ	<Window>
Send	Out
Effects	In
Free	Save
Flip	Menu
Smooth	<Select>
Display Mode	Escape
SMPTE/Beats	Enter
F1 (Cut)	<Move Track>
F2 (Copy)	Edison
F3 (Paste)	Snap
F4 (Insert)	Metronome
F5 (Delete)	Countdown
F6 (Item Menu)	Mode
F7 (Undo)	Pat/Song
F8 (Un/Redo)	Forward
<Pattern>	Rewind
<Mixer>	Stop
<Channel>	Play
<Tempo>	Record
<Free 1>	Mode
<Free 2>	Play Footswitch
<Free 3>	Record Footswitch
<Free 4>	Rec/Rdy
Shift	Previous Marker
Link Chan	Next Marker
<Marker>	Zoom
Add Marker	

Samplitude/Sequoia with UF8 - Tutorial


The following tutorial guides you through configuring and using the default Samplitude/Sequoia profile on LAYER 1 of UF8. If you wish to configure Samplitude/Sequoia on a different layer, please refer to the DAW Communication section of this User Guide to ensure your DAW is configured for the correct **SSL V-MIDI** ports.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set **Layer 1** to **Samplitude** using the drop-down list. If Samplitude is not available from the drop-down list it is because you have not configured it as DAW 1 on the **CONTROL SETUP** page - ensure you do this first.

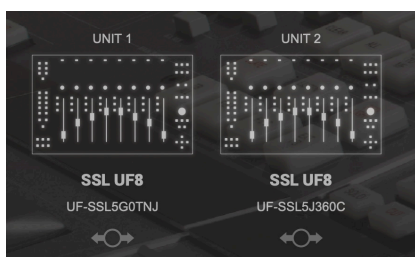

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

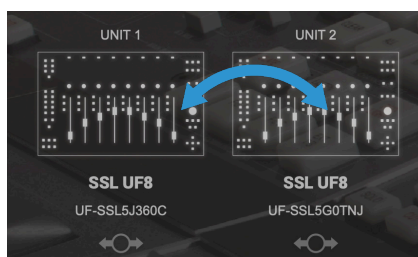


STEP 2 : Click and drag to re-order
units if necessary.

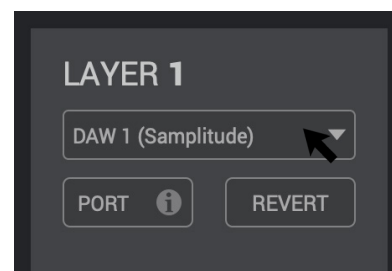


STEP 3 : Select the default
Samplitude DAW profile from the
UF8 page.

Samplitude/Sequoia Setup

4. In Samplitude/Sequoia, go to the **File** menu, **Program Preferences** and open the **System/Audio** menu.
5. Select the **Hardware Controller** from the left-hand list, then choose 'Add New'. From the list, pick **SSL UF8**.
6. Configure MIDI input to **SSL V-MIDI Port 1** and MIDI output **SSL V-MIDI Port 1**. If you have additional UF8s, also add 'Additional UF8' and increment the port number each time. e.g. The first 'Additional UF8' would be set to **SSL V-MIDI Port 2** on the MIDI input and output.
7. On the **Options** tab, change **Synchronize** with to be 'Active track', this will ensure UF8 follows the selected track in Samplitude/Sequoia.

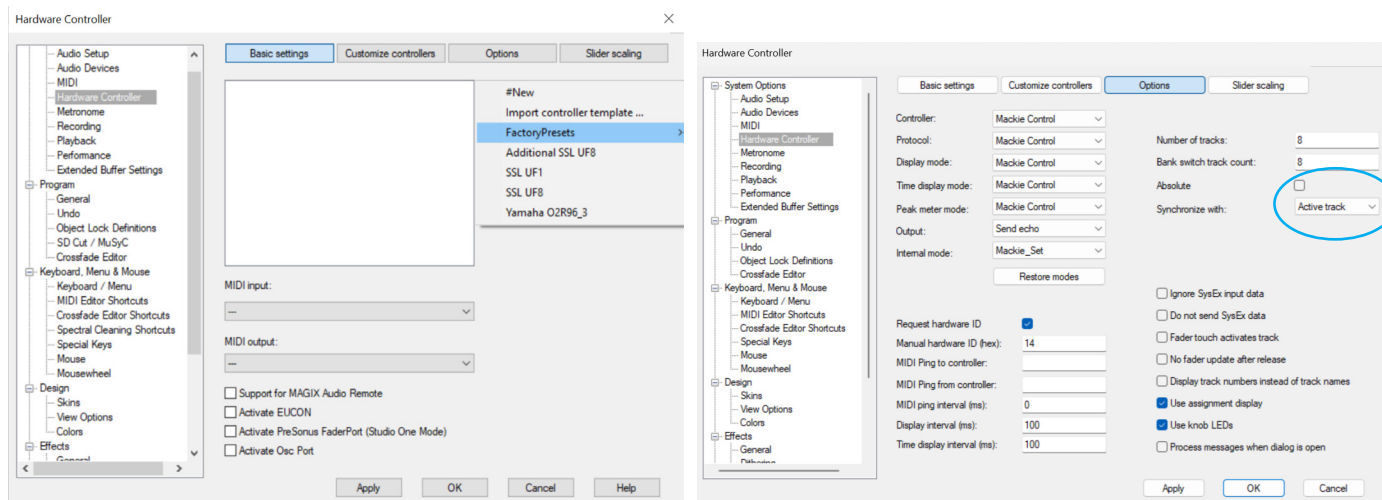

LCD Layout

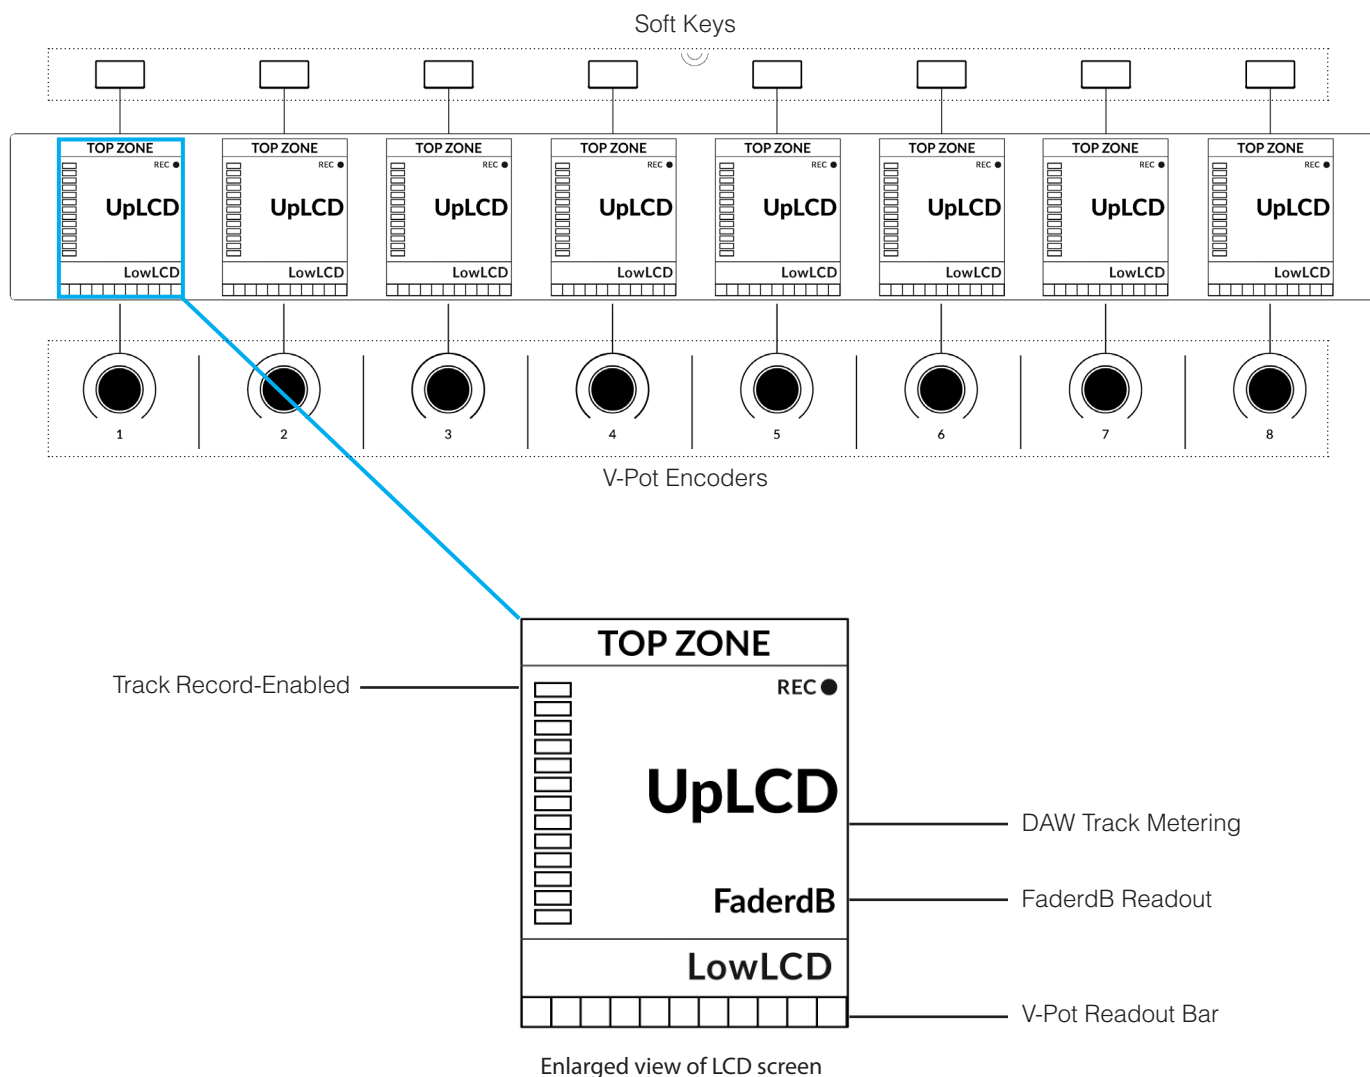

Top Zone - Provides a label for the function assigned to the Soft Key button directly above.

Track Record-Enabled (REC) - In Samplitude/Sequoia, the **REC** text appears when a track is record-enabled.

UpLCD - Displays the 7-character track name or parameter being controlled by the V-Pot, depending on the current mode.

FaderdB Readout - Fader dB readout of the DAW track level.


LowLCD - Displays a label or a value readout for the parameter currently assigned to the V-Pot, depending on the mode.

DAW Track Metering - 12-segment track metering + clip.

V-Pot Readout Bar - Displays the position of the currently assigned V-Pot (encoder) function.

Tutorial

This section guides you through using UF8 with Samplitude/Sequoia.

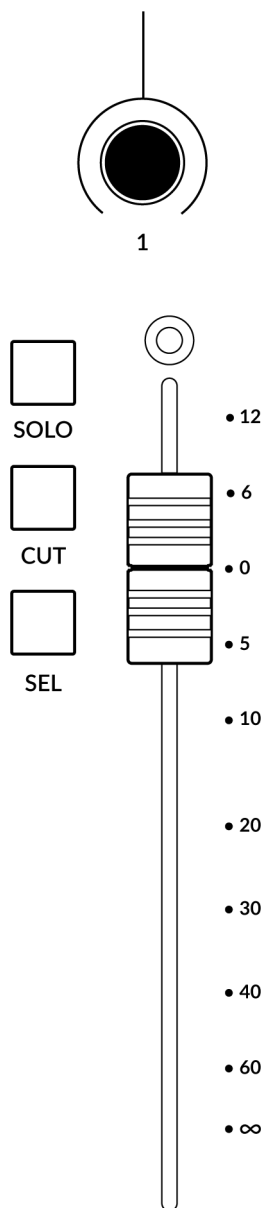

V-Pot

At the top of the strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active and is typically used for tasks such as controlling Pan position, Sends Levels etc.

The V-Pot has a push function, which varies dependent on the current mode. Whilst controlling pans, press the V-Pot to default the pan to centre. Whilst controlling sends, push the V-Pot to set the send to 0 dB.

100 mm Motorised Fader

A motorised, touch-sensitive fader provides physical control of your Samplitude/Sequoia tracks and is great for balancing mix levels and writing automation.

Solo, Cut & Sel (Select)

The strip contains **SOLO**, **CUT** and **SEL** keys corresponding to the solo, mute and select features for each track in Samplitude/Sequoia.

Flip

Pressing the **FLIP** key swaps the function of the V-Pot and fader.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.


NORM - The **SEL** keys select a track.

REC - The **SEL** keys act as record-arm keys.

AUTO - Disabled. This key only applies for Pro Tools profiles.


The secondary labels **CLEAR**, **ALL** and **ZERO** do not apply for Samplitude/Sequoia.

SELECTION MODE

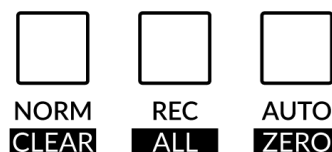

Channel Encoder

By default, the **CHANNEL** encoder is used to move your DAW tracks across the UF8 surface, in increments of 1 channel at a time. If you find yourself in **NAV** or **FOCUS** modes, simply push the **CHANNEL** encoder to return to **CHANNEL** mode.

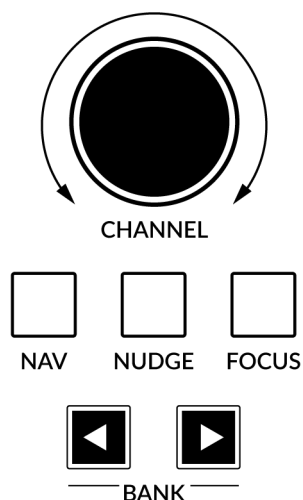

Nav

Pressing the **NAV** key changes the **CHANNEL** encoder to operate in **NAV** mode. This is used to scroll through the session timeline. By simply moving the Jog Wheel, the playhead will move through the timeline forward by moving the Jog wheel clockwise & backwards in an anticlockwise movement.

Nudge

The **NUDGE** key puts the encoder into scrub but this mode of the **CHANNEL** encoder can also be customised in the SSL 360° UF8 page in the **CHANNEL ENCODER** section. This can be useful if you want to use the encoder for tasks such as adjusting clip gain. e.g. you could assign the DAW's keyboard shortcuts for clip gain up and down.

Focus

Pressing the **FOCUS** key puts the **CHANNEL** encoder into Focus mode, which emulates the scroll function of a mouse. This can be a really nice way of controlling plug-ins or anything else on screen that responds to a mouse scroll operation. Simply open a plug-in GUI, hover your computer mouse over a control and turn the encoder for hands-on control. The sensitivity of **FOCUS** mode will vary depending on what plug-in or on-screen element you are controlling. You can use the mouse scroll sensitivity setting in your computer preferences to adjust to taste.


Bank Keys

The **BANK** < > keys allow you to move tracks across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Cursor Keys and Mode Key

When the **MODE** key (middle button) is active, the up, down, left and right cursor keys adjust the vertical and horizontal height of the tracks on the main arrangement page.

When the **MODE** key is not lit, the up and down arrows change the selected track.

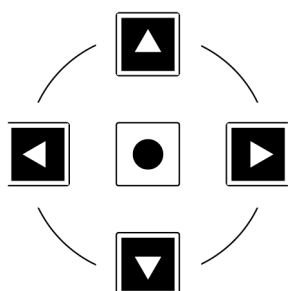

Cursor Keys - Transport Mode

In SSL 360° v1.3 and above, the cursor keys can be switched into **Transport Mode**, which assigns the DAW's Stop, Play, Rewind, Forward and Record commands across the five keys.

How to enter/exit Transport Mode for the Cursor Keys

Press and hold the **CHANNEL** encoder to enter Transport mode.

To return the cursor keys to their normal operation, press and hold the **CHANNEL** encoder again.

Assignment of Transport Commands



Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND (Start of audio)**

Right arrow is **FORWARD (End of audio)**

Circle Key is **RECORD**

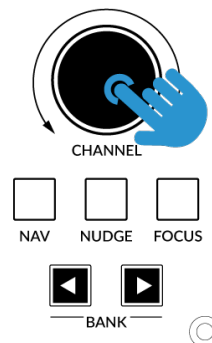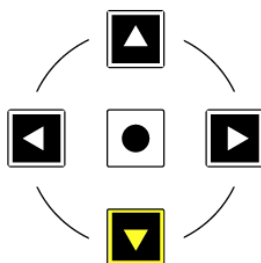

Press and hold the CHANNEL encoder to enter/exit Transport Mode


FINE/SHIFT KEY



The key on UF8 labelled **FINE / SHIFT** is programmed to execute the **Shift** MCU modifier in Samplitude/Sequoia. This command is used to modify certain functions.


Automation

You can select the automation mode for each track directly from UF8. To do this, select a track you want to change the automation mode of using a **SEL** key. Then, press the desired automation mode from the **AUTOMATION** keys in the lower-left corner of UF8.

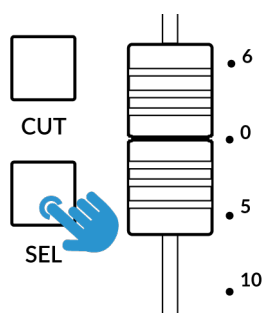

STEP 1: Select a track using SEL key

AUTOMATION

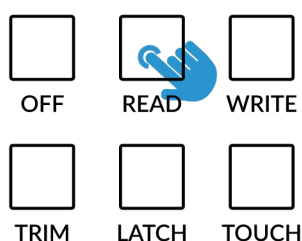

STEP 2: Select the desired automation state.

Note - the **OFF** button itself does not function. In order to toggle a track into the **OFF** automation state, you must press and hold the **Shift** MCU modifier and whilst keeping it held, press the **READ** button.

Quick Keys

The three **QUICK** keys located at the top-left of UF8 are user-assignable keys that are best used for access to your most frequent DAW commands or keyboard shortcuts. By default, they are assigned to the following commands but they can of course be changed in SSL 360°.

Default Quick Key Assignments:

- 1 - Pattern/Song Mode
- 2 - *Unassigned*
- 3 - *Unassigned*

QUICK



Send/Plug-in 1-8, Channel and Page Keys

Disabled by default but can be assigned to any DAW command or keyboard shortcut using SSL 360°.


Flip

Pressing the **FLIP** key swaps the functions of the V-Pots and faders.



V-Pot Assignment Modes

UF8 offers direct access to Samplitude/Sequoia's main V-Pot assignment modes. These V-Pot assignment modes are accessed via the keys labelled below: 1&2 **TRACK/ACT CTRL**, 3. **AUX SENDS**, 4. **EQ**, 5. **PLUGIN**.

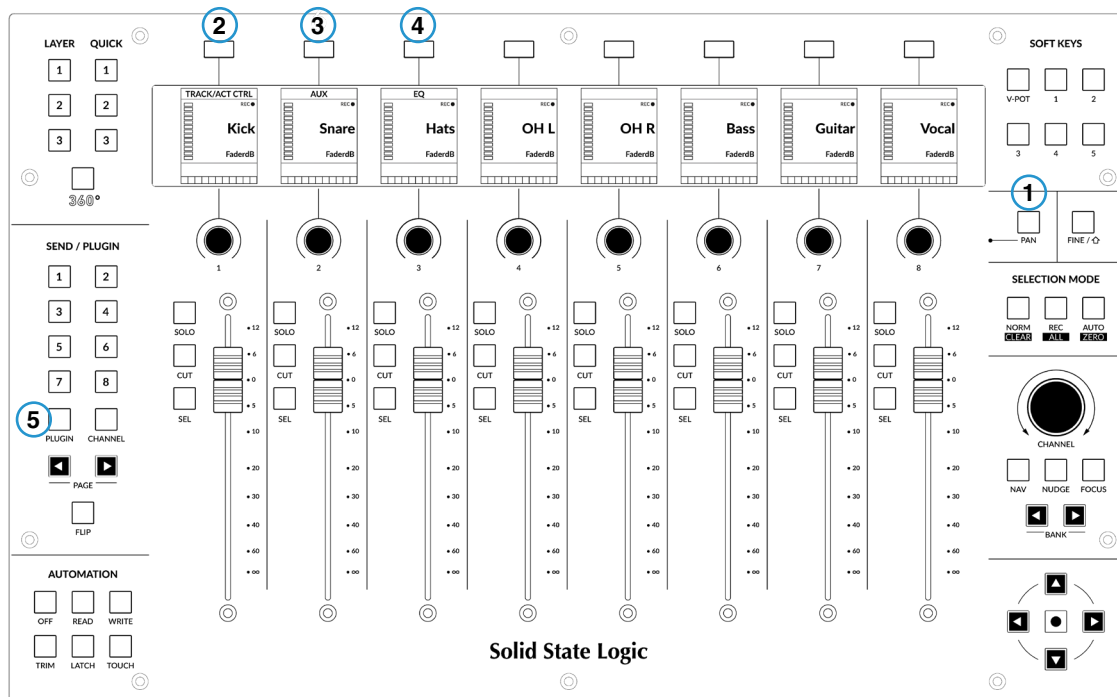

1&2 - TRACK/ACT CTRL

The first press assigns the Pan controls to the V-Pots on UF8. Press the V-Pot to centre the Pan.

A second press activates 'Active Control mode'. In this mode, the 1st fader will be assigned to whatever control you click on with your mouse in Samplitude/Sequoia.

3 - AUX

Allows you to control the aux sends on the V-Pots. Push to default a send to 0 dB. There are two different methods for controlling aux sends. Toggling this button will determine which method you are using:

Controlling all sends on the selected track - assigns the aux sends of the selected track across the V-Pots.

Controlling a particular send slot across multiple tracks. Use the **BANK < >** keys to change the particular send you are controlling e.g. Send 1, Send 2 etc.

4 - EQ

Assigns the the built-in EQ of the selected track to the V-Pots. The arrangement of EQ controls across the V-Pots is labelled on the UF8 screens. Toggling the EQ button will offer an alternative arrangement for the way in which the EQ is presented across the V-Pots.

5 - PLUGIN

Allows you to control plug-ins. Pressing the **PLUGIN** button once will present the names of the plug-ins you have inserted on the selected track across the screen.

Press the V-Pot underneath the name of the plug-in you want to control. The parameters will be mapped out across the V-Pots. Use the **BANK < >** buttons to access all available parameters.


When you have finished adjusting the plug-in parameters, press the **PLUGIN** button again to go back to seeing the names of the plug-ins you have on the selected track, or press a different V-Pot assignment function to control something else.

User Bank Pre-Assignments


User Banks 1-5 allow you access to various DAW commands or keyboard shortcuts on the 8 soft keys along the top of UF8. These can of course be changed to any of the available DAW commands or your own keyboard shortcut sequences in the UF8 page of SSL 360°.

Select User Banks using Keys **1-5** in the **SOFT KEYS** section.


SOFT KEYS

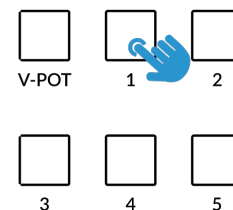


User Bank 1

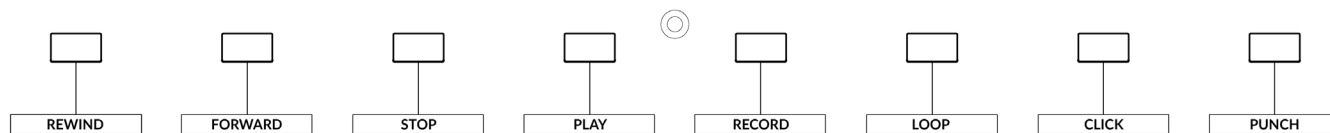


User Bank 2

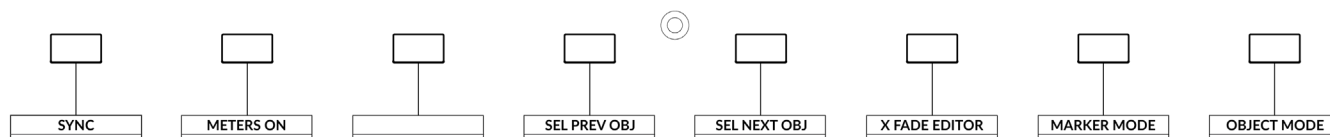

User Bank 3

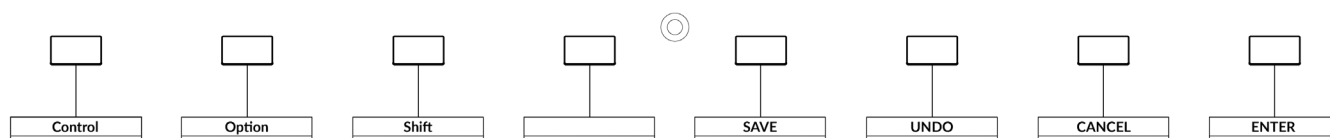

User Bank 4

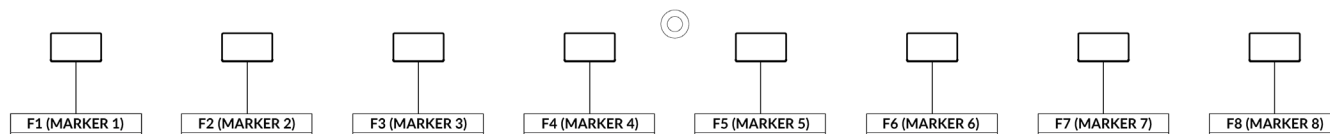

User Bank 5 - Unassigned

Assignable DAW Commands List - Samplitude/Sequoia

The following DAW commands are available in SSL 360° to assign to any of the user-assignable keys.


Track/Act Ctrl	Enter
EQ	Marker Mode
Plugin	Object Mode
Flip	Loop
Mixer	Punch
Name/Value	Sync
SMPTE/Beats	Click
F1 (Marker 1)	Meters On/Off
F2 (Marker 2)	Forward
F3 (Marker 3)	Rewind
F4 (Marker 4)	Stop
F5 (Marker 5)	Play
F6 (Marker 6)	Record
F7 (Marker 7)	Scrub
F8 (Marker 8)	Play Footswitch
Aux	Record Footswitch
Sel Prev Obj	Rec/Rdy
Sel Next Obj	Previous Marker
X Fade Editor	Next Marker
Shift	Off
Option	
Control	
Read	
Overwrite	
Touch	
Latch	
Trim	
Save	
Undo	
Group	

MIDI CC - Tutorial


The following tutorial guides you through configuring and using the MIDI CC (continuous controller) profile on UF8. MIDI CC provides a convenient way of controlling software synthesisers, sample libraries and external processing units like modular synths and reverbs.

SSL 360° Setup


- 1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
- 2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
- 3. Go to the **UF8** page and set a Layer to **MIDI CC** using the drop-down list. If MIDI CC is not available from the drop-down list it is because you have not configured it as a DAW (1, 2, or 3) option on the [CONTROL SETUP](#) page - ensure you do this first.

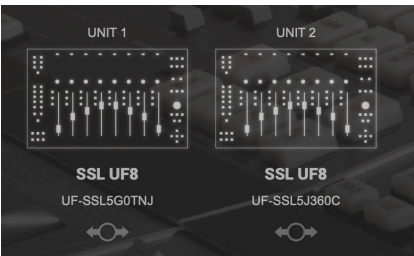

STEP 1 : Open SSL 360° application. Connected UF8s appear on-screen.

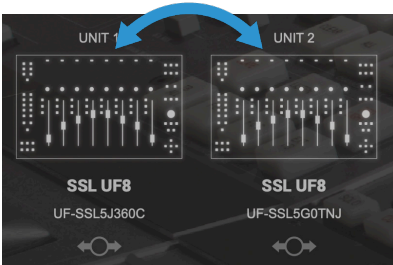

STEP 2 : Click and drag to re-order units if necessary.

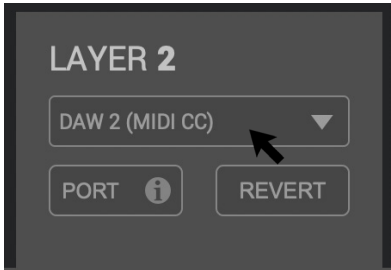

STEP 3 : Select MIDI CC from the UF8 page Layer drop-down list

MIDI CC Layer & V-MIDI Ports


A common way of working, would be to have your main DAW Layer configured as Layer 1 (Pro Tools, Logic, Cubase etc) and MIDI CC as Layer 2 (MIDI CC messages are sent on SSL V-MIDI Port 5). The Layer on which you configure MIDI CC, determines on which SSL V-MIDI Port the messages are sent. In your destination DAW, virtual instrument or hardware device, set the MIDI input to match the SSL V-MIDI port you have chosen

DAW LAYER	SSL V-MIDI Port
1	SSL V-MIDI Port 1
2	SSL V-MIDI Port 5
3	SSL V-MIDI Port 9

MIDI CC - DAW Transport

On the **CONTROL SETUP** page of SSL 360, set the **MIDI CC TRANSPORT LINKED TO** as your primary DAW Layer - in this example **DAW 1 Pro Tools**.

This will allow the cursor keys to operate the DAW's transport and the **CHANNEL** encoder (in **NAV** mode) to navigate the DAW timeline from the MIDI CC Layer.

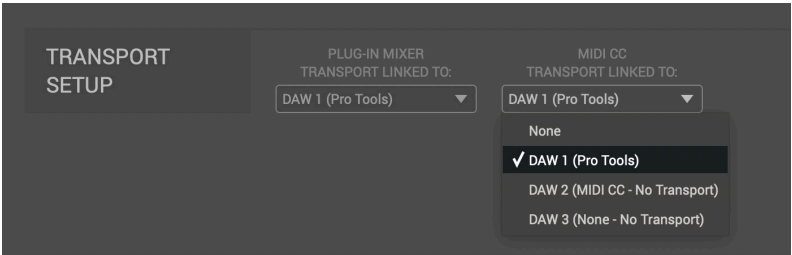

DAW & Virtual Instrument Setup

Every DAW and Virtual Instrument has its own configuration requirements to be ready to receive MIDI CC messages. Please consult the DAW's and Virtual Instrument's documentation to ensure they are ready to receive the messages being sent from UF8.

- You may need to enable SSL V-MIDI inputs in your DAW's global MIDI input filtering list.
- Some DAWs/Virtual Instruments automatically accept input from all MIDI sources - this may be desirable or you may want to specify only the relevant SSL V-MIDI port.
- Some DAWs require the Virtual Instrument track to be record-enabled (Pro Tools for instance).
- Some Virtual Instruments allow you to change or learn MIDI CC numbers, some don't.

External Device Setup


If you wish to use UF8's MIDI CC Layer to control external hardware MIDI devices, you have two options. Once again, please consult the hardware manufacturer's documentation to ensure the device you are trying to control is configured correctly.

Option 1 - MIDI Track in DAW session

Configure a MIDI track in your DAW session to receive incoming SSL V-MIDI Port (1/5/9) MIDI CC messages and then send them out via a hardware MIDI interface.

Option 2 - 3rd Party Application to route SSL V-MIDI


Use a program such as MIDI Patchbay, that allows you to route SSL V-MIDI Ports directly out of your hardware MIDI interface output, avoiding the need to go via the DAW.

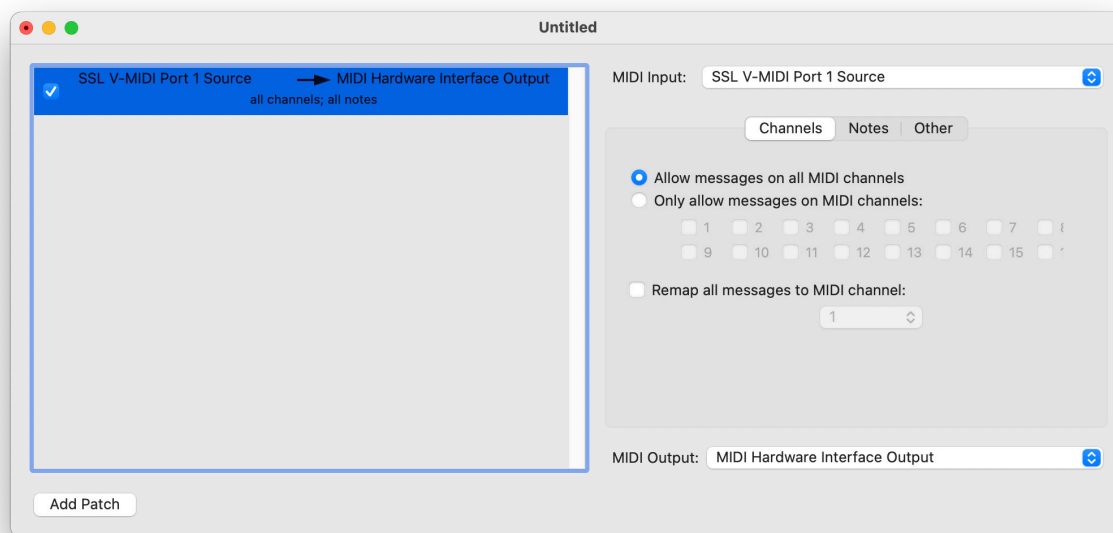

MIDI Patchbay copyright Peter Yandell

SSL 360° MIDI CC Layer Setup

The MIDI CC Layer setup allow you to customise the mapping of CCs across your UF8(s)'s faders, V-Pots, V-Pot switches and Soft Keys.

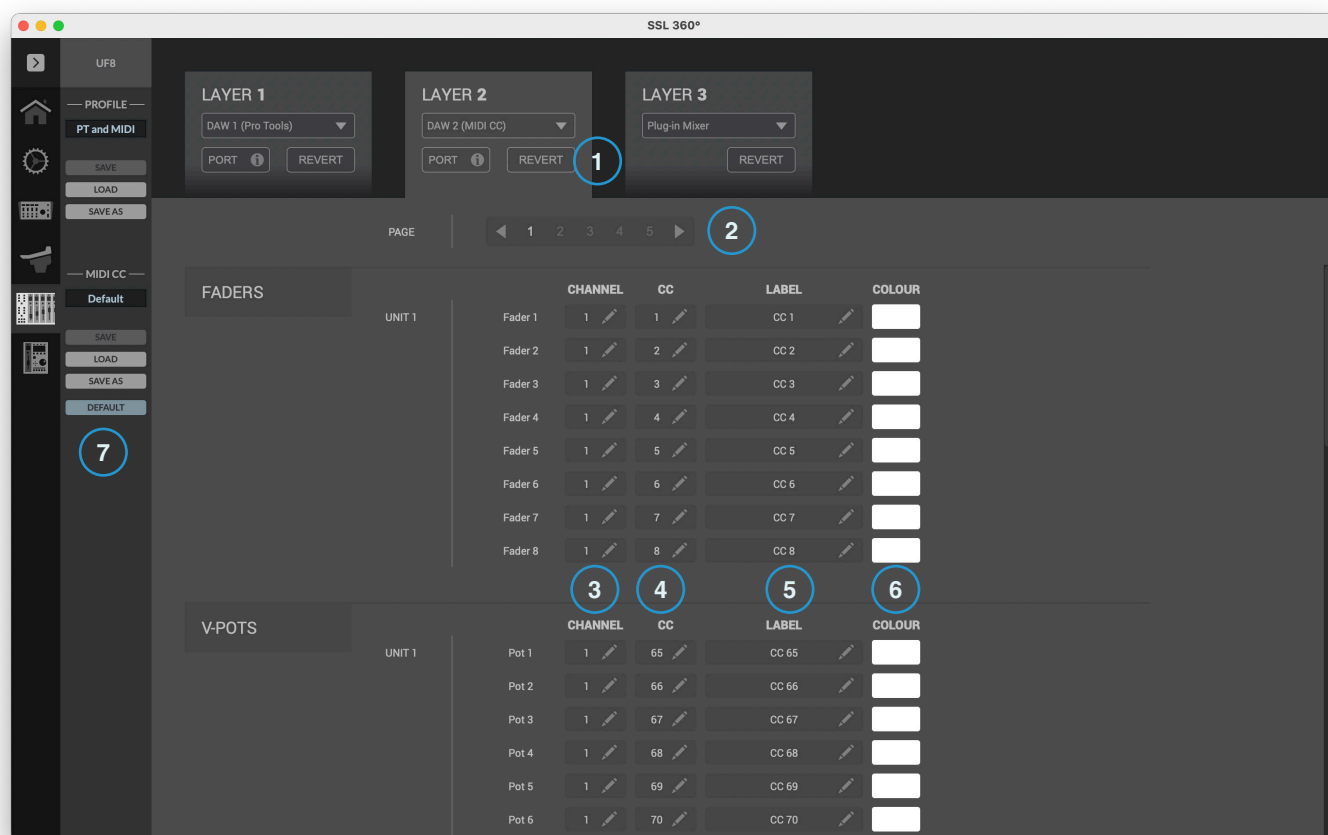

1 - REVERT

Reverts the CC mapping to the default state.

2 - MIDI CC Page/Bank

Determines which page of MIDI CC functions are being edited. There are 5 pages in total.

3 - MIDI CC Channel

Determines which MIDI Channel the CC is sent on. Type a number between 1 and 16 here.

4- MIDI CC Number

Determines which MIDI CC is sent. Type a number between 0 and 127 here.

5 - Label

Allows you to label the MIDI CC. The label is displayed on the UF8 LCDs.

6 - Colour

Allows you to assign a colour to the MIDI CC and have it represented on the UF8 surface(s). Colours for fader CCs are represented on the **SEL** keys. Colours for V-Pots are shown only when the V-Pots are flipped to the faders (in the same way). Soft Key switches are represented by the lighting of the button itself.


7 - MIDI CC Save/Save As/Load/Default

Allows you to save/load customised MIDI CC name/labels, colours and MIDI CC values. The name of the currently active profile is shown above these buttons. If you have made any changes to the saved profile, then '**Unsaved Changes**' will show above the **SAVE** button. The **DEFAULT** button reverts the MIDI CC name/labels, colours and MIDI CC values to their default (uncustomised) settings.

Foot-Switches

The foot-switches can also be assigned CCs.

Each Page/Bank allows you to configure different CCs, giving you a total of 10 different footswitch CCs per UF8 (2 x 5).

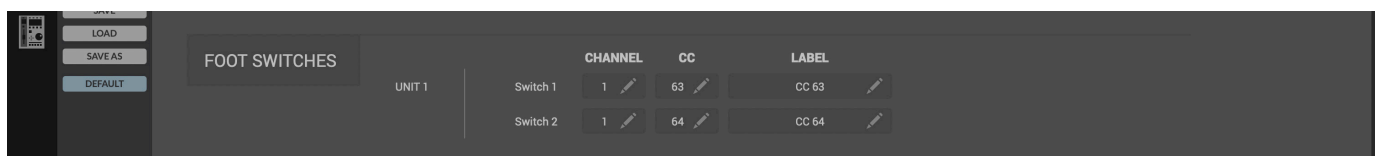

Program Changes


You can configure program change messages to be triggered from the **SEND/PLUG-IN 1-8** Keys on UF8.

Each Page/Bank allows you to configure up to 8 program changes, giving you a total of 40 program change messages per UF8 (8 x 5).

You can assign each key a colour also.



LCD Layout

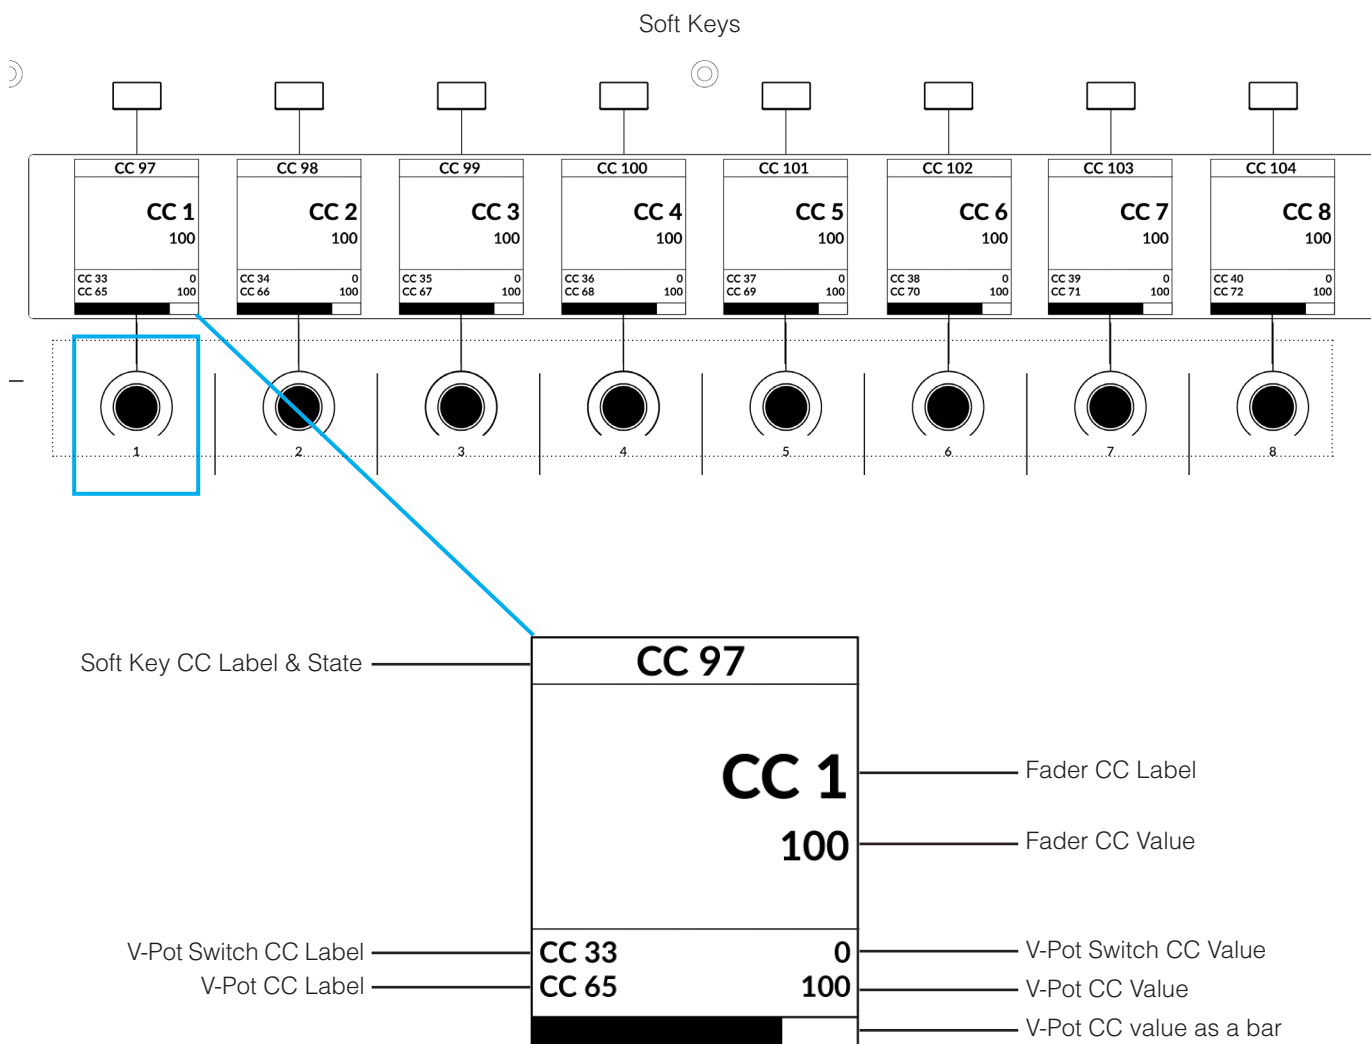

Soft Key CC Label & State - Soft Key CC label is shown at the top of the screen. State is indicated by the background fill (on/off).

Fader CC Label - Fader CC label is shown here.

Fader CC Value - Current Fader CC value is shown here.

V-Pot Switch CC Value - V-Pot Switch CC value is shown here.


V-Pot CC Value - V-Pot CC value is shown here.

V-Pot CC Value as a bar - V-Pot CC value represented as a bar that fills from left to right here.

V-Pot Switch CC Label - V-Pot Switch CC label is shown here.

V-Pot CC Label - V-Pot CC Label is shown here.

Hardware Layout

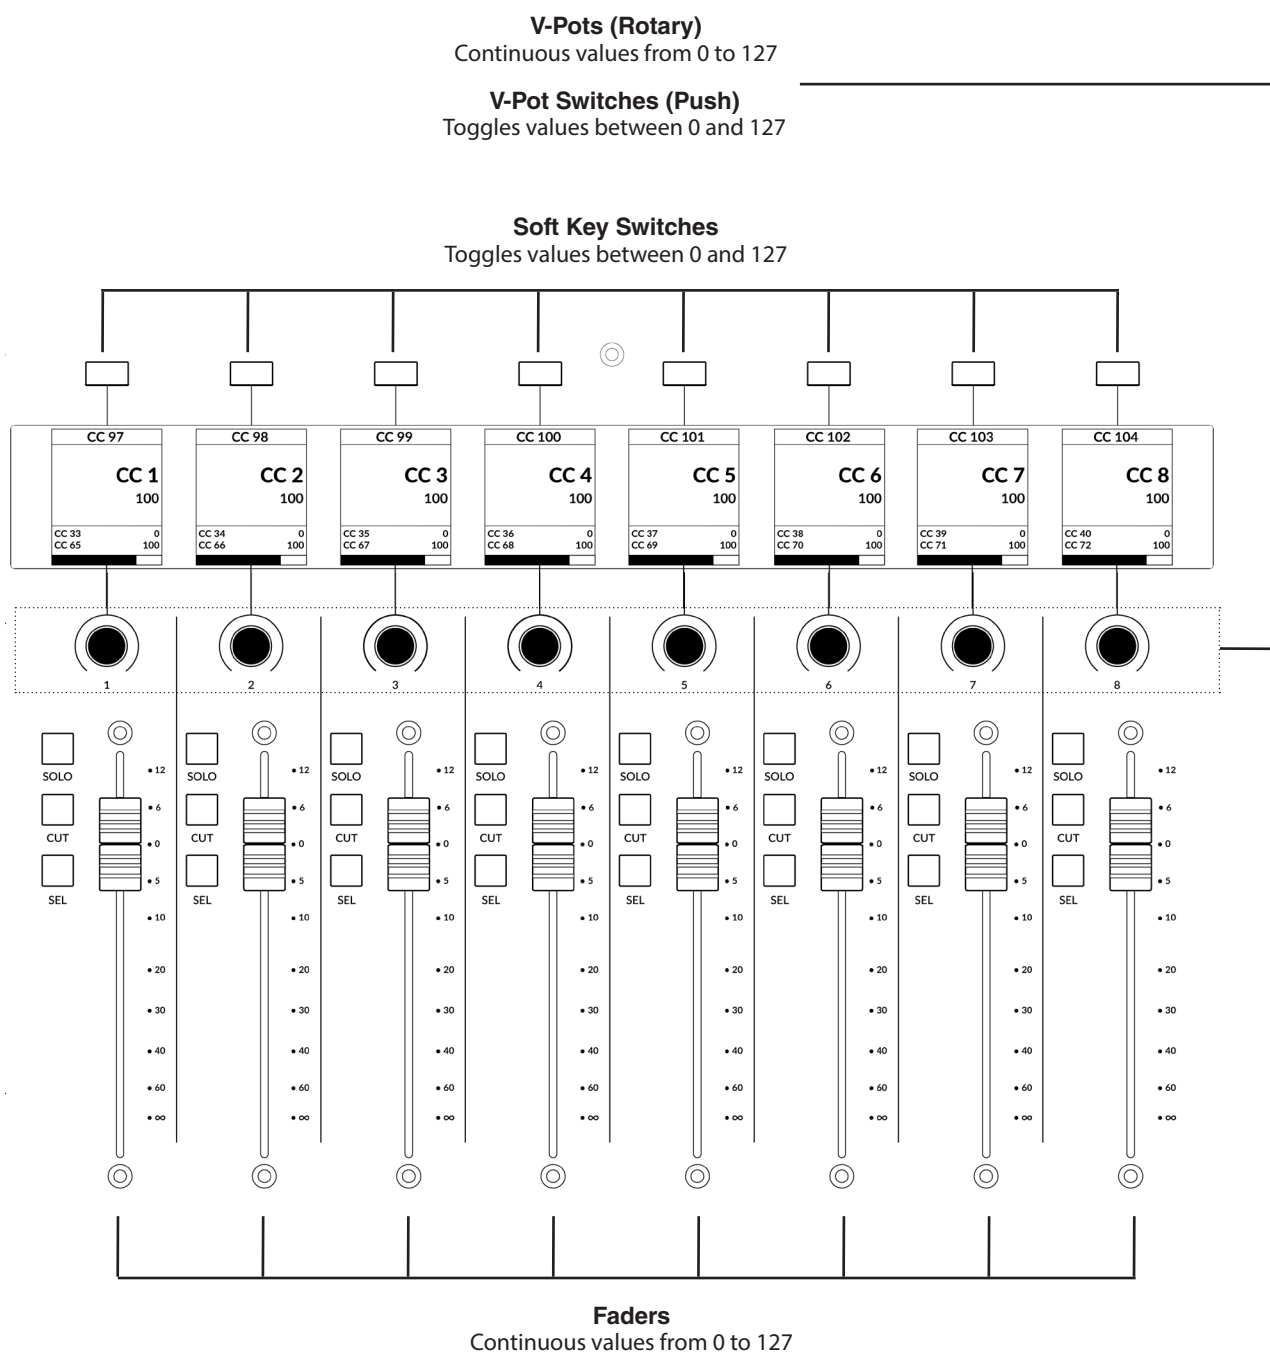

Soft Keys

The Soft Key 1-5 switches provide access to 5 Pages/Banks of MIDI CCs across your UF8(s).

Page Keys

The **PAGE** keys provide an alternative way of changing the selected MIDI CC Page/Bank.

FLIP Key

Pressing the **FLIP** key swaps the V-Pots onto the faders and vice-versa.

SEND / PLUG-IN 1-8 Keys

Trigger program changes messages using the **SEND/PLUG-IN 1-8** keys.

Each Page/Bank allows you to configure up to 8 program changes, giving you a total of 40 program change messages per UF8 (8 x 5).

Each switch can be assigned a colour which will show in full brightness when pressing and remain backlit in the same colour when not being pressed.

Cursor Keys - Transport

The cursor keys are assigned to the DAW's Stop, Play, Rewind, Forward and Record commands.

In order for the **Cursor Keys** Transport and **NAV CHANNEL** encoder (DAW timeline scrolling) functionality to work, you must choose a DAW in the **MIDI CC TRANSPORT LINKED TO** drop-down list on the **CONTROL SETUP** page of SSL 360°.

Assignment of Transport Commands

Down arrow is **STOP**


Up arrow is **PLAY**

Left arrow is **REWIND**




Right arrow is **FORWARD**

Circle Key is **RECORD**.

SOFT KEYS



SEND / PLUGIN

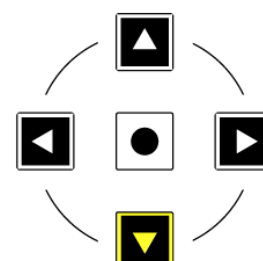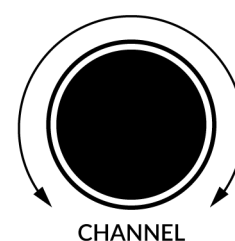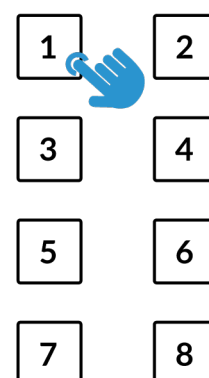


Plug-in Mixer - Tutorial


The following tutorial guides you through configuring and using the Plug-in Mixer profile on UF8.

SSL 360° Setup


1. Open the SSL 360° application on your Mac or Windows computer and on the **HOME** page check that any UF8s you have connected are present - outline images of each UF8 appear on screen.
2. If you have multiple UF8s connected, click down on the outline image of each unit to check that the UF8s are arranged in the correct order. If units need to be re-ordered then click and drag to re-arrange.
3. Go to the **UF8** page and set a Layer to **Plug-in Mixer** using the drop-down list.

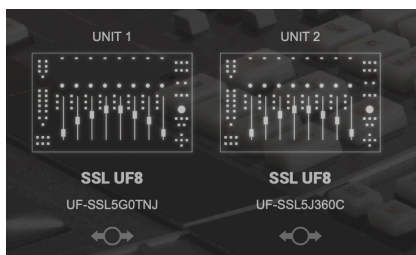

STEP 1 : Open SSL 360° application.
Connected UF8s appear on-screen.

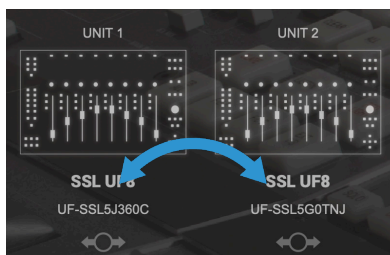


STEP 2 : Click and drag to re-order
units if necessary.

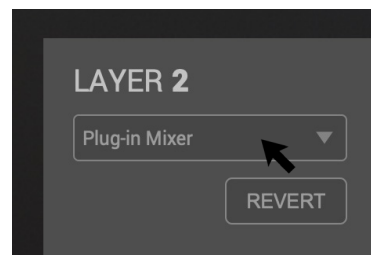

STEP 3 : Select the Plug-in Mixer
profile from the UF8 page.

Plug-in Mixer Setup

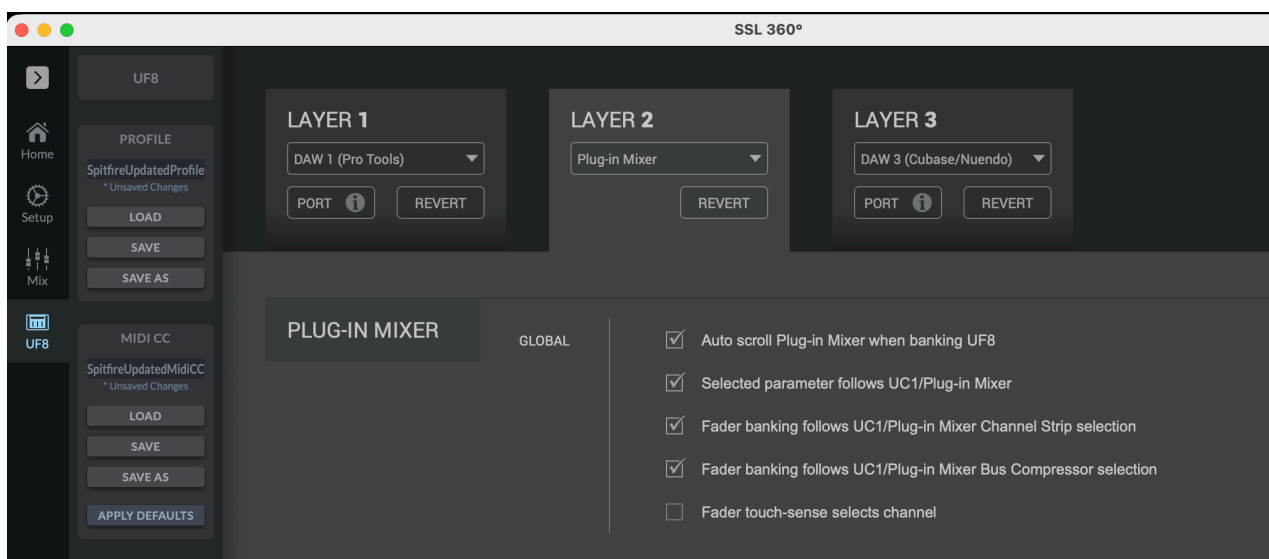

Auto scroll Plug-in Mixer when banking UF8 - With this mode enabled, the Plug-in Mixer GUI in SSL 360° will automatically horizontally scroll left and right to ensure you can see the channel strips you are controlling on UF8.

Selected parameter follows UC1/Plug-in Mixer - With this mode enabled, the channel strip or Bus Compressor parameter assigned across the V-Pots will automatically change in response to the parameter being moved/actioned in the Plug-in Mixer, on UC1 or in the plug-in itself. e.g. if you move the LMF Frequency control in any of these places, UF8's V-Pots will automatically switch to control that parameter.

Fader banking follows UC1/Plug-in Mixer Channel Strip selection - With this mode enabled, the bank of faders UF8(s) is focused on will automatically bank to include the 360-enabled channel strip plug-in that is being selected in the Plug-in Mixer or that is being opened in the DAW, if it is not already visible on the UF8 surface.

Fader banking follows UC1/Plug-in Mixer Bus Compressor selection - With this mode enabled, the bank of faders UF8(s) is focused on will automatically bank to include the 360-enabled bus compressor plug-in that is being selected in the Plug-in Mixer or that is being opened in the DAW, if it is not already visible on the UF8 surface.

Fader touch-sense selects channel - With this mode enabled, touching a fader will select it in the Plug-in Mixer.

Tutorial

This section guides you through using UF8 with the Plug-in Mixer.


Before You Start...

The initial concept behind the control of the Plug-in Mixer from UF8 was focused on extending the functionality of the UC1 controller, by allowing you to access multiple channels of the Plug-in Mixer at once. As such, all V-Pots are assigned **to the same selected parameter**, like looking across a mixing desk with a consistent layout of controls horizontally.

Over time we have developed the capabilities of the Plug-in Mixer Layer on UF8... Now, with compatible DAWs, the Plug-in Mixer also allows for DAW control, providing you have placed 360°-enabled channel strip plug-ins onto each DAW track.




The SSL 360° Plug-in Mixer is a place to view and control 360°-enabled plug-ins. For a more detailed breakdown of every aspect, please refer to the UC1 User Guide. For now, we will highlight the key aspects relating to control of the Plug-in Mixer from UF8.

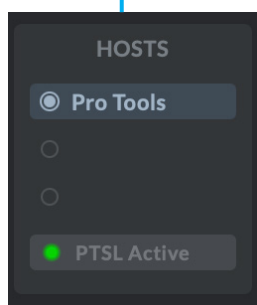

Host

Allows you to switch control between up to 3 different host DAWs that are connected to the Plug-in Mixer. When channel strip and/or bus compressor plug-ins are inserted in your DAW, they trigger that DAW to come online as a HOST in the Plug-in Mixer. Clicking on the appropriate HOST button will switch the Plug-in Mixer (and UF8) to control that DAW. When using UF8 with Pro Tools from SSL 360° v2 onwards, some additional status information about the connection between SSL 360° and PTSL is shown. PTSL enables UF8 access to track colours, ordering, selection and solos and mutes from Pro Tools. If Pro Tools is open but the connection to PTSL is not working/has failed, then this area will turn into a 'Restart PTSL' button with a red indicator. The button allows you to manually restart the connection between SSL 360° and PTSL. Otherwise, this area it will show a green indicator 'PTSL Active' to indicate the connection is working as expected. Or, it will indicate it is in the process of connecting, with an orange indicator.

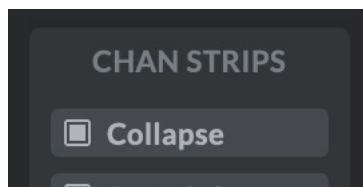

CHAN STRIPS

Collapse

In the left-hand menu of the Plug-in Mixer there is an option called 'Collapse'.

When you have multiple 360°-enabled channel strips on the same DAW track, the Collapse feature allows you to collapse them down to view one channel strip at a time. UF8 will respect this setting and when Collapse is enabled, non-pinned channel strips instances will be hidden on UF8, until Collapse is disabled in the Plug-in Mixer.

Accessing Channel Strip Mode, Bus Compressor Mode, Metering


Unlike the DAW profiles, the three **QUICK** keys located at the top-left of UF8 are not user-definable when UF8 is set to control the Plug-in Mixer. Instead they always perform the following functions:

Default Quick Key Assignments:


1 - Channel Strip Mode - UF8 controls 360°-enabled channel strips (or 360 Link hosted plug-ins) in the Plug-in Mixer

2 - Bus Compressor Mode - UF8 controls bus compressors (or 360 Link Bus Compressor plug-ins) in the Plug-in Mixer

3 - Toggles channel strip plug-in metering on UF8 between Input and Output metering.

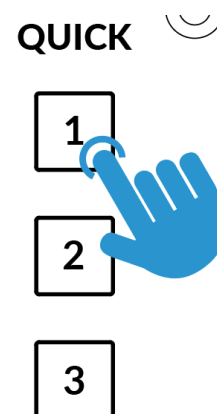

LCD Layout - Channel Strip Mode

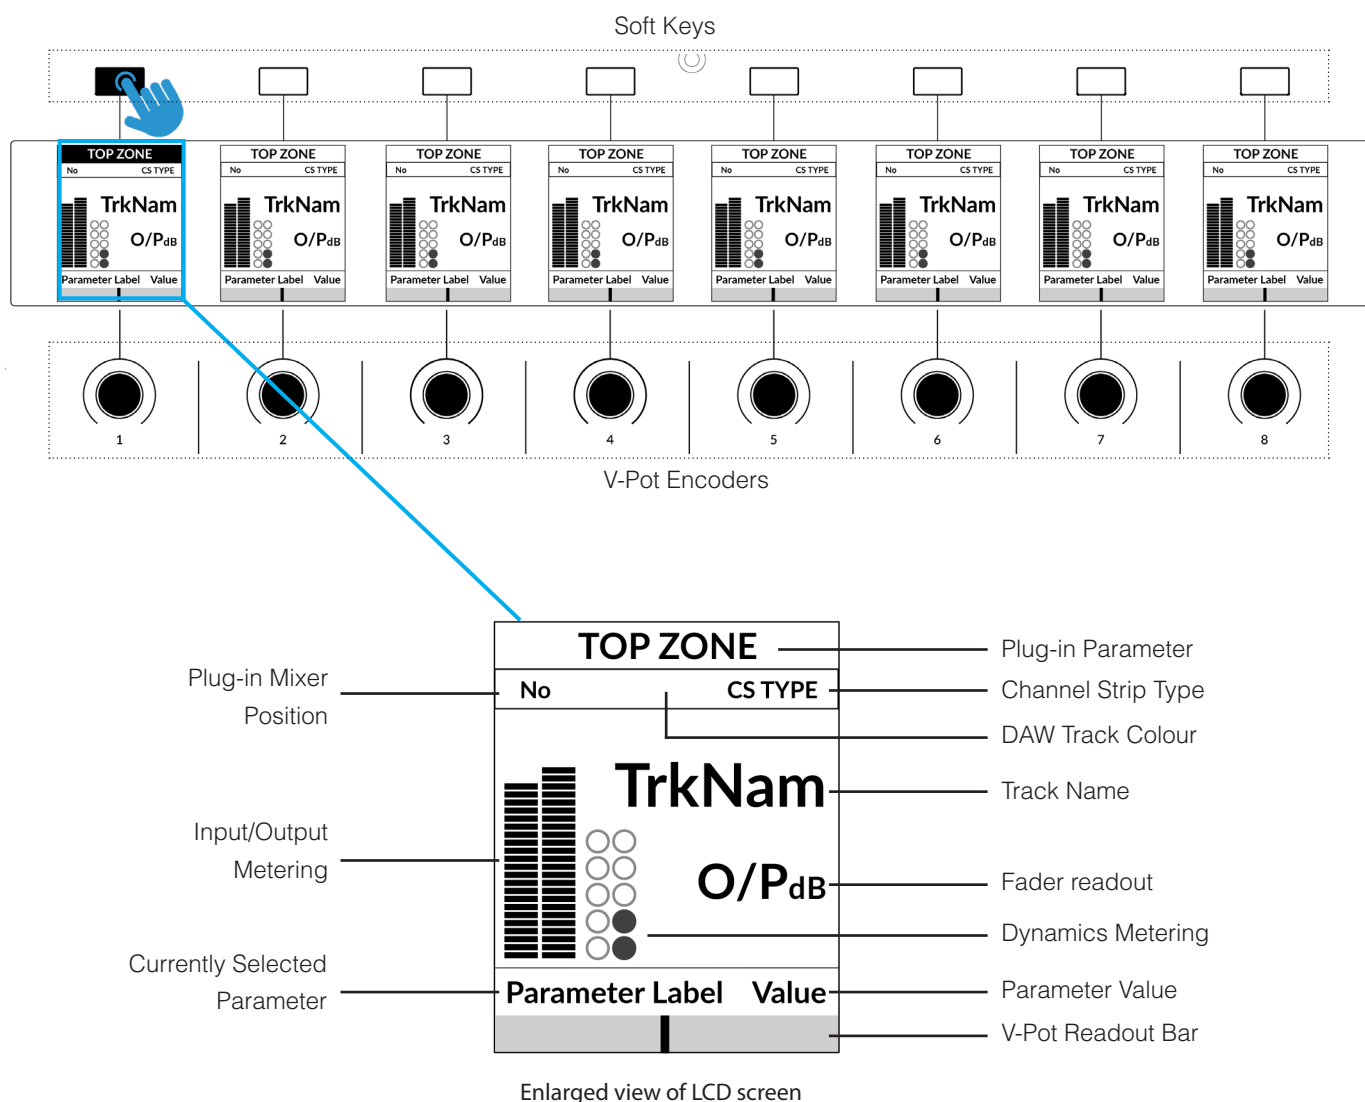

Top Zone - Provides a label for the function assigned to the Soft Key button directly above. In the case of the Plug-in Mixer, these Soft Keys are used to select the channel strip plug-in parameter that gets assigned to the V-Pots.

Plug-in Mixer Position - Displays the position of the channel strip plug-in in the Plug-in Mixer.

Channel Strip Type - Displays the type of 360°-enabled channel strip - e.g. CS 2, 4K B, 4K E, 4K G, 32C. Displays the hosted 3rd party plug-in name when using 360 Link.

DAW Track Colour - The colour of the DAW track is displayed here for compatible DAWs.

TrkNam - Displays the DAW track name that the plug-in is inserted on in the DAW.

O/P_{dB} - Displays the fader readout which is either the fader in the channel strip plug-in or the DAW fader (compatible DAWs).


Input/Output Metering - Displays the input or output metering of the plug-in. Can be toggled with **Quick Key 3**.

Dynamics Metering - Displays the gate and compressor gain reduction activity from the channel strip plug-in or 3rd party plug-in hosted in 360 Link (if available).

Currently Selected Parameter across the V-Pots - Displays the name of the channel strip parameter currently assigned across the V-Pots.

Value - Displays the value of the currently assigned plug-in parameter on that instance of channel strip.

LCD Layout - Bus Compressor Mode

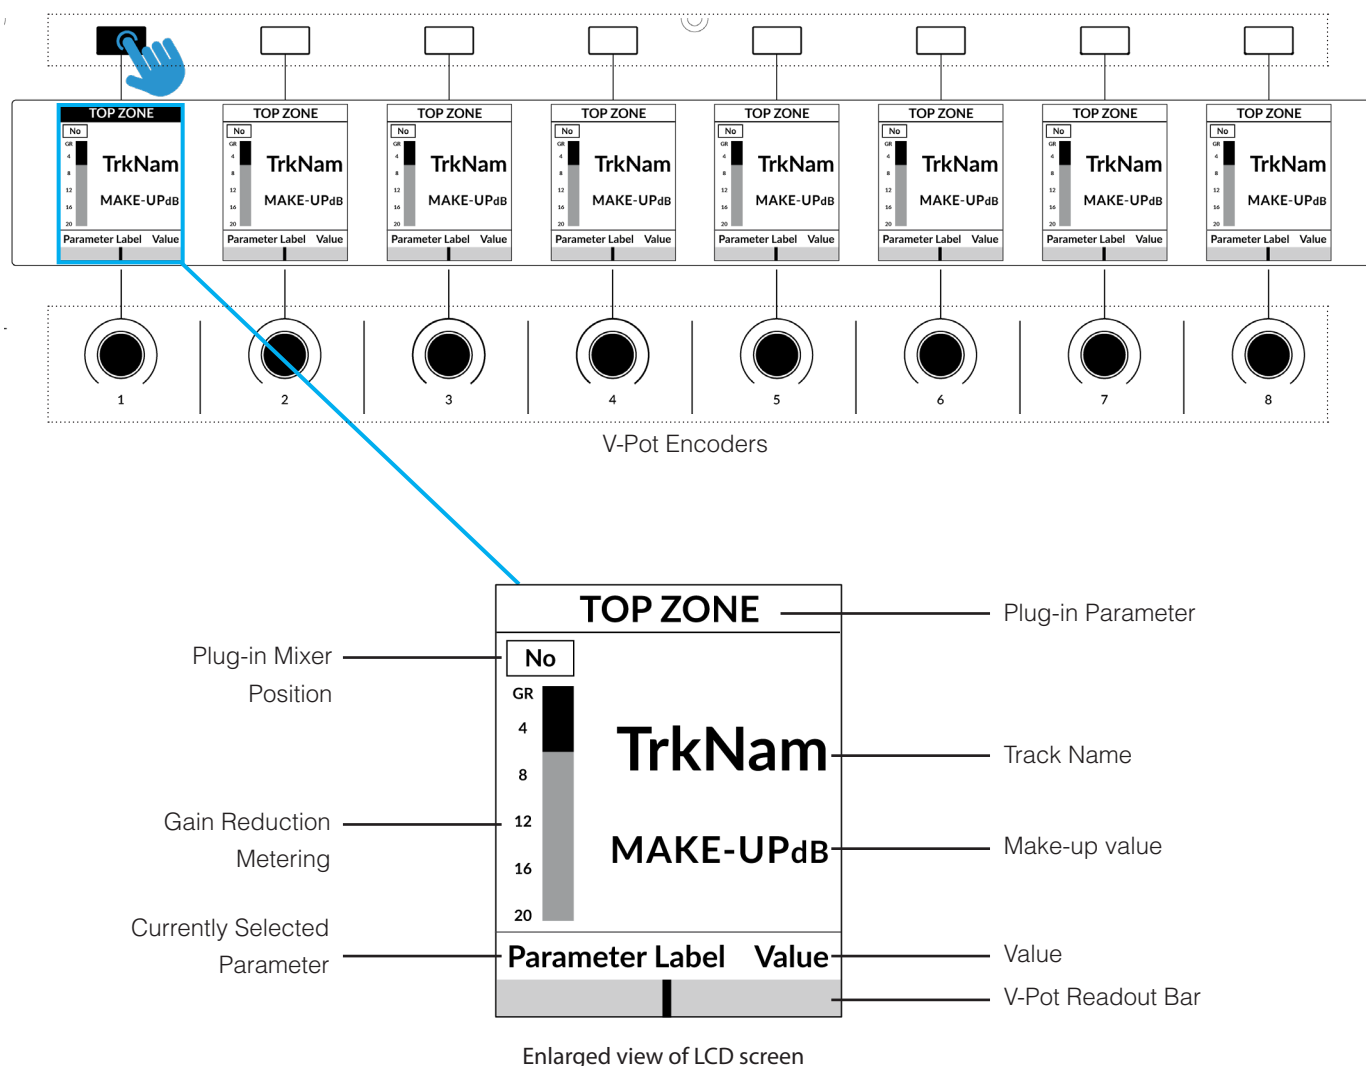

Top Zone - Provides a label for the function assigned to the Soft Key button directly above. In the case of the Plug-in Mixer, these Soft Keys are used to select the Bus Compressor plug-in parameter that gets assigned to the V-Pots.

Plug-in Mixer Position - Displays the slot number to which the Bus Compressor plug-in is assigned to in the Plug-in Mixer.

TrkNam - Displays the DAW track name that the plug-in is inserted on in the DAW.

MAKE-UPdB - A readout of the Bus Compressor **MAKE-UP** Gain parameter.

Gain Reduction Metering - Displays the amount of gain reduction being applied by the Bus Compressor plug-in or 3rd party plug-in hosted in 360 Link Bus Compressor (if available).

Currently Selected Parameter across the V-Pots - Displays the name of the Bus Compressor parameter currently assigned across the V-Pots.

Value - Displays the value of the currently assigned plug-in parameter on that instance of the Bus Compressor.

Logic Pro Enhanced DAW Control Integration

Features

As of SSL 360 v2.1.12, the 360° Plug-in Mixer has enhanced DAW integration with UF8 via OSC. These features include:

- Synchronised Track Selection with Logic Pro
- Track Colours from Logic Pro
- Solo and Mute linked directly to Logic Pro tracks
- Control of Logic Pro Volume Faders and Pans
- Control of up to 8 sends per track (UF8 set to the Plug-in Mixer Layer only).

Installation



- Ensure SSL 360° has been updated to v2.1.12 or higher
- Update your UF8 controller firmware via the HOME page of the SSL 360° application.
- Ensure all your SSL 360°-enabled plug-ins are updated SSL Download Manager, so that they are on the latest versions (and therefore compatible with SSL 360° v2.1.12).

Logic Pro Version

- Ensure you are running Logic Pro 12.
- These new integration features were developed and tested using Logic Pro 12. We cannot guarantee compatibility with previous versions, although these features should work with later versions of Logic Pro 11 - some customers have reported success as far back as Logic Pro 11.2. If you are running an earlier version of Logic Pro, this may be preventing the new integration features from working. Please update Logic Pro if you have tried all the troubleshooting steps without success.

Setup

- Launch Logic Pro.
- You should be greeted with the following OSC pop-up message.
- Click '**Connect**'. [SSLAD10601] will be your computer's name.
- In the **Logic Pro -> Control Surfaces -> Setup...** menu, ensure the newly created SSL 360 OSC Device is positioned beneath your Mackie Control unit(s), like in the image below.

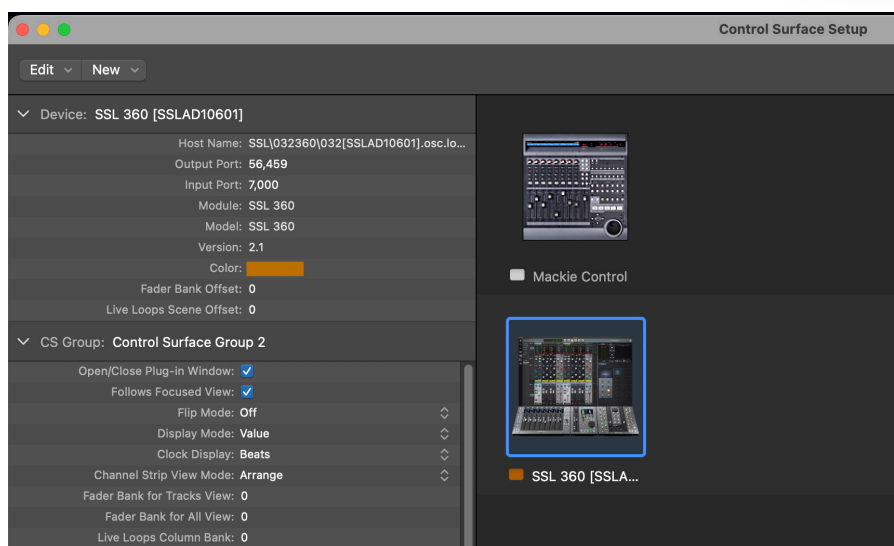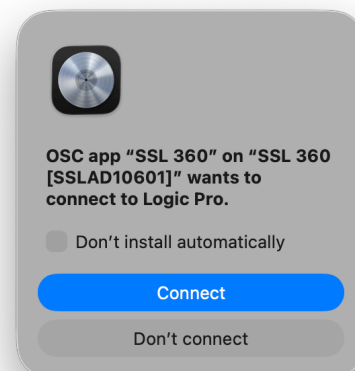


Troubleshooting

If you did not see the OSC pop-up message, asking you to connect, then Automatic Installation might have been switched off.

In the **Logic Pro -> Control Surfaces -> Setup...** menu, click the 'New' dropdown list and tick 'Automatic Installation'. If it is already ticked, try toggling it off and then back on again.

Ensuring that Automatic Installation is now ticked, close Logic Pro and re-open it - the OSC pop-up prompt should now appear.

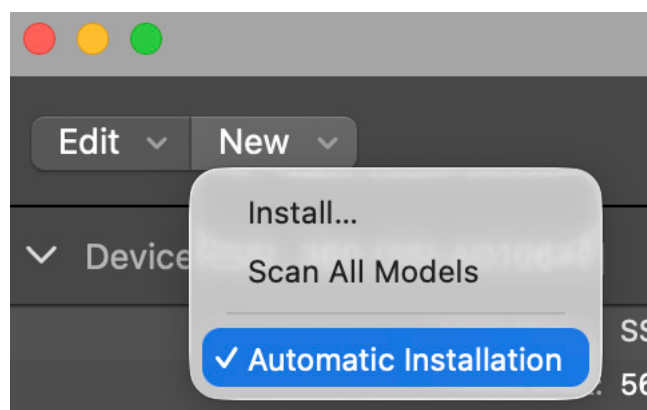

Please note that although you can manually add the SSL 360 OSC device via the 'Install...' menu, this will not work. For the OSC integration to work, it must be automatically discovered by Logic Pro.


Still Not Working?

Other important aspects to check that could be preventing the OSC integration from working:

- [Read this FAQ](#), which is kept up-to-date with more troubleshooting steps to try.
- If you have just updated SSL 360° (and your 360° plug-ins), you might need to try restarting your computer. It should not be necessary but is worth trying in case the SSL360Core did not restart correctly after updating.
- If you have Logic Pro set to automatically launch at login (Login Items & Extensions on your Mac), disable this. Logic Pro (or any DAW), launching before the background SSL360Core service has started running, can lead to issues.

Important - Bus Compressor 2 and 360 Link Bus Compressors on Aux/Bus Tracks

As of SSL 360 v2.1.12 and above, in order for UF8 to see and control your Bus Compressor 2 / 360 Link Bus Compressor plug-ins, you need to right-click on the Aux/Bus track in the Logic Mixer and select 'Create Track'. The same applies for Channel Strips on Aux/Bus tracks!

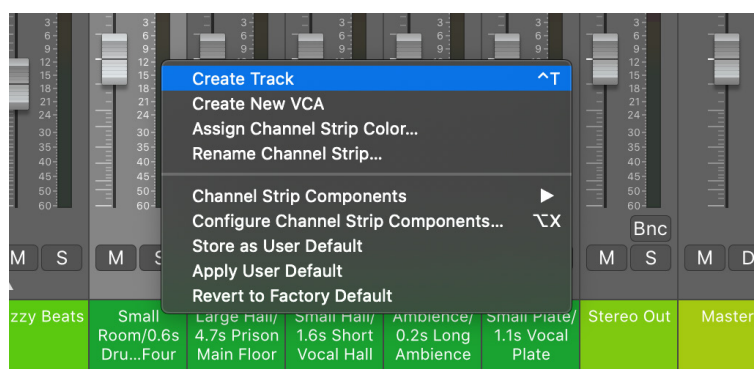

Important Change to Solos and Mutes System

In SSL 360 v2.0.6 and below, the solo and mute system worked in a different way. When you solo'd a 360°-Channel Strip, it muted the outputs of all other channel strips in the Logic Pro session. With SSL 360 v2.1.12, we are now more tightly integrated into Logic Pro and as such, we control the solo and mutes of the Logic Pro tracks themselves.

DAW Control

The Plug-in Mixer Layer features enhanced DAW control for compatible DAWs. DAW control parameters include:

- **Track Volume** - works with all compatible VST3 DAWs and Logic Pro (SSL 360° v2.1 and above via OSC).
- **Pan** - works with all compatible VST3 DAWs and Logic Pro (SSL 360° v2.1 and above via OSC).
- **Send Levels 1-8** - works with all compatible VST3 DAWs, except FL Studio. Also works with Logic Pro (SSL 360° v2.1 and above via OSC).
- **Sends on/off 1-8** - works with Cubase/Nuendo and Logic Pro (SSL 360° v2.1 and above via OSC) only.
- **Synchronised Track Colour** - works with all compatible VST3 DAWs, Pro Tools and Logic Pro (SSL 360° v2.1 and above via OSC).
- **Solo** - works with all compatible VST3 DAWs, Pro Tools and Logic Pro (SSL 360° v2.1 and above via OSC).
- **Solo Safe/Defeat** - works with Cubase/Nuendo only.
- **Solo Clear** - works with all compatible VST3 DAWs, Pro Tools and Logic Pro (SSL 360° v2.1 and above via OSC).
- **Mute** - works with all compatible VST3 DAWs, Pro Tools and Logic Pro (SSL 360° v2.1 and above via OSC).
- **Selected Track** - works with all compatible VST3 DAWs, Pro Tools and Logic Pro (SSL 360° v2.1 and above via OSC).

The current list of compatible VST3 DAWs are listed below. More DAWs may be added in the future.


- Cubase/Nuendo
- Live
- Studio Pro/One
- REAPER
- LUNA
- Bitwig Studio
- Digital Performer
- FL Studio
- Mixbus 11 or higher

Plug-in/DAW (VST3 DAWs and Logic Pro)

The **PLUGIN** button allows you to toggle between controlling the 360°-enabled channel strip's output fader and pan or the DAW's volume fader and pan.

When the **PLUGIN-IN** button is not lit, you are controlling the DAW.

The **PLUGIN-IN/DAW** function can also be switched from the SSL 360° Plug-in Mixer software.

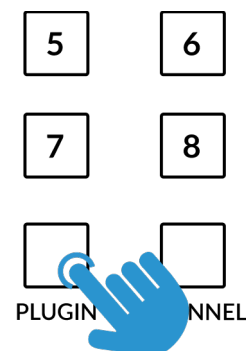

PLUG-IN mode (control the output faders and pans of the 360°-enabled channel strips)

Pan

Assigns the pan control to the V-Pot. As described above, the state of the **PLUGIN** key determines if you are controlling the pan of the plug-in or the DAW track pan. A push on the V-Pot will centre the pan control.



DAW mode (control the DAW track faders and pans)


Sends 1-8 Level Control (VST3 DAWs and Logic Pro)

The **SEND/PLUGIN 1-8** buttons allow you to control DAW send levels 1-8. Simply press the desired number to control that send across the V-Pots.

You can of course flip the sends to the faders using the **FLIP** button.


To return the V-Pots to control another parameter (e.g Pan, or any other channel strip parameter), press the send number key again.

SEND / PLUGIN

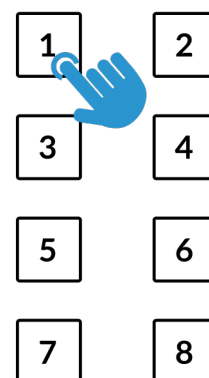


Sends 1-8 On/Off (Cubase/Nuendo & Logic Pro only)

You can also turn the sends on/off via the top row of Soft Keys, or by clicking the small number underneath the send in the 360° Plug-in Mixer.

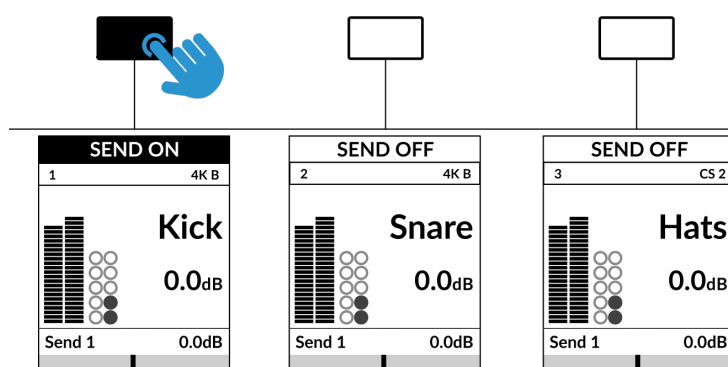


General Information Regarding Send Control

- Pushing a V-Pot will default the send to -infinity in Cubase/Nuendo. In Logic Pro it will default the send to 0 dB.
- With Cubase/Nuendo, in the Plug-in Mixer and on the UF8 surface, the send level controls and readouts will always show, regardless of whether there is actually a send present in Cubase/Nuendo. With all other VST3 DAWs, send controls will remain grey and uninteractable with when there is not a send present in the DAW.

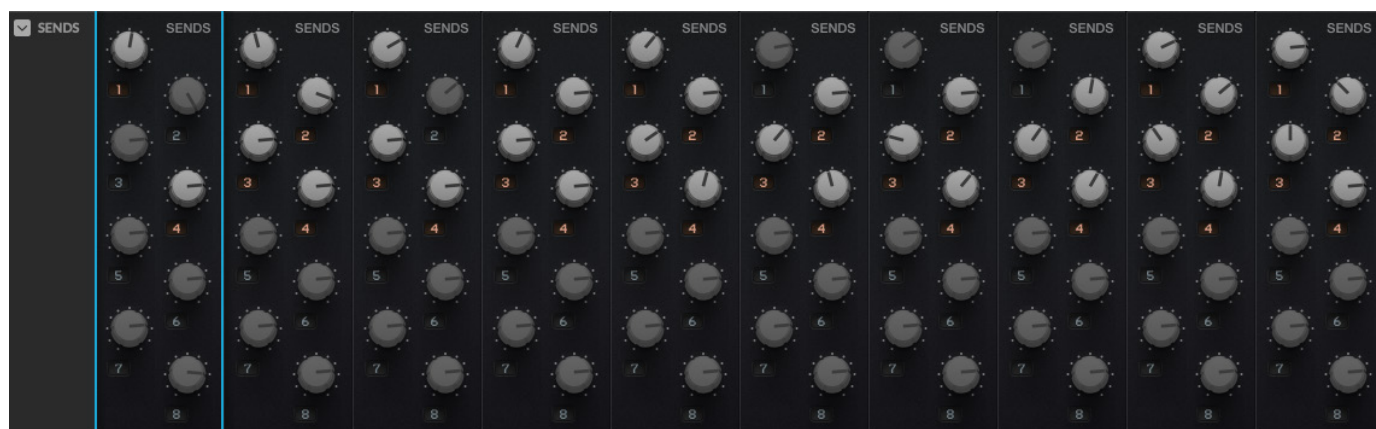

Send controls in the 360° Plug-in Mixer

V-Pots and Fader

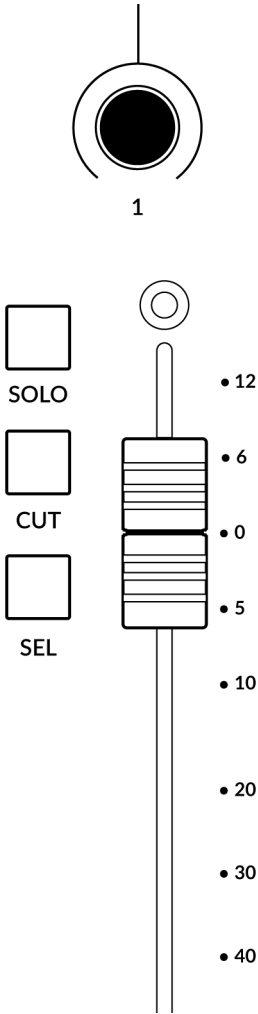

V-Pot

At the top of each strip is the V-Pot (virtual pot). The function of the V-Pot varies, depending on which V-Pot assignment mode is currently active. The V-Pot has a push function, which is used for defaulting the position of the parameter being controlled.

100 mm Motorised Fader

By default the faders are assigned to the **OUTPUT FADER** in Channel Strip Mode or the **MAKE-UP** Gain in Bus Compressor mode. However, any parameter that is assigned to the V-Pots with continuous control (i.e. not switch functions) can be flipped onto the fader with the **FLIP** key. In compatible DAWs, the fader can be switched to control the DAW volume fader, using the **PLUG-IN/DAW** toggle button.

Solo, Cut & Sel (Select)

Each strip contains **SOLO**, **CUT** and **SEL** keys. **SOLO** and **CUT** keys control Solo and Cut buttons in the 360°-enabled channel strip plug-in. In some DAWs, the **SOLO** and **CUT** buttons directly control the DAW's Solo and Mute buttons. In others, the soloing system is independent.

SOLO AND CUT linked to DAW	SOLO AND CUT independent of DAW
Pro Tools* (SSL 360 v2.1 and above) Logic Pro (SSL 360 v2.1 and above) Live Studio Pro/One REAPER Cubase/Nuendo LUNA Bitwig Studio Digital Performer FL Studio Mixbus 11 and above	 Pro Tools (SSL 360 v2.0 and below) Logic Pro (SSL 360 v2.0 and below)

**Also requires Pro Tools 2025/2026 and above.*

For DAWs whereby the **SOLO** and **CUT** integration is independent (not linked to the DAW), this is how it works:

- **SOLO** - Cuts the output of all other channel strip plug-ins in the session.
- **CUT** - Cuts the output of the channel strip plug-in.

SEL

The **SEL** key selects the track in the Plug-in Mixer, as well as the track in the DAW.

Selection Mode

The primary purpose of the **NORM** and **REC** keys in the **SELECTION MODE** section is to determine the behaviour of the **SEL** keys.

NORM - The **SEL** keys function as described above.

REC - N/A

AUTO - N/A

SELECTION MODE



The secondary labels **CLEAR** and **ZERO** refer to the push and hold functions available:

CLEAR SOLOS/MUTES - Press and hold the **CLEAR** key and press any active **SOLO** key to clear all channel strip Solos. Press and hold the **CLEAR** key and press any active **CUT** to clear any channel strip Cuts.

DEFAULT PARAMETER ASSIGNED TO THE FADER - Press and hold the **ZERO** key and press any **SEL** key to default the parameter that is being controlled across the faders on that track.

Bank Keys

The **BANK < >** keys allow you to move channel strips across your UF8 control surface(s) in multiples of 8, depending on how many UF8s are connected.

Page Keys

The **PAGE** keys provide an alternative way of changing the selected **SOFT KEY** bank.



FINE Key

When **FINE** is held, the gearing of the V-Pots is altered to allow for a finer resolution of whatever parameter is currently assigned to them.



FLIP Key

Pressing the **FLIP** key duplicates the controls that are currently assigned to the V-Pots onto the faders.




V-Pot Assignments

All the parameters of the 360°-enabled channel strip and Bus Compressor plug-ins that are assignable to the V-Pots, can be selected using the Soft Keys along the top of UF8.

Use the **SOFT KEY** bank buttons (**V-POT**, **1**, **2**, **3**, **4** and **5**) to locate the bank that contains the parameter you want to control on the V-Pots and then press the corresponding soft key to assign it to the V-Pots.

Remember, if you have **Selected parameter follows UC1/Plug-in Mixer**, the channel strip or Bus Compressor parameter assigned across the V-Pots will still change automatically in response to the parameter being moved/actioned in the Plug-in Mixer, on UC1 or in the Plug-in itself.

SOFT KEYS

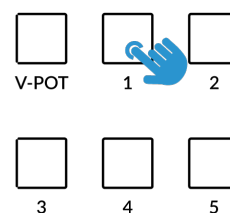

The parameters are spread across the SOFT KEY banks

SOFT KEY Bank Assignments - Channel Strip Mode

Quick Key 1 for Channel Strip Mode

Page	Key 1	Key 2	Key 3	Key 4	Key 5	Key 6	Key 7	Key 8
V-POT	BYPASS	IN TRIM	Ø	PRE	MIC/DRIVE	IMPEDANCE IN	IMPEDANCE	OUT TRIM
1	WIDTH	WIDTH MODE	WIDTH FREQ	HQ MODE	A/B	HIGH PASS	LOW PASS	FILTERS IN
2	LF GAIN	LF FREQ	LF TYPE	LMF GAIN	LMF FREQ	LMF Q	EQ TYPE	EQ
3	HMF GAIN	HMF FREQ	HMF Q	HF GAIN	HF FREQ	HF TYPE	EMPHASIS IN	EMPHASIS
4	COMP RATIO	COMP THRSH	COMP ATK	COMP REL	PEAK/RMS	COMP GAIN	COMP MIX	DYN IN
5	GATE RANGE	GATE THRSH	GATE ATK	GATE REL	GATE HOLD	S/C FREQ	HYSTERESIS	GATE/EXP

SOFT KEY Bank Assignments - Bus Compressor Mode


Quick Key 2 for Bus Compressor Mode

Page	Key 1	Key 2	Key 3	Key 4	Key 5	Key 6	Key 7	Key 8
V-POT	THRESHOLD	ATTACK	RELEASE	RATIO	S/C HPF	MIX	EXT S/C	BUS COMP
1	OUTPUT GAIN	-	-	-	-	-	-	-


Hybrid Mode - Tutorial

'Hybrid Mode' is the term used to describe being able to use your favourite HUI/MCU DAW Commands (Transport, Automation, Locating to Markers etc) or Keyboard Shortcuts whilst UF8 is working in the Plug-in Mixer Layer.

To ensure you can access this functionality, you must configure a DAW in the **CONTROL SETUP** tab of SSL 360° and choose this DAW from the **PLUG-IN MIXER TRANSPORT & HYBRID MODE LINKED TO** drop-down list.

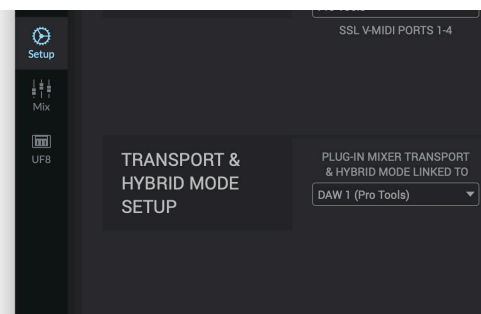

Once you have configured this, head back to the your UF8 setup page and the Layer you have assigned to the Plug-in Mixer. You will see options to configure various key sets (Cursor Keys, Quick Keys, Soft Keys) with their factory Plug-in Mixer functions, or, the option to pull-through the commands from your nominated DAW Layer, which in the example below is DAW 1 Pro Tools (but could be any of your DAW layers).

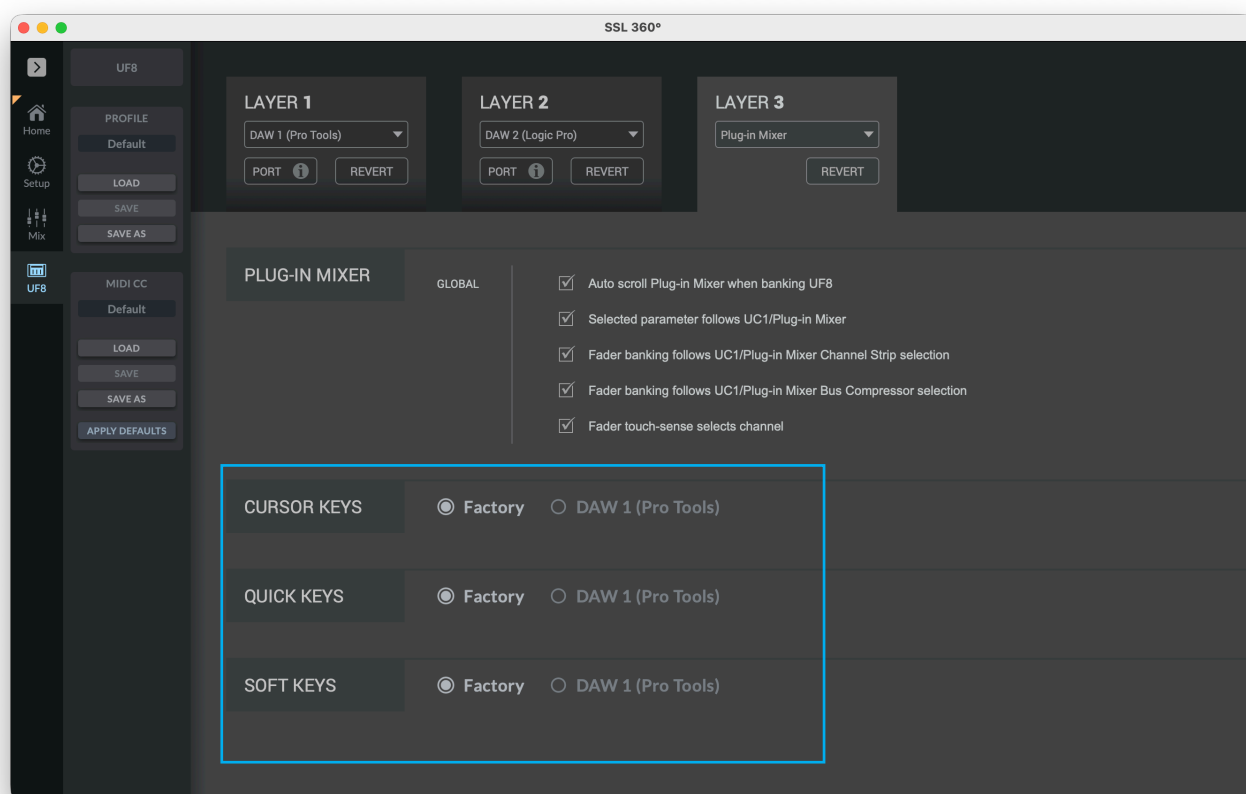

Cursor Keys - Transport

The cursor keys are assigned to the DAW's Stop, Play, Rewind, Forward and Record commands.

Assignment of Transport Commands



Down arrow is **STOP**

Up arrow is **PLAY**

Left arrow is **REWIND**

Right arrow is **FORWARD**

Circle Key is **RECORD**

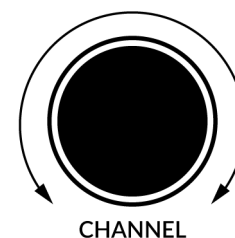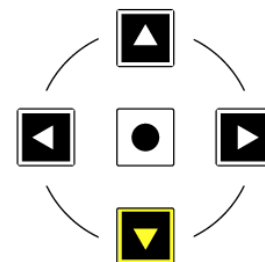

Channel Encoder

By default, the **CHANNEL** encoder is used to move your channel strips across the UF8 surface, banking in increments of 1 channel at a time. The **CHANNEL** encoder can be switched into **NAV** mode to operate the playhead position in the DAW, allowing you to navigate through your session. Or, it can be put into **FOCUS** mode, which emulates a mouse scroll and is handy as a quick way of controlling any plug-in parameter you position your mouse over.


Automation Keys

The Automation Keys from your nominated HUI/MCU DAW layer will be pulled through. These keys will respect your choice of Factory or User mode on your DAW Layer.

In most cases, leaving the Automation Keys in Factory mode will enable you to simply select a channel on UF8 and action the desired automation mode, in the same way you would do on your regular DAW layer. However, there are some caveats to this, depending on the DAW manufacturer's HUI/MCU implementation and therefore please refer to the next page for expected behaviour in different DAWs.

Alternatively, you can use the Automation Keys in User mode, to access any programmable HUI/MCU command or Keyboard shortcuts. For example, moving between markers, turning cycle on/off, click on/off etc. To do this, go to the Layer setup from your nominated DAW Layer and configure the keys in Factory mode as you usually would.

AUTOMATION

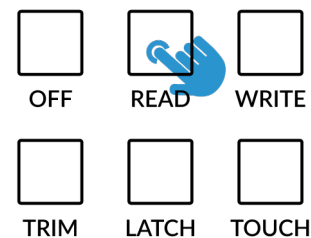

Using the DAW Automation Buttons in Hybrid Mode

Due to the differing HUI/MCU implementations across DAWs, the use of these buttons to put tracks into particular automation modes varies. Here is a summary of the required workflow for each DAW:

Seamless integration:

- Cubase/Nuendo
- Studio Pro/One
- LUNA
- Bitwig
- REAPER

The DAWs above offer the best experience when accessing their DAW automation modes using the Plug-in Mixer Layer. Simply select any track with the SEL key and then action the desired automation mode (e.g. Touch, Write, Latch etc).

Integrates with the following considerations:

The Automation modes can also be used with the DAWs below, but with the following considerations:

Pro Tools - The Plug-in Mixer bank of faders and HUI bank of faders are not synchronised. Automation keys will work but only if the HUI controller bank happens to include the same tracks you are banked to on the regular Pro Tools DAW Layer. If you try to action the automation state on a track that is not in the HUI bank, nothing will happen. To work around this, use your mouse and the 'Scroll into View' shortcut (Shift+Ctrl+Mouse Click) on a track name in the Pro Tools GUI - this ensures the HUI controller bank is lined up beneath the tracks you want to automate on the Plug-in Mixer Layer.

In addition, before you can access the Automation buttons on the Plug-in Mixer Layer for Pro Tools, you need to first put the SEL keys into 'AUTO' mode (SELECTION MODE keys) on the regular HUI Layer, before then switching Layer to the Plug-in Mixer.

Logic Pro - The Plug-in Mixer bank of faders and MCU bank of faders are not synchronised. Automation keys will work but only if the MCU controller bank happens to include the same tracks you are banked to on the regular Logic Pro DAW Layer. If you try to action the automation state on a track that is not in the MCU bank, nothing will happen. To work around this, simply mouse click the track you want to automate in the Logic Pro, so that the MCU controller auto-banks to that track (making sure that 'Control surface follows track selection' is enabled in Logic Pro's General Control Surface Preferences).

Mixbus - The Plug-in Mixer bank of faders and MCU bank of faders are not synchronised. Automation keys will work but only if the MCU controller bank happens to include the same tracks you are banked to on the regular Mixbus DAW Layer. If you try to action the automation state on a track that is not in the MCU bank, nothing will happen. To work around this, you will need to switch the UF8 back to the regular Mixbus control Layer, bank it across to cover the same tracks the Plug-in Mixer is looking at, and then switch back to the Plug-in Mixer Layer.

Not Working:

Digital Performer - Hybrid Mode Automation functions do not work because Digital Performer's MCU layer puts the select keys into a different mode when the automation keys are held, which will not work on the Plug-in Mixer Layer.

UF8 LCD Messages

The LCDs of UF8 show certain information, depending on UF8's status.


Booting / UF8 Identify



This message is displayed when you power up UF8, accompanying the 'fader wave'.


You also see this state when you're clicking to identify UF8s from the **HOME** page of the SSL 360° software.

'Awaiting Connection to SSL 360° Software'

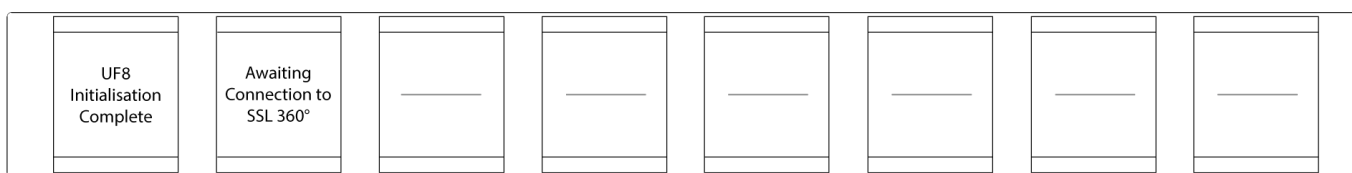


'UF8 Initialisation Complete' means that the UF8 hardware boot sequence has completed. 'Awaiting Connection to SSL 360°' means that UF8 is waiting for the SSL 360° software to start running on the computer. You may see this message appear when logging onto your computer, before the operating system has finished loading your user-profile and start-up items. You may also see this message if you are yet to plug a USB cable from your UF8 into your computer.

'Layer Set To None'

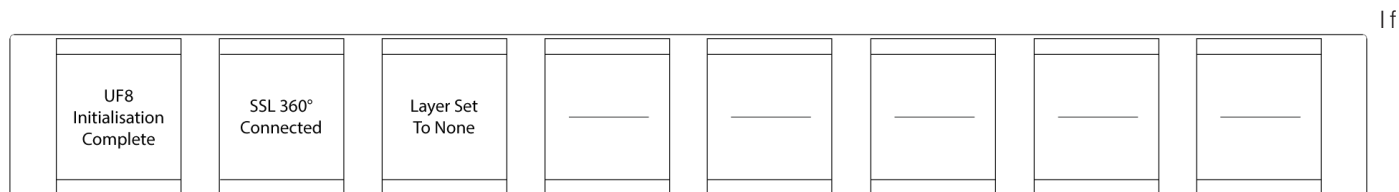


you see this message, you have not yet chosen a DAW profile for the UF8 Layer. Head to the UF8 page and select the DAW you are using from the drop-down list.

'Waiting For DAW' (Pro Tools only)

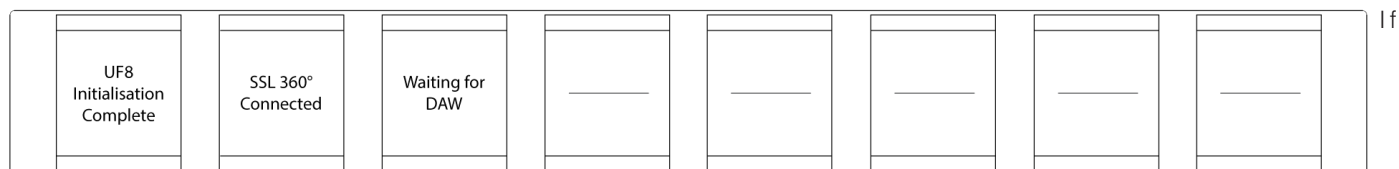

you have configured a Layer for Pro Tools but Pro Tools is closed or you have yet to configure UF8 as a MIDI controller in Pro Tools, then you will see this message.


'SSL 360° Connection Lost. Attempting to Reconnect'

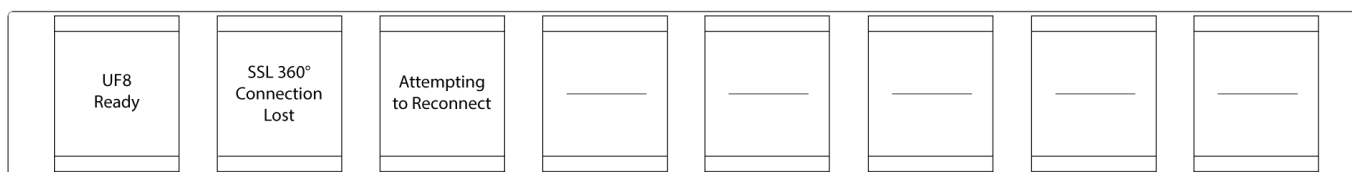


The LCD message above means that communication between SSL 360° and UF8 has been lost. If you experience this, then check that your USB cable connecting UF8 and 360° has not been removed. Re-connect if so.

SSL 360° Software Messages

If the **HOME** page of SSL 360° is displaying the message '**NO DEVICES CONNECTED**', then be sure to check that the USB cable from your computer to the **USB** port on UF8 has not come loose.

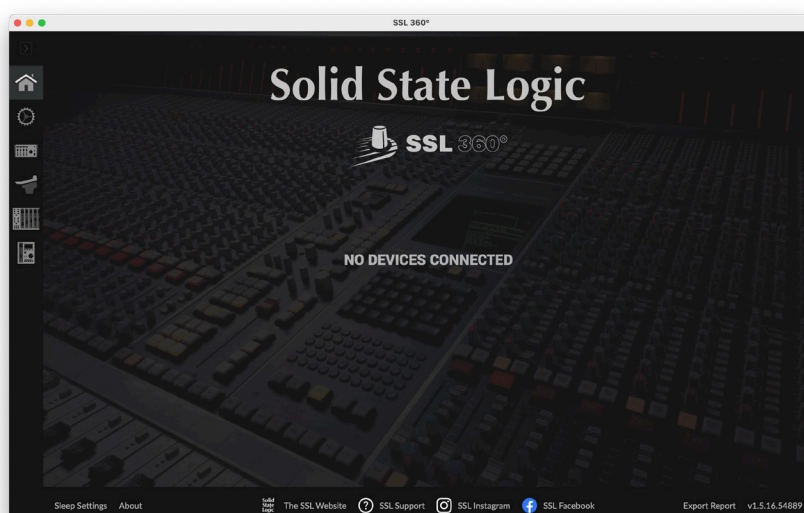


If the **HOME** page of SSL 360° is displaying the message '**SOMETHING WENT WRONG... PLEASE EXIT AND RE-LAUNCH SSL 360°**', then please quit SSL 360° and re-launch. If that does not work then restart your computer.

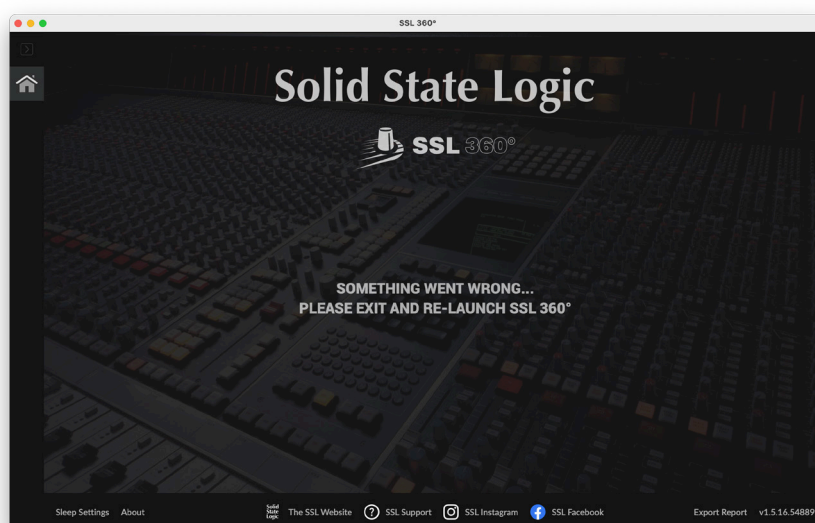

SSL Support - FAQs, Ask a Question and Compatibility

Visit the Solid State Logic Help Centre to check compatibility with your system and find answers to your questions:

www.solidstatellogic.com/support

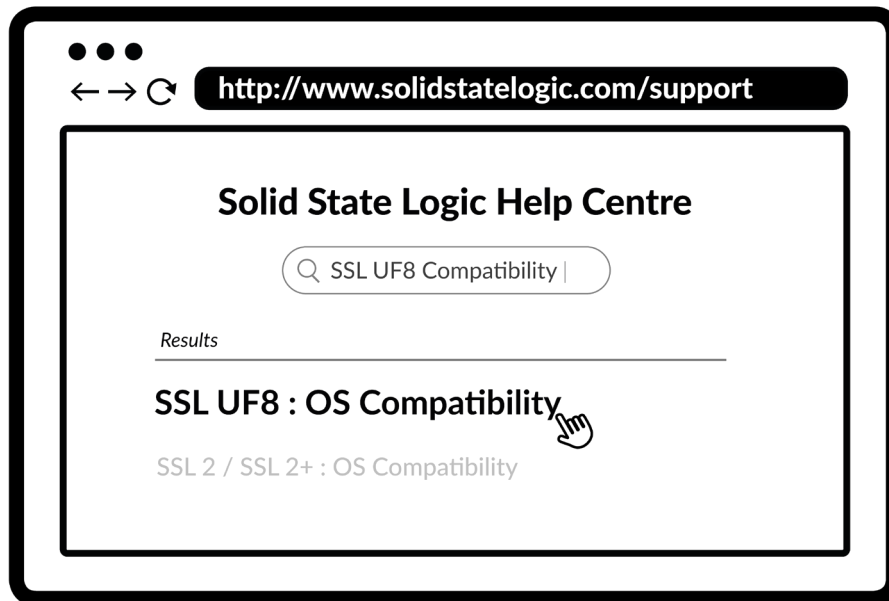

Thank you

Don't forget to register your UF8 for the best possible experience.

www.solidstatellogic.com/get-started

Safety Notices

General Safety

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of an obsolete outlet.
- Protect the adapter and power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use the attachments/accessories recommended by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do NOT modify this unit, alterations may affect performance, safety and/or international compliance standards.
- SSL does not accept liability for damaged caused by maintenance, repair or modification by unauthorised personnel.

Installation Notes

- When using this apparatus place it on a secure level surface.
- Always allow free flow of air around the unit for cooling. We recommend the use of rackmount kit available from SSL.
- Ensure that no strain is placed on any cables connected to this apparatus. Ensure that all such cables are not placed where they can be stepped on, pulled or tripped over.

WARNING: To reduce the risk of fire or electric shock do not expose this apparatus to rain or moisture.

ATTENTION: Afin de réduire les risques de choc électrique, ne pas exposer cet appareil à l'humidité ou à la pluie.

Power Safety

- UF8 is supplied with an external 12 V DC desktop power supply with a 5.5 mm plug to connect to the unit. A standard IEC mains lead is provided to power the DC supply however if you decide to use a mains cable of your choice, bear in mind the following:
 - 1) The adapter power cord should ALWAYS be earthed with the earth on the IEC socket.
 - 2) Please use-compliant 60320 C13 TYPE SOCKET. When connecting to supply outlets ensure that appropriate sized conductors and plugs are used to suit local electrical requirements.
 - 3) Maximum cord length should be 4.5 m (15').
 - 4) The cord should bear the approval mark of the country in which it is to be used.
- Connect only to an AC power source that contains a protective earthing (PE) conductor.
- Only connect units to single phase supplies with the neutral conductor at earth potential.
- Both the mains plug and appliance coupler can be used as the disconnect device, ensure that the mains plug is connected to an unobstructed wall outlet and is permanently operable.

General Safety



ATTENTION! The desktop power supply must always be earthed. Refer to the User Guide for further details.



CAUTION! No user-serviceable parts inside. In the event of damage to the unit or power supply contact Solid State Logic. Service or repair must be done by qualified service personnel only.

CE Certification



UF8 is CE compliant. Note that any cables supplied with SSL equipment may be fitted with ferrite rings at each end. This is to comply with the current regulations and these ferrites should not be removed.

FCC Certification

- Do not modify this unit! The product, when installed as indicated in the instructions contained in the installation manual, meets FCC requirements.
- Important: This product satisfies FCC regulations when high quality shielded cables are used to connect with other equipment. Failure to use high quality shielded cables or to follow the installation instructions may cause magnetic interference with appliances such as radios and televisions and will void your FCC authorisation to use this product in the USA.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following measures:
 - 1) Reorient or relocate the receiving antenna.
 - 2) Increase the separation between the equipment and receiver.
 - 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - 4) Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Compliance

This Class B digital apparatus complies with Canadian ICES - 003.

RoHS Notice

Solid State Logic complies with and this product conforms to European Union's Directive 2011/65/EU on Restrictions of Hazardous Substances (RoHS) as well as the following sections of California law which refer to RoHS, namely sections 25214.10, 25214.10.2, and 58012, Health and Safety Code; Section 42475.2, Public Resources Code.



Instructions for disposal of WEEE by users in the European Union

The symbol shown here, which is on the product or on its packaging, indicates that this product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collection point for recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or where you purchased the product.



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov



i f

Evaluation of apparatus based on altitude not exceeding 2000 m. There may be some potential safety hazard if the apparatus is operated at altitude exceeding 2000 m.



Evaluation of apparatus based on temperate climate conditions only. There may be some potential safety hazard if the apparatus is operated in tropical climate conditions.

Electromagnetic Compatibility

EN 55032:2015, Environment: Class B, EN 55103-2:2009, Environments: E2 - E4.

Electrical Safety: UL/IEC 62368-1:2014.

WARNING: Operation of this equipment in a residential environment could causes radio interference.

Environmental

Temperature: Operating: +1 to 30 degrees Celsius. Storage: -20 to 50 degrees Celsius.

Further information

For additional information, install and user guides, knowledge base and technical support visit www.solidstatelogic.com

